

Epson® SureColor® F9200 User's Guide

Contents

Epson SureColor F9200 User's Guide	7
Introduction to Your Printer.....	8
Notations Used in the Documentation	8
Printer Part Locations	8
Product Parts - Top and Sides	9
Product Parts - Inside	12
Product Parts - Back.....	13
Control Panel Parts	14
Consumables and Replacement Parts	17
Printer Usage Guidelines	18
Using Your Printer	18
Handling Ink Packs and Ink Tanks.....	19
Handling Media.....	20
Storing Your Printer	20
Media Handling	22
Media Handling Precautions	22
Loading Media.....	23
Viewing and Changing Media Settings.....	41
Saving Sets of Media Settings.....	42
Printable Area and Media Size Checking	43
Printing the Amount of Media Remaining	45
Aligning the Print Head.....	46
Adjusting the Media Feed.....	47
Adjusting the Media Feed During Printing	49
Adjusting Heating and Drying During Printing	50
Cutting Media	50
Using the Auto Take-up Reel	53
About the Auto Take-up Reel	54
Attaching the Take-up Roll Core to the Auto Take-up Reel	54
Take Up with the Printable-Side-In	61

Take Up with the Printable-Side-Out	67
Removing Media from the Auto Take-up Reel	73
Using the Control Panel Menus.....	78
Accessing the Printer's Menus	78
Media Setup Menu Settings	78
Printer Setup Menu Settings	83
Maintenance Menu Settings.....	85
Printer Status Menu Settings.....	85
Network Setup Menu Settings.....	86
Preference Menu Settings.....	86
Reset All Settings Menu	87
Maintenance.....	88
When to Maintain Your Product	88
Preparing for Maintenance	90
Maintenance Supplies	90
Maintenance Precautions	92
Cleaning the Front Cover.....	93
Using Ink Cleaner	95
Moving the Print Head for Maintenance.....	96
Stirring High Density Black Ink	97
Replacing the Ink and Chip Unit	101
About Ink and Chip Unit Replacement.....	101
Ink and Chip Unit Precautions	102
Replacing the Chip Unit and Refilling Ink.....	103
Print Head Maintenance.....	116
Checking for Clogged Print Head Nozzles.....	117
Cleaning the Print Head.....	118
Cleaning Around the Print Heads	120
Cleaning the Wipers and Wiper Attachment Points.....	125
Cleaning the Anti-drying Caps.....	129
Cleaning the Platen, Pressure Rollers, and Media Holding Plates	133
Cleaning the Heat Shield.....	136
Replacing the Waste Ink Bottle	138

Replacing the Wiper and Wiper Cleaner	142
Replacing the Media Holding Plates.....	146
Applying Carriage Rod Grease.....	153
Using the Spacer.....	158
Removing the Spacer	158
Adjusting the Spacer	159
Installing the Spacer	160
Storing the Spacer.....	163
Moving or Transporting the Product	164
Prepare to Move the Product.....	164
Removing the Media Guide Bar	165
Setting Up the Product After Moving	170
Attaching the Media Guide Bar.....	171
Solving Problems	178
Product Status Messages	178
Solving Printer Problems.....	181
Printer Does Not Turn On	181
LCD Screen Shuts Off	181
After Heater Shuts Off	182
Forgot the Administrator Password	182
Red Light Shines Inside the Printer	182
Solving Printing Problems	182
Nothing Prints	183
Cannot Print Over a Network.....	183
Print Head Moves But Nothing Prints	184
Media is Creased.....	184
Printing Continues After Media Roll Empties	185
Removing Jammed Media	186
Media Does Not Feed Correctly	189
Solving Media Skew Problems.....	189
Parallel Adjustment Tools.....	190
Adjusting the Media Feeding Unit.....	191
Adjusting the Auto Take-up Reel	203

Solving Print Quality Problems	219
Nozzle Check Pattern Prints Incorrectly	220
Print Head Nozzles Remain Clogged	221
Overall Print Quality Is Poor	222
Printed Media is Stained or Marred	223
Image is not Positioned Correctly on the Media.....	224
Where to Get Help.....	224
Technical Specifications	226
Windows System Requirements	226
Printing Specifications	227
Electrical Specifications	227
Environmental Specifications	228
Dimension Specifications	228
Interface Specifications	228
Ink Pack Specifications	229
Media Specifications	229
Safety and Approvals Specifications	230
Notices	231
Important Safety Instructions.....	231
General Product Safety Instructions	231
Ink Pack Safety Instructions	233
FCC Compliance Statement.....	233
Software License Terms.....	234
Trademarks	241
Copyright Notice.....	242
A Note Concerning Responsible Use of Copyrighted Materials.....	242
Copyright Attribution	243

Epson SureColor F9200 User's Guide

Welcome to the Epson SureColor F9200 *User's Guide*.

Introduction to Your Printer

Refer to these sections to learn more about your printer and this manual.

[Notations Used in the Documentation](#)

[Printer Part Locations](#)

[Consumables and Replacement Parts](#)

[Printer Usage Guidelines](#)

Notations Used in the Documentation

Follow the guidelines in these notations as you read your documentation:

- **Warnings** must be followed carefully to avoid bodily injury.
- **Cautions** must be observed to avoid damage to your equipment.
- **Notes** contain important information about your printer.
- **Tips** contain additional printing information.

Parent topic: [Introduction to Your Printer](#)

Printer Part Locations

Check the printer part illustrations to learn about the parts on your printer.

[Product Parts - Top and Sides](#)


[Product Parts - Inside](#)

[Product Parts - Back](#)

[Control Panel Parts](#)

Parent topic: [Introduction to Your Printer](#)


Product Parts - Top and Sides

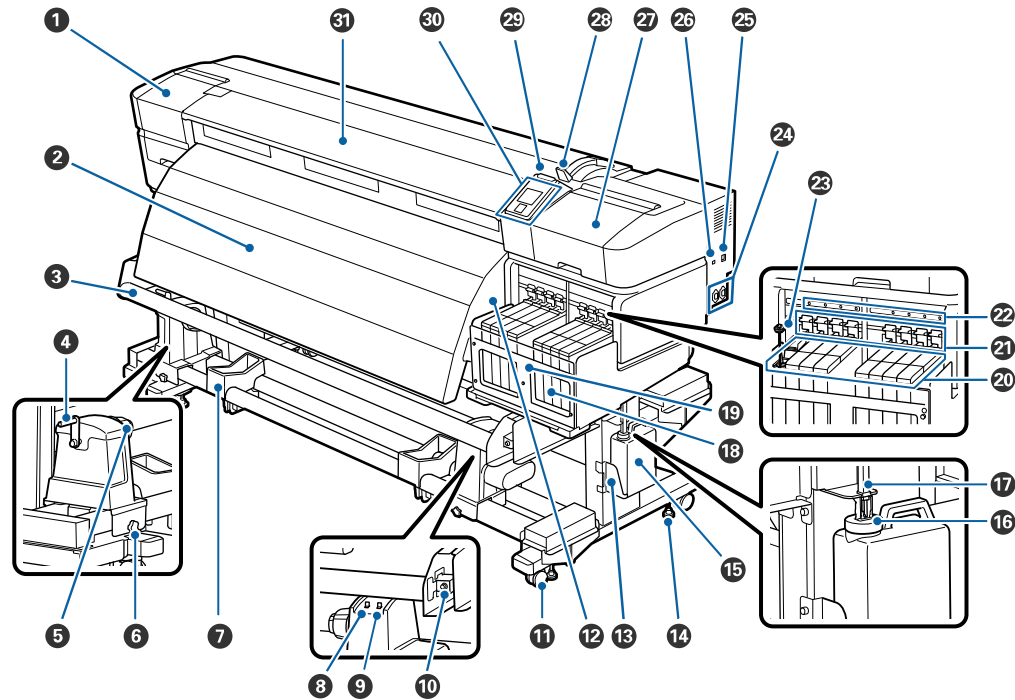

- 1 Maintenance cover (left)
- 2 After heater
- 3 Media guide bar
- 4 Handle
- 5 Roll core holder
- 6 Roll core holder locking screw
- 7 Roll support
- 8 **Auto** switch
- 9 **Manual** switch
- 10 Adjustment screw


- 11 Casters
- 12 Airflow vents
- 13 Waste ink bottle holder
- 14 Stand fixing screw
- 15 Waste ink bottle
- 16 Ink splash guard
- 17 Waste ink tube
- 18 Ink tank
- 19 Heat shield
- 20 Slider (chip holder)
- 21 Lock lever
- 22 Chip unit check lamp
- 23 Stirring stick
- 24 AC inlet #1/AC inlet #2
- 25 LAN port
- 26 USB port
- 27 Maintenance cover (right)
- 28 Media loading lever
- 29 Alert lamp
- 30 Control panel
- 31 Front cover

Slider (Chip Holder) Parts

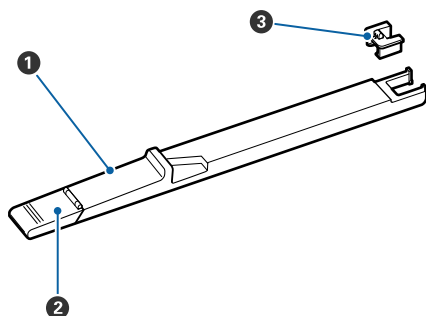

- 1 Slider
- 2 Ink inlet cover
- 3 Chip unit


LAN Port Parts

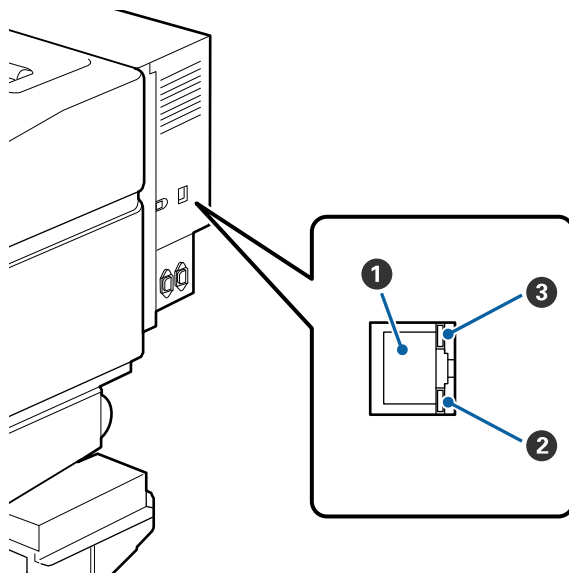

- 1 RJ-45 connector
- 2 Data light (orange)
- 3 Status light
- Red: 100Base-TX
- Green: 1000Base-T

Parent topic: [Printer Part Locations](#)

Product Parts - Inside

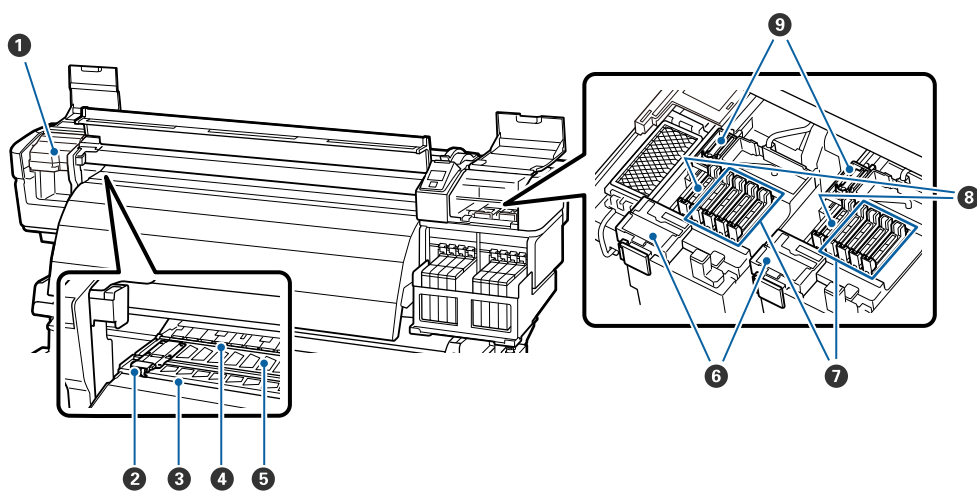


- 1 Print head
- 2 Media holding plate
- 3 Cutter groove
- 4 Pressure rollers
- 5 Platen
- 6 Wiper cleaners
- 7 Anti-drying caps

8 Suction caps

9 Wipers

Parent topic: [Printer Part Locations](#)

Product Parts - Back

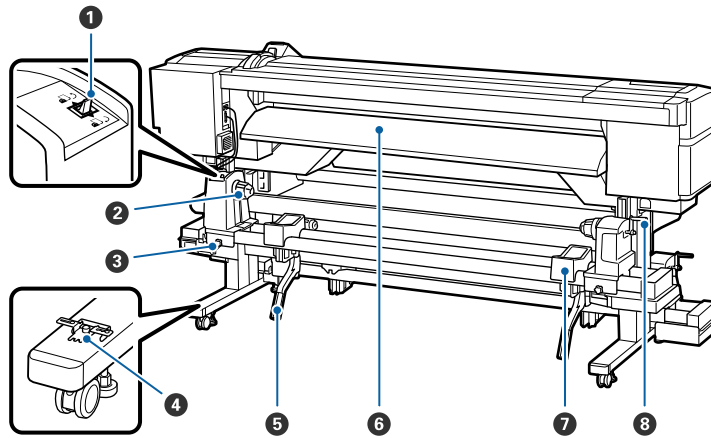

1 Drive switch

2 Roll holder

3 Roll holder fixing screw

4 Spacer

5 Lift lever


6 Loading guide





7 Roll support

8 Handle

Parent topic: [Printer Part Locations](#)

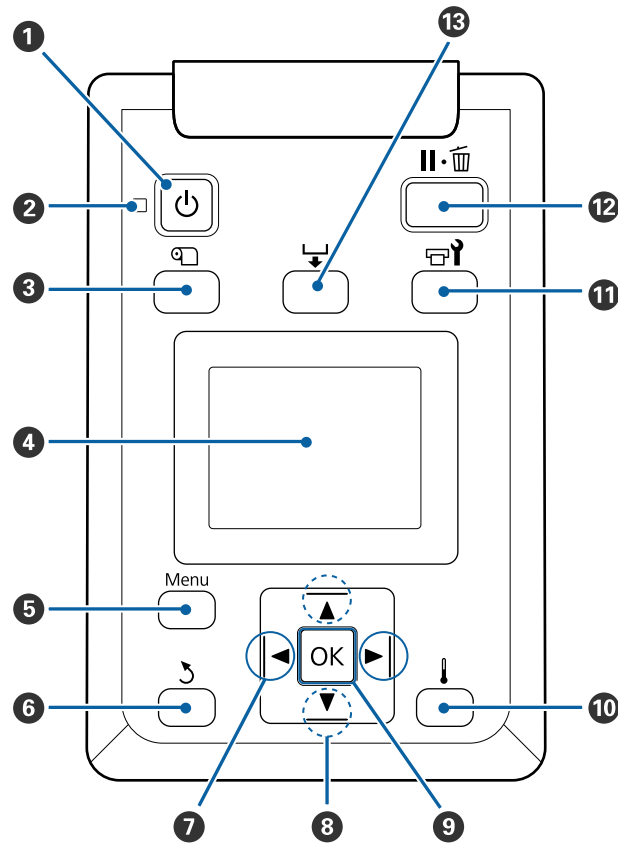
Control Panel Parts








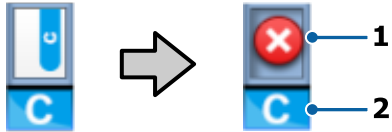


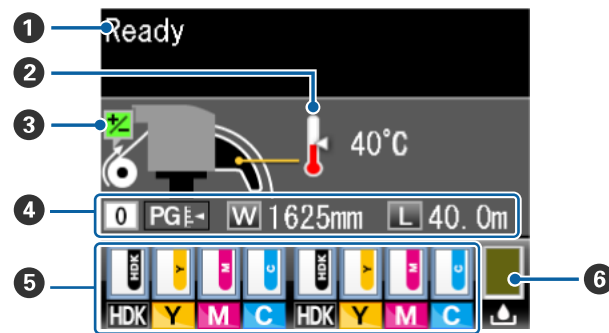

- 1 The  power button
- 2 The  power light
- 3 The  media setup button
- 4 LCD screen
- 5 The **Menu** button
- 6 The  back button
- 7 The left and right arrow buttons





- 8 The up and down media feed buttons
- 9 The **OK** button
- 10 The ↓ heat/dry menu button
- 11 The 🛠 maintenance button
- 12 The ||·🗑 pause/cancel button
- 13 The ⏴ media feed button

LCD Screen Display



1	Status messages
2	Heater temperature status  : Heater is the selected temperature  : Heater has not yet reached the selected temperature
3	Feed adjustment information, if you have entered a value during printing

4	<p>Media information</p> <p>Displays, from left to right, the selected media (0 indicates RIP settings are in use), platen gap, media width, and remaining media.</p> <p>: Platen gap is 1.5</p> <p>: Platen gap is 2.0</p> <p>: Platen gap is 2.5</p>
5	<p>Chip unit status</p> <p>The chip unit status (1) changes from normal (left) to warning or error status (right) if necessary.</p> <div data-bbox="585 561 974 691">  </div> <p>The ink color is shown below (2).</p> <ul style="list-style-type: none"> • HDK: High Density Black • Y: Yellow • M: Magenta • C: Cyan <p>: Chip unit error; check the displayed message and clear the error</p> <p>: Chip unit is incompatible, or the printer does not recognize it, or the slider is unlocked</p> <p>: Check the displayed chip unit message</p> <p>: When not flashing, check the ink level in the ink tank, then replace the chip unit and refill the ink, if necessary. When flashing, replace the chip unit.</p>

6	<p>Waste ink bottle status</p> <p>The waste ink bottle status indicates the waste ink level and changes from normal (left) to warning or error status (right) if necessary.</p> <div style="text-align: center;">   </div> <p> : Waste ink bottle is almost full; prepare a new waste ink bottle</p> <p> : Waste ink bottle is full; replace the waste ink bottle</p>
---	---

Parent topic: [Printer Part Locations](#)

Consumables and Replacement Parts

You can purchase genuine Epson ink packs, paper, and accessories from an Epson authorized reseller. To find the nearest reseller, call 800-GO-EPSON (800-463-7766).

Caution: Using ink from an non-genuine ink pack may result in a malfunction. Epson shall not be held responsible for any damages or problems with the product that may occur when using non-genuine ink packs.

Consumable	Part number
High-Density Black	T741X00
Cyan	T741200
Magenta	T741300
Yellow	T741400

Replacement part	Part number
Maintenance kit	C13S210038

Replacement part	Part number
Waste ink bottle	T724000
Media holding plate	C890891

Parent topic: [Introduction to Your Printer](#)

Printer Usage Guidelines

Follow the guidelines in these sections as you use your printer, consumables, and print media.

[Using Your Printer](#)

[Handling Ink Packs and Ink Tanks](#)

[Handling Media](#)

[Storing Your Printer](#)

Parent topic: [Introduction to Your Printer](#)

Using Your Printer

Follow these guidelines as you use your printer:

- Operate the printer only within the specified operating temperature and humidity range for your product and your media.
- Check to make sure you maintain the specified humidity range, especially in dry areas or air conditioned environments.
- Keep the printer out of direct sunlight.
- Do not install the printer next to heat sources or directly in the path of exhaust from a ventilator or air conditioner. Failure to observe this precaution could result in the print head nozzles drying out and clogging.
- Make sure the product work space is kept free of dust or lint that could damage your product or clog the print head nozzles.
- Use the product in a sufficiently ventilated area.
- When using a commercially available heater, operate it only within the specified temperature range to maintain print quality and prevent clogging the print head nozzles.
- Perform maintenance operations according to usage frequency or at the recommended intervals. Failure to perform regular maintenance could reduce print quality or damage the print head.
- Do not bend or pull the waste ink tube. Otherwise ink may leak inside or outside the printer.

- Be sure that the waste ink bottle is installed whenever the printer is turned on.
- If an error occurs and the printer is turned off without first resolving the error, the print head may not be in the home position, which may cause the print head to dry out. In this case, turn on the power and wait until the carriage is in the home position.
- When the printer is on, do not disconnect the power cable or cut the power at the circuit breaker. The print head may not be in the home position. In this case, turn on the power and wait a while until the print head is in the home position.
- For consistent color, maintain a constant room temperature between 59 °F (15 °C) and 77 °F (25 °C).

Note: To keep the print head in the optimum operating condition, ink is used in maintenance operations such as head cleaning in addition to printing.

Parent topic: [Printer Usage Guidelines](#)

Related references

[Environmental Specifications](#)

Handling Ink Packs and Ink Tanks

Follow these guidelines as you handle the ink packs and ink tanks:

- Do not remove the ink tanks. Ink tanks are calibrated at installation and removing them can decrease their functionality.
- Do not place items on an ink tank or subject the ink tanks to strong impacts or the tank may detach. If an ink tank comes off, contact Epson support.
- Store ink packs at room temperature, out of direct sunlight.
- To ensure print quality, use all the ink in the ink pack before the date printed on the ink pack or within 25 days of refilling the ink tank, whichever is earlier.
- Allow ink packs that have been stored at low temperatures for an extended period of time to return to room temperature over a period of four hours before use.
- Refill the ink tank as soon as possible after opening an ink pack.
- When refilling an ink tank, use all of the ink in the ink pack at once.

Parent topic: [Printer Usage Guidelines](#)

Handling Media

Follow these guidelines as you handle or store media:

- Read and follow the guidelines provided with each type of media.
- Do not fold the media or otherwise damage its printable surface.
- Do not touch the printable surface. This prevents oil from your hands from causing print quality problems.
- When handling media, hold it by both edges, preferably while wearing cotton gloves.
- Keep the media dry and avoid storage locations subject to direct sunlight, excessive heat, and high humidity.
- Retain the media packaging materials so you can use it to store unused media.
- After printing, do not touch, rub, or scratch the printed surface to avoid removing the ink.
- Dry printed media completely before folding or stacking it, or the printed surface may be damaged.
- Keep printed media out of direct sunlight.
- Display and store printed media as instructed in the media documentation.
- When you are not printing on media, remove it from the printer and place it in its original packaging to prevent deterioration.

Parent topic: [Printer Usage Guidelines](#)

Storing Your Printer

Follow these guidelines if you need to store your printer for a long period:

- If the printer is not used for an extended period of time with the power off, clean the print head nozzles. Turn the printer on at least once every two weeks to automatically clean the print head and prevent the nozzles from clogging. If you do not turn on the printer for a long time, the printer may malfunction.
- If you will not use the printer for more than two weeks, maintenance must be performed by a service engineer before and after this period. Contact Epson support.
- Even if the printer is not turned on, ink that has accumulated in the waste ink tube may leak out. Make sure the waste ink bottle is installed even when the printer is not on.
- Remove any loaded media before storing the printer to prevent the pressure rollers from causing creases in the media, which may cause jams or damage to the print head.
- Make sure that the print head is in the home position before storing the printer. If it is left away from the home position for a long time, the print quality may decline.

- Close all the covers on the printer to prevent dust and debris from getting in. If the printer will be not be used for an extended period of time, protect it with an anti-static cloth or other cover. The print head nozzles can become clogged if fine dust gets on the print head, and you may not be able to print properly.
- Store the printer on a level surface; do not store it on angle, on its end, or upside down.

Parent topic: [Printer Usage Guidelines](#)

Related references

[Where to Get Help](#)

Related tasks

[Cutting Media](#)

Media Handling

See these sections to load and handle media on your product.

[Media Handling Precautions](#)

[Loading Media](#)

[Viewing and Changing Media Settings](#)

[Saving Sets of Media Settings](#)

[Printable Area and Media Size Checking](#)

[Printing the Amount of Media Remaining](#)

[Aligning the Print Head](#)

[Adjusting the Media Feed](#)

[Adjusting Heating and Drying During Printing](#)

[Cutting Media](#)


[Using the Auto Take-up Reel](#)

Media Handling Precautions


Follow these guidelines as you load media in your product and remove printed media.

- Be careful when you touch the heaters and media holding plates; they may be hot and could burn you.
- Take care not to trap your fingers when opening and closing the front cover.
- Do not rub your hands along the edges of the media; the sharp edges could cut you.
- Media is very heavy, so use at least two people to carry the rolls.
- Load media just before printing on it to avoid creases from the pressure rollers; creases may cause jams or cause the media to rub against the print head.

- Do not place unwrapped media directly on the floor or press it against your clothing to avoid damaging the media surface.

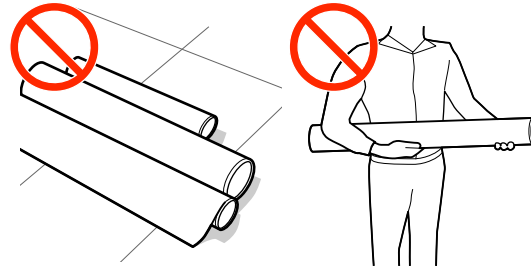

- Place unused media in its original packaging for storage.
- Do not load media if the edges are uneven on the roll; this could cause feeding problems. Rewind the media on the roll or use a different roll.

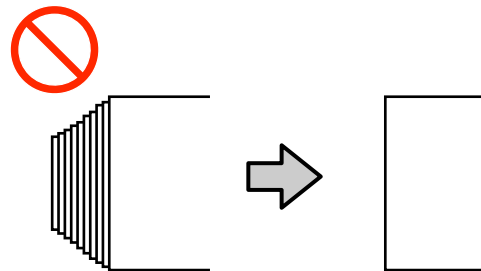


Parent topic: [Media Handling](#)


Loading Media

Before loading media in your printer, review and follow the media handling guidelines for the best results.

Caution: Wait until just before printing to load media. This avoids creases in the media that may be caused by the pressure rollers. Creased, wavy, or curled media could cause it to jam inside the printer or contact the print head.


1. Press the  power button and wait until you see this message on the LCD screen: **Load media**.

2. Open the front cover, grasp the tabs on the media holding plates, and slide them out of the way.

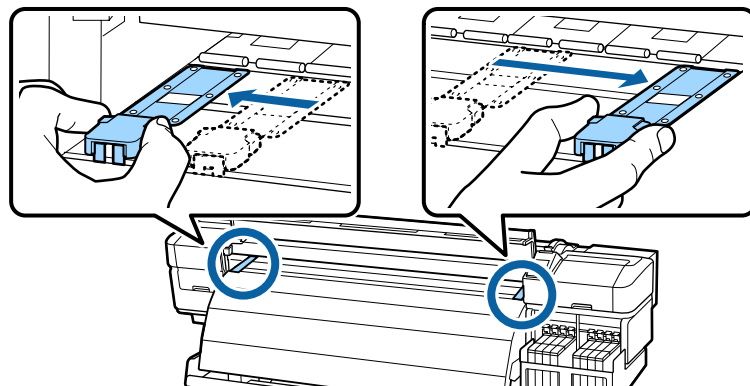


Note: Move the media holding plates as shown, or your media may be damaged or not load into the printer.


3. Close the front cover.

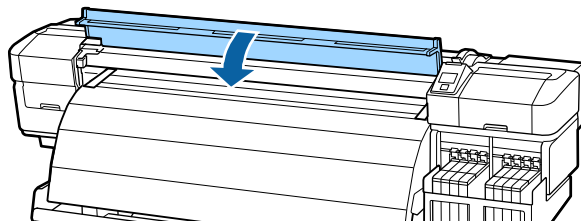


4. On the back of the product, loosen the roll holder fixing screws and slide out the roll holders wider than your media width. Then center the roll supports between the roll holders.

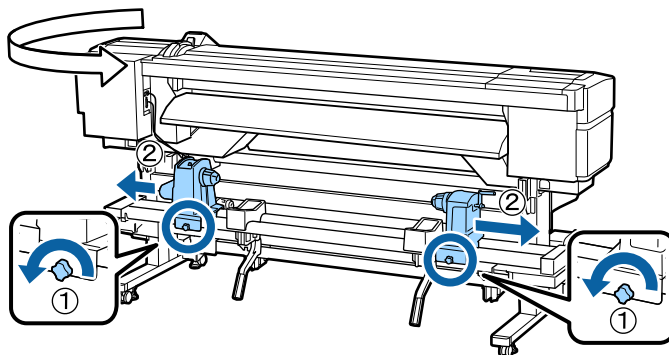


Note: If the right holder handle shaft is not visible, rotate the handle forward until it stops or the media cannot load properly.

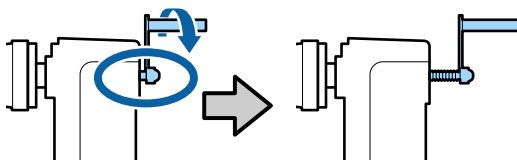


5. Note which way the printable side of the media is rolled:
Printable side out

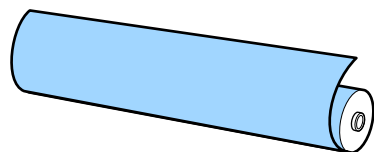


Printable side in

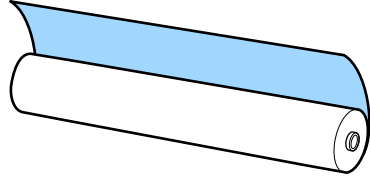

6. Place your media on the roll supports temporarily.

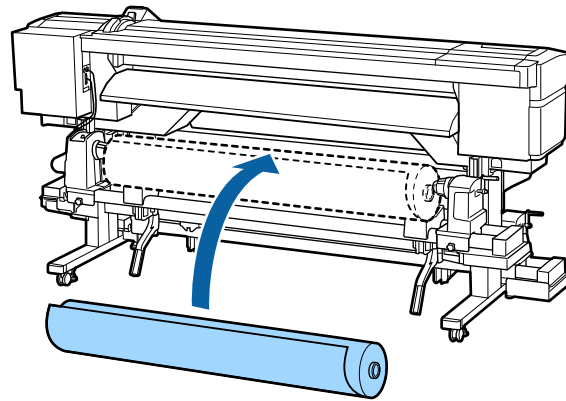


7. Align the left edge of the media with the position for that media on the label beneath the roll.

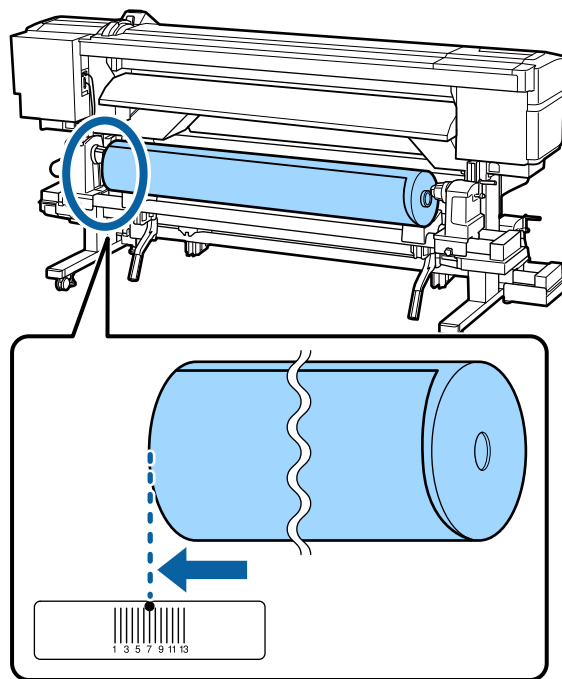


Note: If the label is missing the loading position you need, mark it on the label. Be sure to select the correct roll type setting on the product control panel.

8. On the left side of the product, raise the lift lever to lift the media into position. Then firmly push the roll holder onto the roll core.

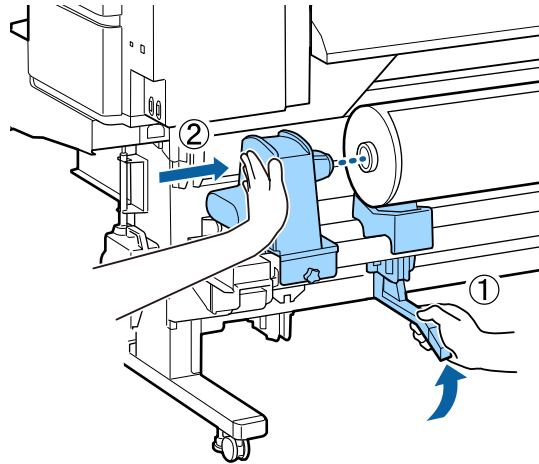


Note: If your roll is too small to lift into place with the lift lever, lift it onto the roll holders by hand.


9. Tighten the roll holder fixing screw until it no longer turns.

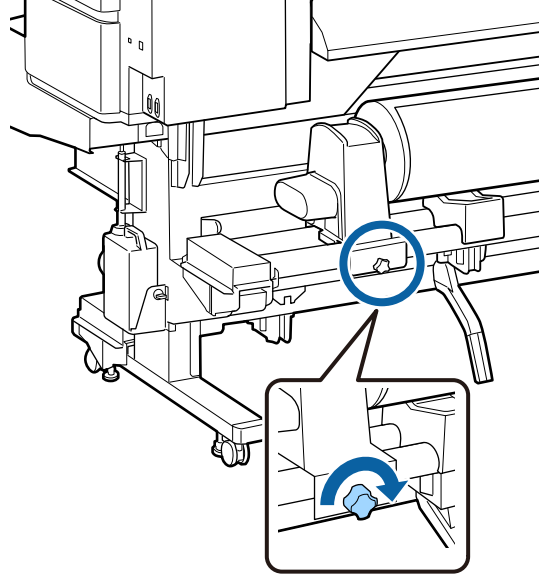

10. On the right side of the product, raise the lift lever to lift the media into position. Then firmly push the roll holder onto the roll core.

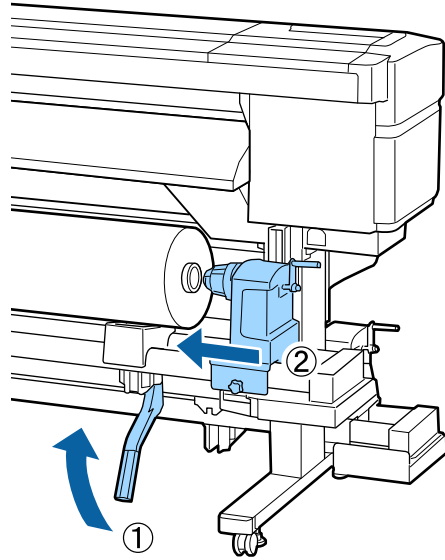


11. Push the center of the roll holder twice to securely insert it into the roll core.

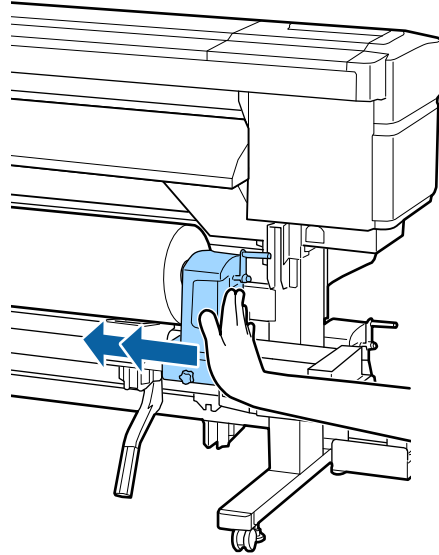


Note: Make sure the roll holder is fully inserted into the roll core or media may not feed correctly and slip during printing, or cause banding in your printouts.

12. Tighten the roll holder fixing screw until it no longer turns.

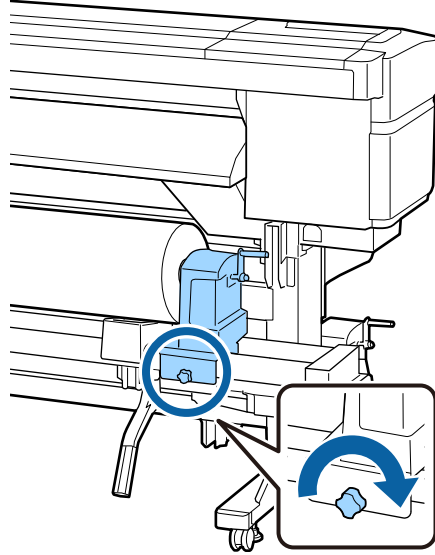

Note: Make sure the fixing screw is fully secured or the roll holder may move during printing, causing banding in your printouts.


13. Rotate the handle shown here until part A is hidden from view, then stop turning the handle.

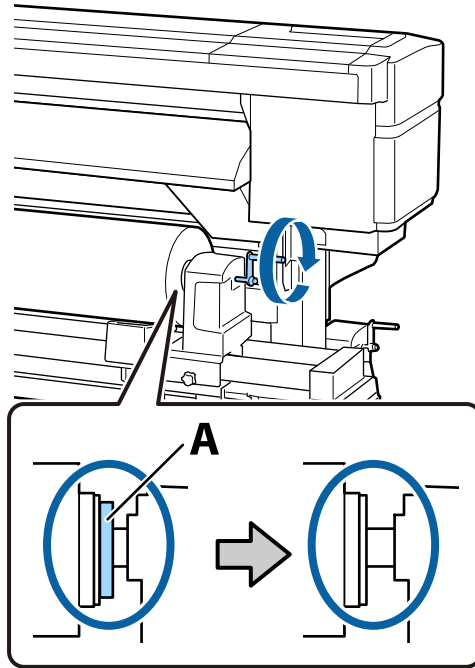


Caution: Once part A is hidden, do not turn the handle further or you may damage the roll holder. If part A remains visible after turning the handle fully, rewind the handle, loosen the fixing screw, and reload the right side of the roll on the product.

14. Make sure that the left and right sides of the media roll are aligned and realign them, if necessary.


15. Raise the media loading lever.

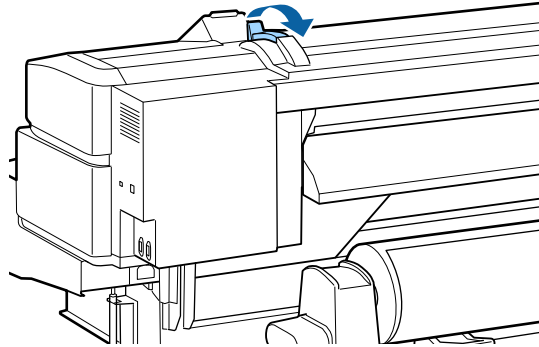

16. Insert the approximately 11.8 inches (30 cm) of media into the opening in the product, then lower the media loading lever.

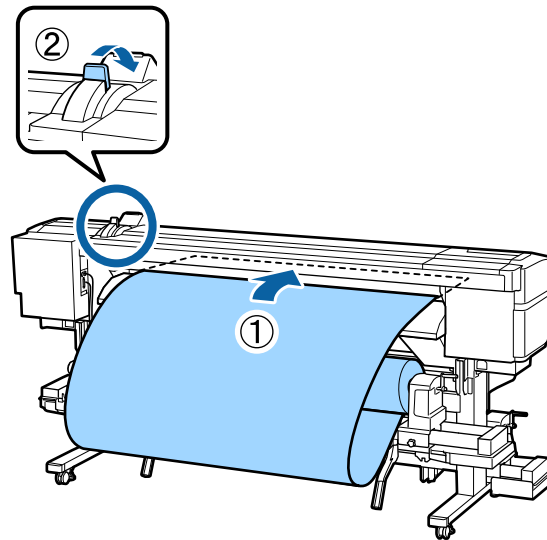


17. Confirm that the left edge of the media passes over some portion of the square on the loading guide label as shown here.

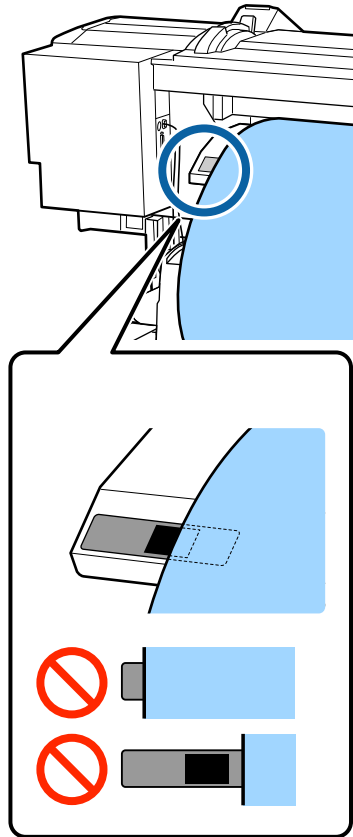


Note: If the media does not pass over the square marked on the label, reverse these steps to remove the media and load it again. Do not reposition the roll holders while your media is loaded.


18. On the front of the product, open the front cover.

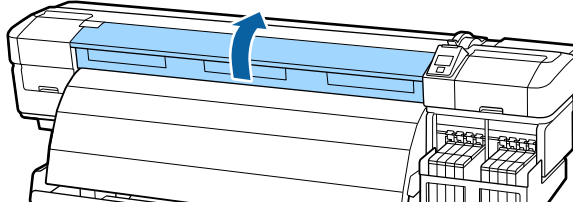


19. Hold the media in the center and raise the media loading lever.

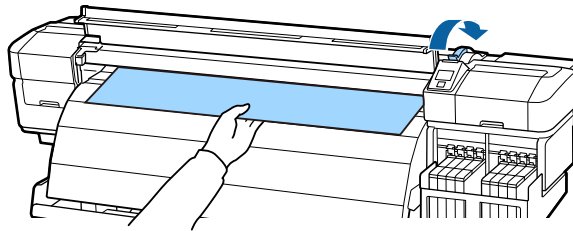

20. Pull the media straight forward to the leading edge of the after heater.

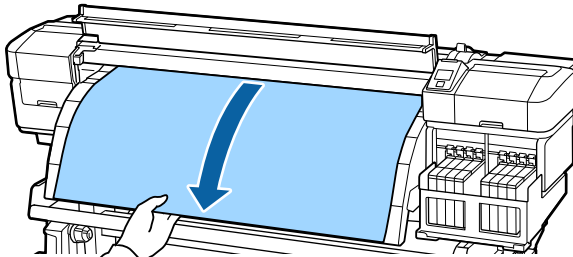


21. Close the front cover.

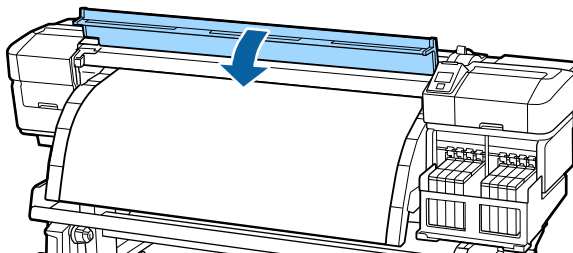


22. Press the up or down arrow button on the control panel to rewind the leading edge of the media to the edge of the front cover. Then make sure the media is fed straight and taut.

- For printable-side-out media, press the up arrow button.
- For printable-side-in media, press the down arrow button.

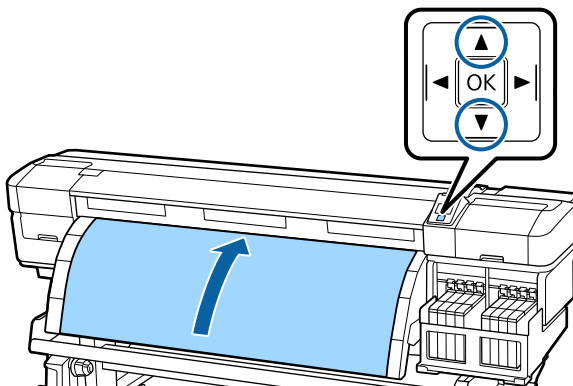


Note: For best results, press the right arrow button on the control panel to set the **Media Suction** setting to **2**.


23. Open the front cover.

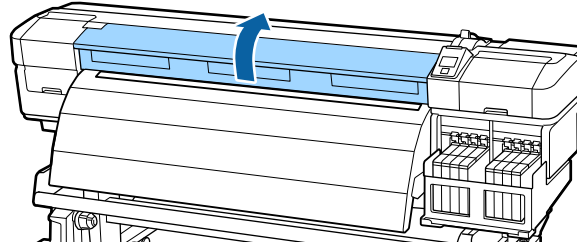

24. Lower the media loading lever to hold the media in place.

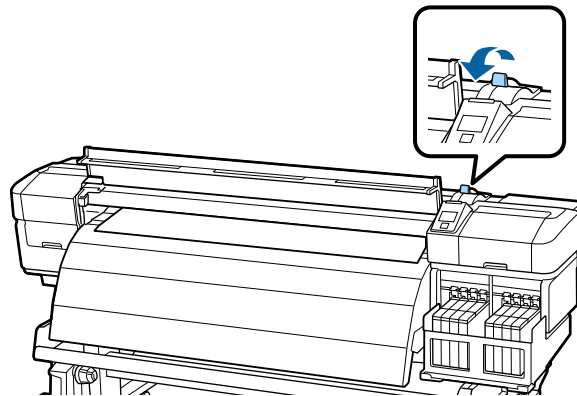


25. Grasp the tabs on the media holding plates on both sides and move the plates to the edges of the media.

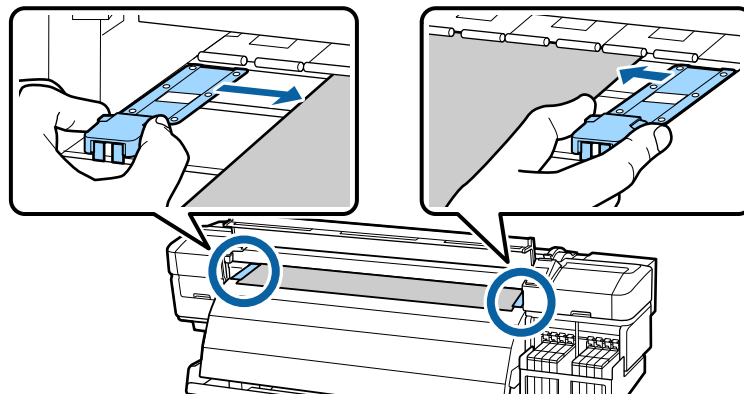


Caution: If your media is more than 0.02 inch (0.4 mm) thick, leave the media holding plates on the sides of the product or they could damage the print head.

26. Adjust the media holding plates so the round holes shown here are centered over the edges of the media.

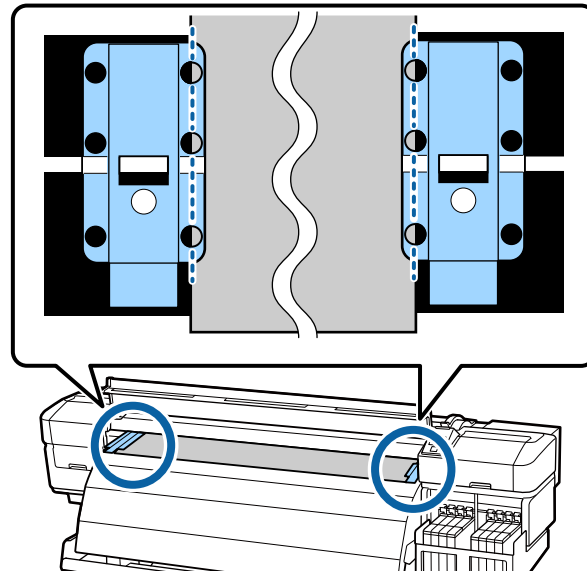

Note: Make sure to correctly position the media holding plates as shown here or your printouts may contain banding, uneven tint, or stripes. Do not use the media holding plates if the sides of your printouts are smudged or torn.

27. Close the front cover.

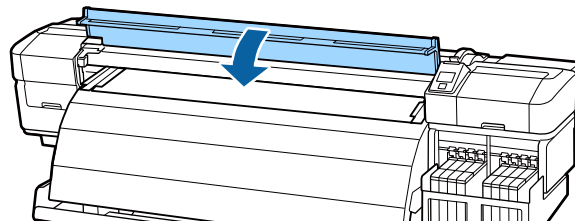

28. Select your media settings on the control panel.

Parent topic: [Media Handling](#)

Related references


[Media Handling Precautions](#)

Related tasks

[Viewing and Changing Media Settings](#)

Viewing and Changing Media Settings

After you load media in your product, you see a screen like this on your product control panel which lets you view or change your media settings:

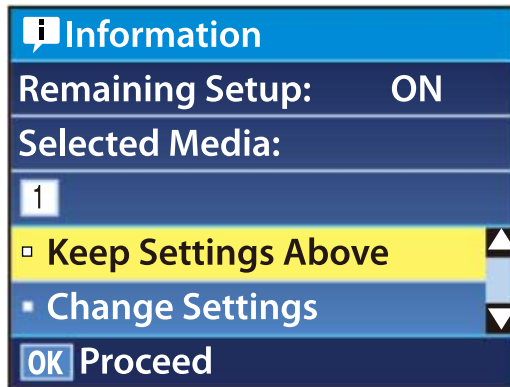

The media settings include the options selected and stored for each media bank or RIP setting you created.

1. Do one of the following:
 - If the displayed media settings are correct for the media you loaded, press the up or down arrow button to select **Keep Settings Above** and press the **OK** button.
 - If you need to change the media settings, press the up or down arrow button to select **Change Settings** and press the **OK** button.
2. If you want your product to calculate the amount of media remaining based on the length of the roll and the amount already printed, and display the approximate results on the product control panel, set the **Remaining Setup** setting to **On**.
3. To change your media settings, select the setting you want to change and press the **OK** button. Then press the ↵ back button and repeat this step to select additional settings as necessary.

4. When you finish changing media settings, press the up or down arrow button to select **Keep Settings Above** and press the **OK** button.
You see the roll type selection screen.
5. Press the up or down arrow button to select the roll type you loaded and press the **OK** button.
If you turned on the **Remaining Setup** setting, you see a prompt to enter the length of the current media.
6. Press the up or down arrow button to select a roll length from 3 to 3280 feet (1 and 999.5 m) long and press the **OK** button.

Note: You can select the roll length in 19.7 inch (0.5 m) increments.

After a moment you see the message **Ready** on the product control panel indicating that it is ready to print.

Parent topic: [Media Handling](#)

Related references

[Media Setup Menu Settings](#)

Related tasks

[Saving Sets of Media Settings](#)

Saving Sets of Media Settings

You can store sets of media settings for each type of media you use. This lets you quickly select all the necessary settings whenever you print on that media type.

The media settings include the options selected and stored for each media bank or RIP setting you created.

Note: Make sure that you loaded the media type for which you are selecting settings.

1. Press the **Menu** button on the product control panel.
2. Select the **Media Setup** menu and press the **OK** button.
3. Press the up or down arrow button to select **Customize Settings** and press the **OK** button.
4. Press the up or down arrow button to select a number for the set of media settings (from 1 to 30) and press the **OK** button.
5. Select **Setting Name** and press the **OK** button.

6. Press the up or down arrow button to display the letters and symbols you can use to name the media set. When you see the desired character, press the right arrow button to move to the next character position and repeat this step as necessary to complete the setting name. When you finish, press the **OK** button.

Note: If you need to delete the previous character, press the left arrow button.

7. Press the up or down arrow button as necessary to select each available media setting and press the **OK** button. If necessary, press the ↶ back button to return to the menu to select additional settings.

Parent topic: [Media Handling](#)

Related tasks



[Loading Media](#)

Printable Area and Media Size Checking

The left and right edges of media recognized by your product vary depending on the **Media Size Check** setting.

- When the **Media Size Check** setting is turned on, your product automatically detects the left and right edges of the media within 0.2 inches (5 mm), as long as the media holding plates are attached correctly.
- When the **Media Size Check** setting is turned off, your product uses the longest scale on the after heater label shown here as the standard position for the right edge of the media. The left edge of the media is determined to be 64 inches (1626 mm) from the standard position for the right edge, no matter the width of the loaded media. The printable area ranges for the media are described in the table here.

Note: If you turn off the **Media Size Check** setting, printing may occur outside the edges of your media, causing ink to stain the product. Make sure your print data width does not exceed the loaded media width. When you load media to the left of the right side reference position, adjust the **Print Start Position** setting on the product control panel to match the position where the media is loaded.

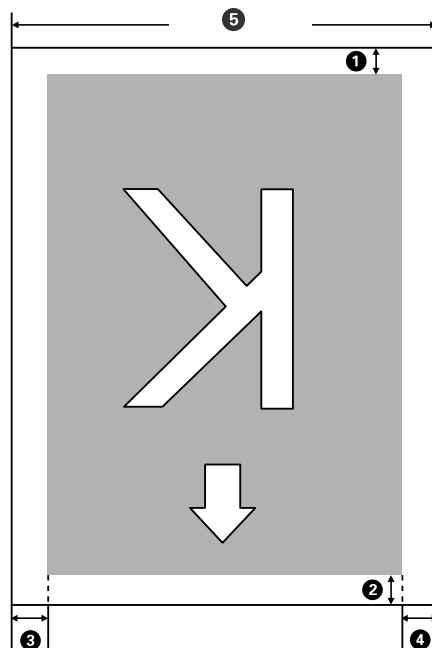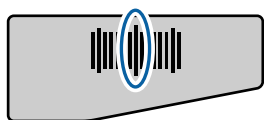

1	<p>Bottom margin¹</p> <p>You can configure this margin in the RIP software to 0.2 inch (5 mm) and above; if you set it below 0.2 inch (5 mm), it is changed to 0.2 inch (5 mm) to maintain feeding accuracy.</p>
2	<p>Top margin^{1, 2}</p> <p>You can configure this margin in the RIP software to 0.2 inch (5 mm) and above; if you set it below 0.2 inch (5 mm), it is changed to 0.2 inch (5 mm) to maintain feeding accuracy. The margin differs based on how far the media was pulled during loading.</p>
3	<p>Left margin^{3, 4}</p> <p>You select this margin as the Side Margin(Left) setting on the product control panel. The default setting is 0.2 inch (5 mm), but you can select from 0.12 inch (3 mm) to 0.98 inch (25 mm).</p>

4	<p>Right margin^{3, 4}</p> <p>You select this margin as the total of the values for the Print Start Position (default setting is 0) and Side Margin(Right) (default setting is 0.2 inch [5 mm]) settings on the product control panel. You can select from 0.12 inch (3 mm) to 32.5 inches (825 mm).</p>
5	<p>Media width</p> <p>11.8 to 64 inches (300 mm to 1626 mm); if Media Size Check is off, the product assumes this is 64 inches (1626 mm) regardless of the actual width</p>

¹ The configured margin and the actual print results may differ depending on the RIP software you use. Contact the RIP manufacturer for more information.

² When you set the **Margin Between Pages** setting to the **No Margin** option on the product control panel, you can adjust the margin from –0.39 inch (–10 mm) to 0.39 inch (10 mm).

³ Depending on the RIP software, you may be able to use it to set these margins. Contact the RIP manufacturer for more information.

⁴ When using the media holding plates, leave margins of at least 0.4 inch (10 mm) to avoid printing over the plates. If the total of the print data width and left and right margins exceeds the printable area, a portion of the print data will not print.

Parent topic: [Media Handling](#)


Related references

[Printer Setup Menu Settings](#)

Printing the Amount of Media Remaining

After you print, you can print the amount of media remaining on the leading edge of the remaining roll. This lets you enter the number the next time you load the media for the most accurate accounting of the media remaining on each roll

Note: You must have turned on the **Remaining Setup** setting on the product control panel to calculate the amount of media remaining.

1. Make sure your product is ready to print.
2. Press the  media setup button, select the **Media Remaining** setting in the displayed menu, and press the **OK** button.
3. Select the **Print Remaining Length** setting and press the **OK** button.
4. Press the **OK** button to print the amount of media remaining.

Parent topic: [Media Handling](#)

Related references

[Media Setup Menu Settings](#)

Aligning the Print Head

If your printouts are grainy or out of focus, you need to align the print head. The thickness of your print media determines the alignment options you select. You can store separate alignment values for each type of media you use for quick selection.


Before aligning the print head, make sure you have correctly loaded the media you plan to print on.

1. Press the **Menu** button.
2. Select **Media Setup** and press the **OK** button.
3. Press the up or down arrow button to select **Customize Settings** and press the **OK** button.
4. Press the up or down arrow button to select the number of the media settings you selected for the currently loaded media. Then press the **OK** button.
5. Press the up or down arrow button to select **Head Alignment** and press the **OK** button.
6. Press the up or down arrow button to select one of these adjustment methods and press the **OK** button:
 - If you are printing bidirectionally on your media, select the **Manual(Bi-D)** setting. If the print quality has not improved, repeat the steps here and select the **Manual(Dual Head)** setting. If you need further alignment, select the **Manual(Uni-D)** setting.
 - If you are printing unidirectionally on your media, select the **Manual(Dual Head)** setting. If the print quality has not improved, repeat the steps here and select the **Manual(Uni-D)** setting.

Your product prints an alignment test pattern and automatically feeds the media to viewing position.

Note: If you want to cut the media to better view the pattern, press the up arrow button to move the media past the cutter groove. Be careful not to rewind curled media past the front cover.

7. Examine the alignment test pattern to select the pattern number with the fewest gaps, as in pattern 2 shown here.

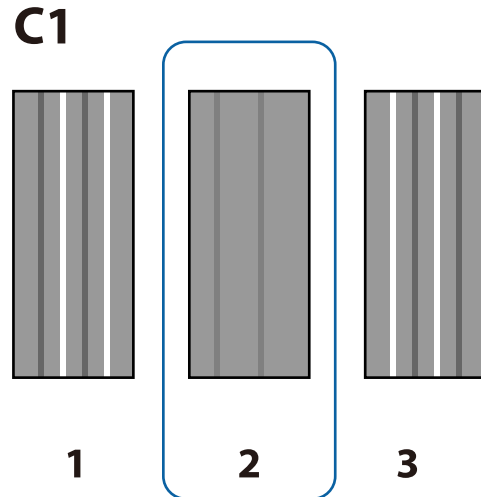

8. If the product control panel displays **C1**, press the left or right arrow button to select the number of the best pattern in C1 and press the **OK** button. Repeat this step for all the color patterns.

After selecting the final color pattern number, the control panel returns to its ready status.

Parent topic: [Media Handling](#)

Related references

[Media Setup Menu Settings](#)

Adjusting the Media Feed

If your printouts contain horizontal banding, uneven tint, or stripes, you need to adjust the feed of the media. You do this by printing and examining a test pattern, and then selecting the feed adjustments you need.

Adjust the feed using the same media type and print conditions you use for printing. For example, if you are using the auto take-up reel, you should use it during feed adjustment. You may need to adjust the feed again if you load media of a different width, change the feeding or take-up tension, adjust the suction, or attach the spacer.

Before adjusting the feed, make sure you have correctly loaded the media you plan to print on and selected all the options you plan to use for printing.


Note: You can also adjust the feed during printing without printing a test pattern.

1. Press the **Menu** button.
2. Select **Media Setup** and press the **OK** button.
3. Press the up or down arrow button to select **Customize Settings** and press the **OK** button.
4. Press the up or down arrow button to select the number of the media settings you selected for the currently loaded media. Then press the **OK** button.
5. Press the up or down arrow button to select **Feed Adjustment** and press the **OK** button.
6. Press the up or down arrow button to select a test pattern and press the **OK** button. The longer the pattern, the more accurate the adjustment.


Your product prints a test pattern and automatically feeds the media to viewing position.

7. Measure the distance between the **+** symbols in each test pattern, depending on which **Feed Speed** setting is currently selected for your media.

Feed Speed is set to Lv1

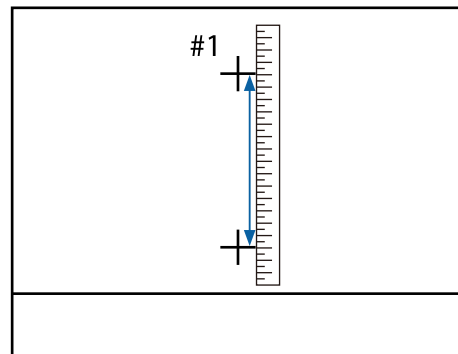

Feed Speed is set to Lv2

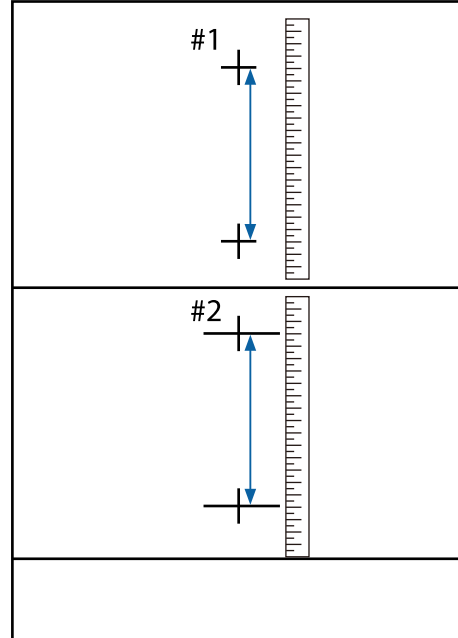

8. On the product control panel, press the left or right arrow button to select the distance between the + symbols for pattern 1 and press the **OK** button. Repeat this step for pattern #2 if necessary.

After you select the final test pattern number, the control panel returns to its ready status.

[Adjusting the Media Feed During Printing](#)

Parent topic: [Media Handling](#)

Related references

[Media Setup Menu Settings](#)

Adjusting the Media Feed During Printing

Follow the steps here to adjust the feed during printing without printing a test pattern.

1. During printing, press the ↵ media feed button.

The product control panel displays an adjustment value.



2. Press the up or down arrow button to adjust the feed depending on these banding results in your printout:
 - If black bands or dark stripes appear, press the up arrow button to increase the feed amount.
 - If white bands or pale stripes appear, press the down arrow button to decrease the feed amount.
3. Check the results in your printout and do one of the following:
 - If further adjustment is necessary, repeat the last step.
 - If the print quality is good, press the **OK** button.

Parent topic: [Adjusting the Media Feed](#)

Adjusting Heating and Drying During Printing

Follow the steps here to adjust the heating and drying settings during printing.

Note: If the room temperature is too low and a print job with high ink density or a small number of print passes is sent, the print job may pause while the heater warms up.

1. During printing, press the  heat/dry menu button.
2. Press the up or down arrow button to change the heater temperature.
3. Press the **OK** button.
4. Hold down the  back button until **Ready** appears on the product control panel.

Parent topic: [Media Handling](#)

Related references

[Media Setup Menu Settings](#)


Cutting Media

When you finish printing, use a commercially available cutter to cut the media.

Warning: Be careful not to cut yourself when using cutters or other sharp blades. Also be careful touching areas near the after heater since the after heater may be hot and you could be burned.


1. Press  media feed button and press the **OK** button.

2. Check that the trailing edge of the printout is fed beyond the cutting groove on the product, then open the front cover.

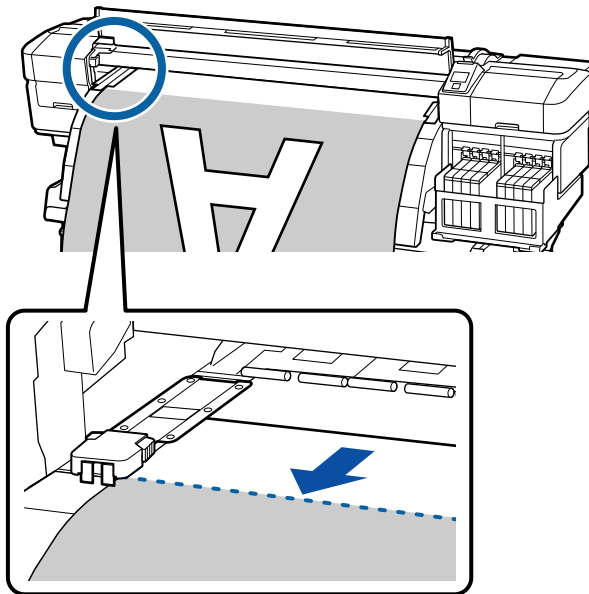


Note: If you printed the amount of media remaining onto your media, press the up arrow button to rewind the media as necessary to keep this information with the unprinted roll.



3. Grasp the tabs on the media holding plates, and slide them out of the way.

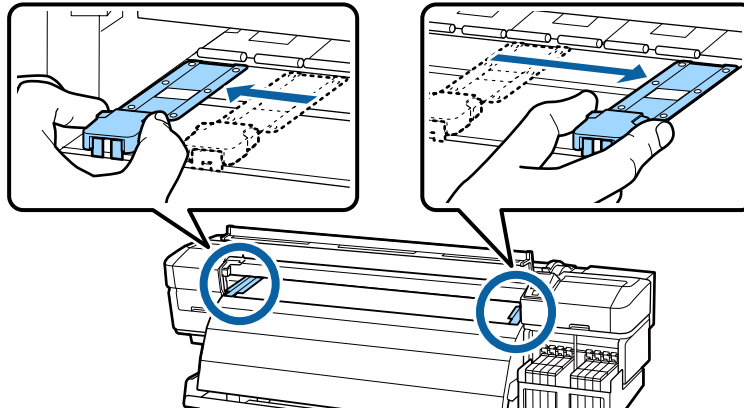


4. Use your cutting tool to cut the media along the cutting groove.

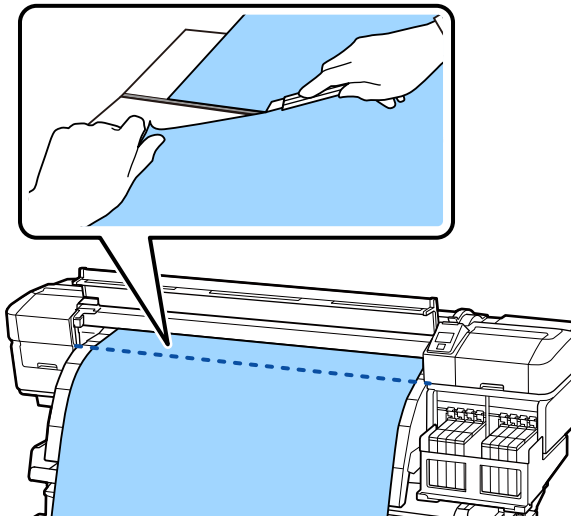

5. Do one of the following:
- If you are not using the auto take-up reel, reverse the media loading steps to remove the media from the product.

- If you are using the auto take-up reel, go to the next step.
6. Use the **Manual** switch shown here to take up the cut media onto the take-up reel, depending on the printable side of the media:
- Move the switch to the  position for printable-side-out media.
 - Move the switch to the  position for printable-side-in media.

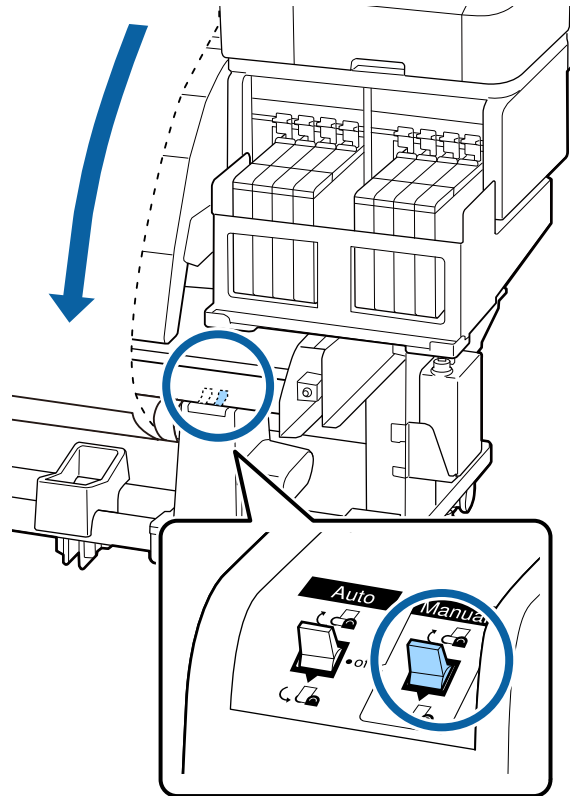

7. Remove the take-up roll from the product.

Parent topic: [Media Handling](#)

Using the Auto Take-up Reel

See these sections to use the auto take-up reel with your product.

[About the Auto Take-up Reel](#)

[Attaching the Take-up Roll Core to the Auto Take-up Reel](#)

[Take Up with the Printable-Side-In](#)

[Take Up with the Printable-Side-Out](#)


[Removing Media from the Auto Take-up Reel](#)

Parent topic: [Media Handling](#)

About the Auto Take-up Reel

The auto take-up reel automatically rolls up printed media as you print.

You can use the auto take-up reel for media with the printable side in (on the left) or printable side out (on the right).

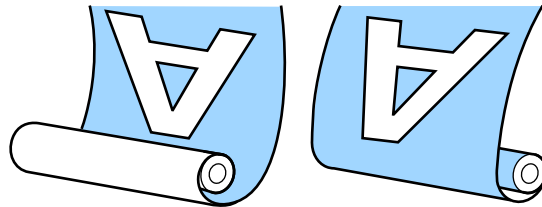

It is best to do the following when using the auto take-up reel:


- Use media that is 36 inches (91.44 cm) or wider.
- Load media with the printable side in.
- Use a take-up roll core that is the same width as your media so the core does not bend or take up media incorrectly.

Parent topic: [Using the Auto Take-up Reel](#)


Attaching the Take-up Roll Core to the Auto Take-up Reel

Be sure to attach a take-up roll core that is the same width as your media.

1. Move the **Auto** switch to the **off** position.

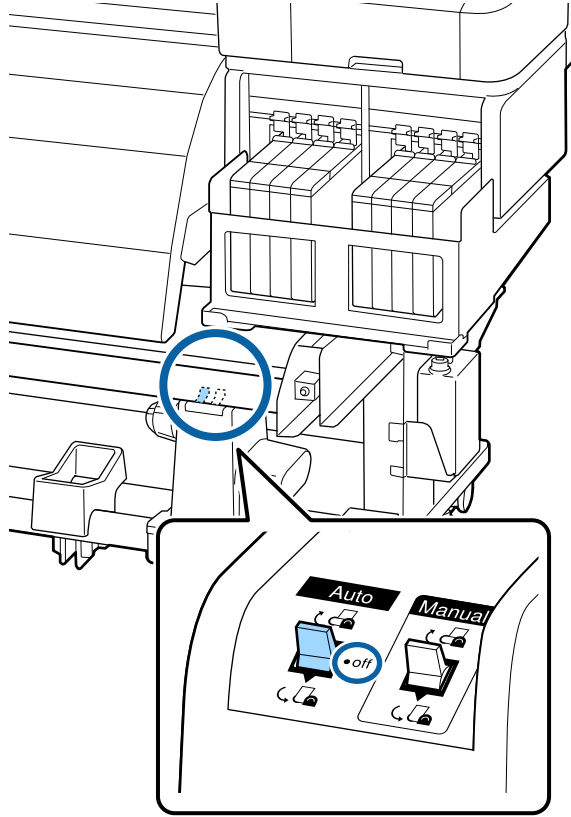


2. Press and hold the down arrow button until the edge of the loaded media reaches the roll core holder.

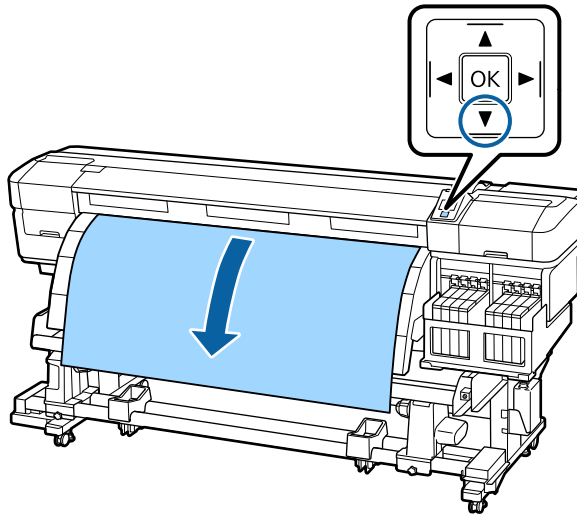


Note: Always use the down arrow button to feed loaded media or the media may twist during take-up.


3. Loosen the roll core holder locking screws and adjust the roll core holders wider than your media. Then center the roll supports between the roll core holders.

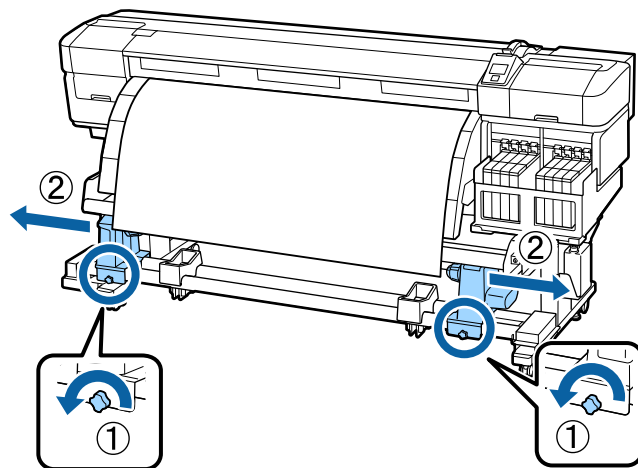


Note: If the left roll core holder handle shaft is not visible, rotate the handle as shown here until it stops or the roll core cannot take up media properly.

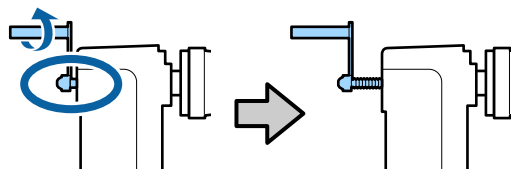


4. Align the right roll core holder with the right edge of the media and tighten the locking screw.

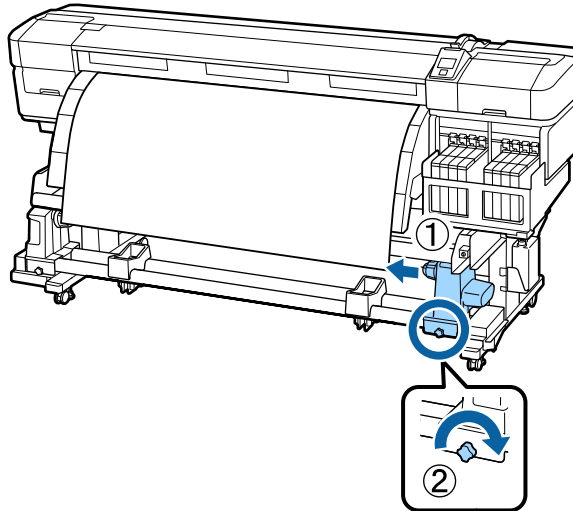


5. Insert the roll core onto the right roll core holder.

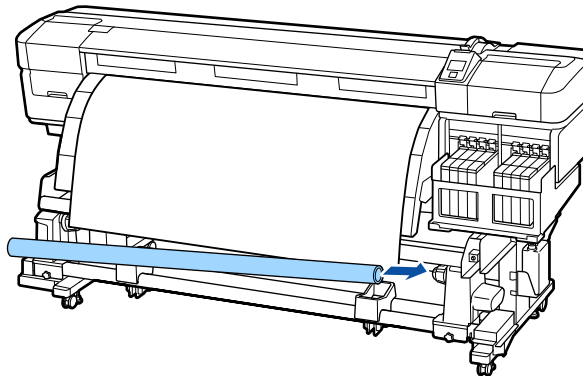

6. Insert the left side of the roll core onto the left roll core holder.

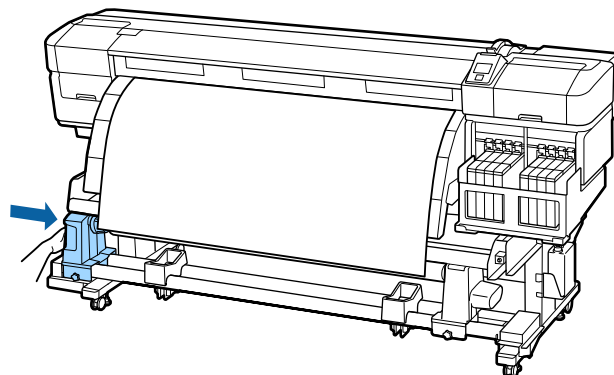


7. Push the center of the roll core holder twice to securely insert it into the roll core.

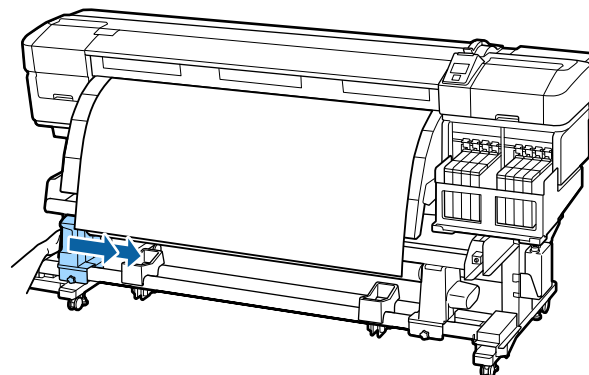


8. Confirm that the roll core and the edges of the media are aligned. If they are misaligned, loosen the right roll core holder locking screw and repeat these steps to attach the roll core again.

9. Tighten the left roll core holder locking screw to secure the roll core holder in place.

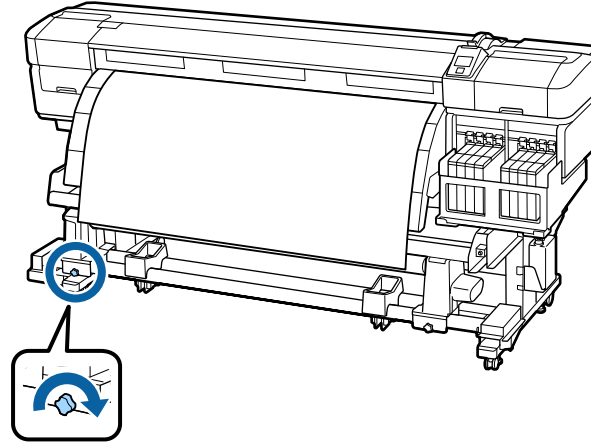

10. Rotate the handle shown here until part A is hidden from view, then stop turning the handle.

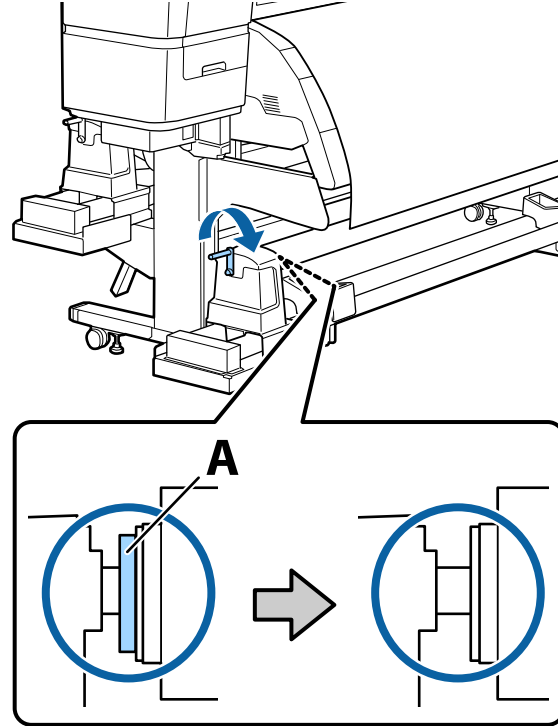

Caution: Once part A is hidden, do not turn the handle further or you may damage the roll core holder. If part A remains visible after turning the handle fully, rewind the handle, loosen the fixing screw, and reload the roll core on the auto take-up reel.


Parent topic: [Using the Auto Take-up Reel](#)

Take Up with the Printable-Side-In

After attaching the roll core on the auto take-up reel, follow these steps to take up media with the printable side in.


1. Guide your loaded media over the media guide bar and behind the roll core, then attach the media to the roll core with tape as shown here. Begin with the center piece of tape, pulling the media straight


forward before attaching the tape. Then pull the media to each side as you attach the tape on each side.

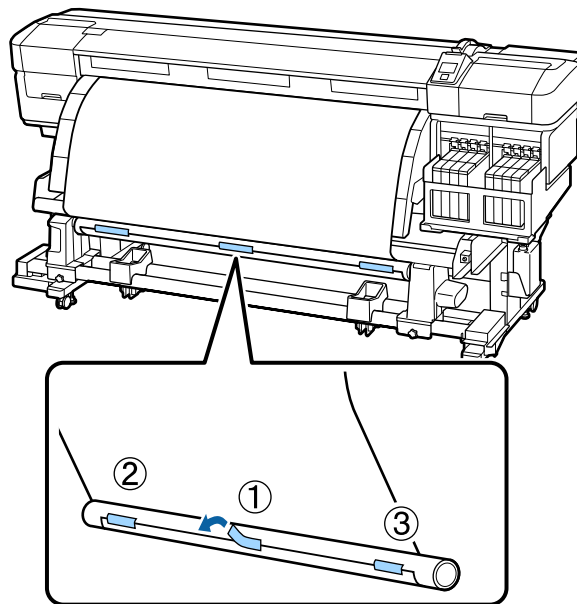


Note: Make sure the media lays flat across the roll core without any gaps. If necessary, add more tape or reattach the tape so the media is taken up correctly.

2. Press the down arrow button on the control panel to feed enough media for it to wrap once around the roll core.

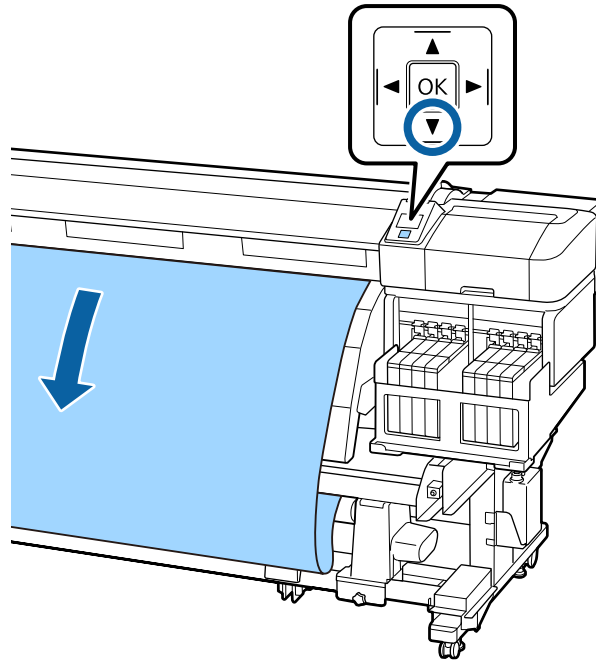


3. Confirm that the **Auto** switch is set to the **off** position, then set the **Manual** switch to the  position to wind the media around the roll core.

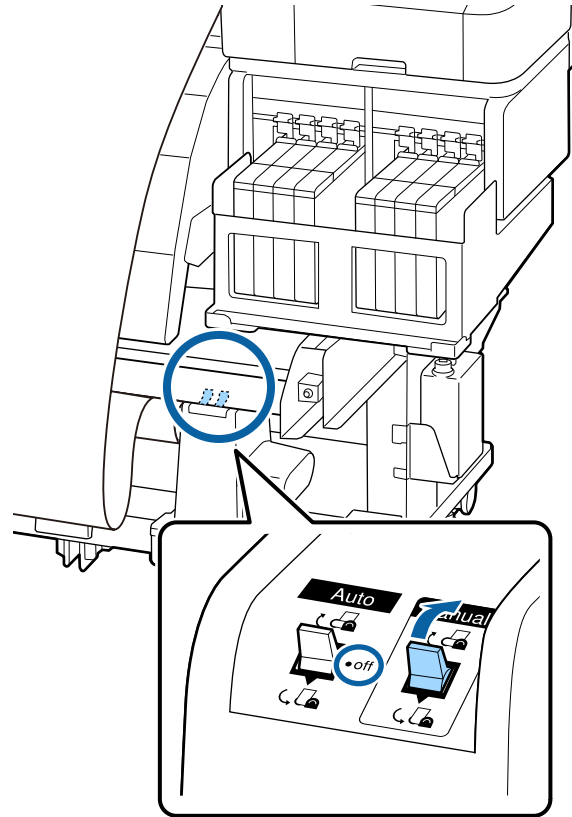


4. Make sure the media is taut and loads evenly on both sides.


Note: If the media is looser on one side than the other, the media cannot be taken up correctly. Repeat these steps to reload the media on the auto take-up reel.

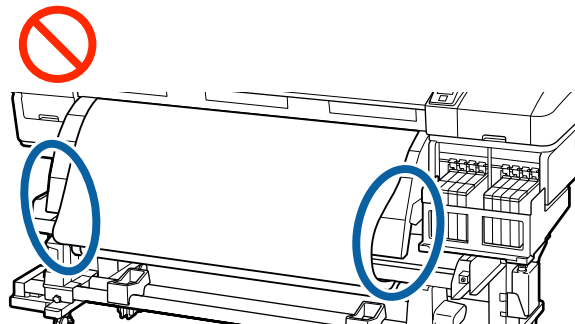

5. Confirm that the tension is even by lightly tapping the media on both sides as shown here.

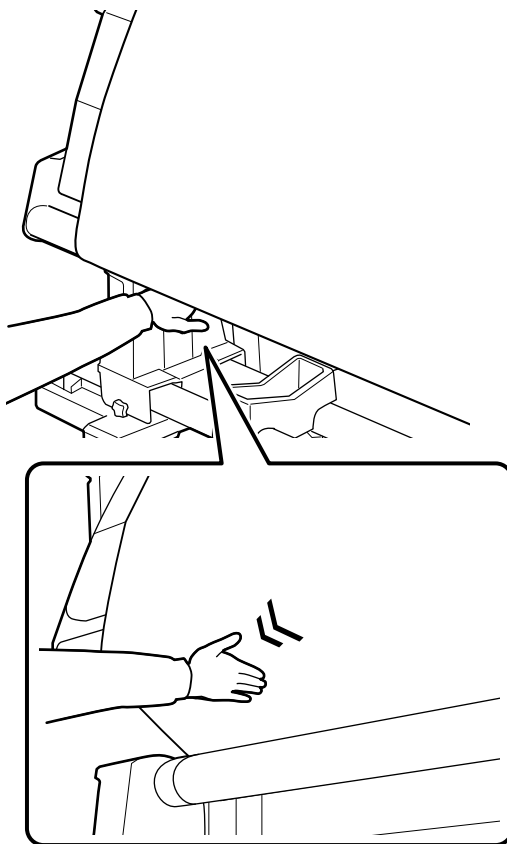


6. Also confirm that the edges of the media are aligned with the media already taken up on the roll core.

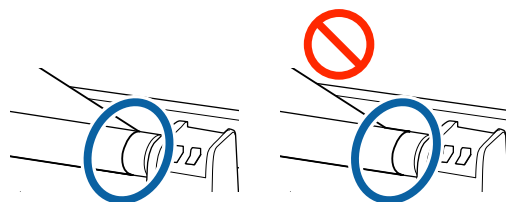

Note: If the edges are not aligned, reverse these steps to remove the media, and repeat these steps to reload it on the auto take-up reel.

7. Move the **Auto** switch to the  position.

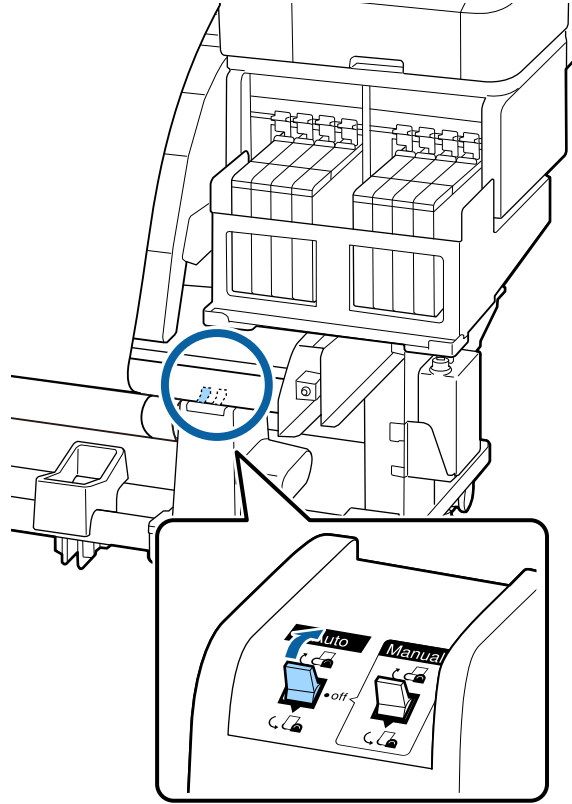


Parent topic: [Using the Auto Take-up Reel](#)

Take Up with the Printable-Side-Out

After attaching the roll core on the auto take-up reel, follow these steps to take up media with the printable side out.


1. Guide your loaded media through the front of the media guide bar and on top of the roll core, then attach the media to the roll core with tape as shown here. Begin with the center piece of tape, pulling


the media straight forward before attaching the tape. Then pull the media to each side as you attach the tape on each side.

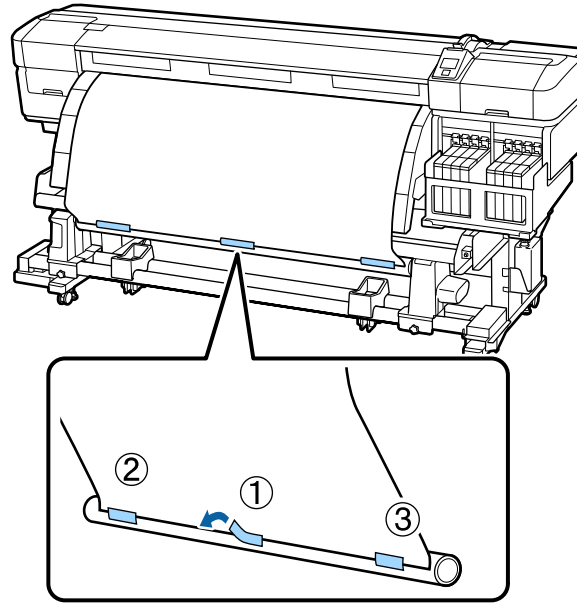


Note: Make sure the media lays flat across the roll core without any gaps. If necessary, add more tape or reattach the tape so the media is taken up correctly.

2. Press the down arrow button on the control panel to feed enough media for it to wrap once around the roll core.

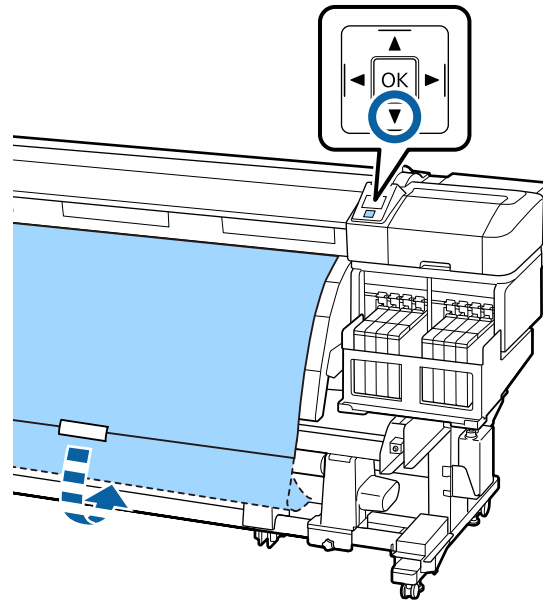


3. Confirm that the **Auto** switch is set to the **off** position, then set the **Manual** switch to the  position to wind the media around the roll core.

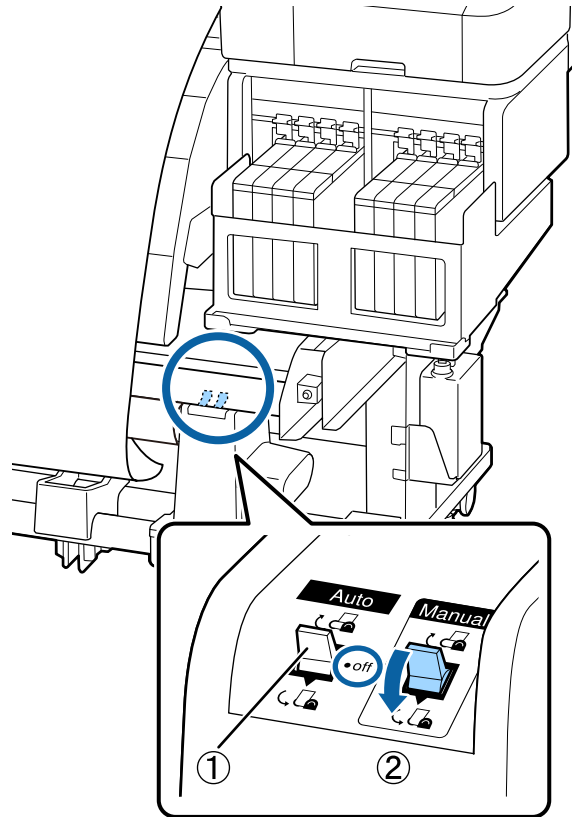


4. Make sure the media is taut and loads evenly on both sides.


Note: If the media is looser on one side than the other, the media cannot be taken up correctly. Repeat these steps to reload the media on the auto take-up reel.

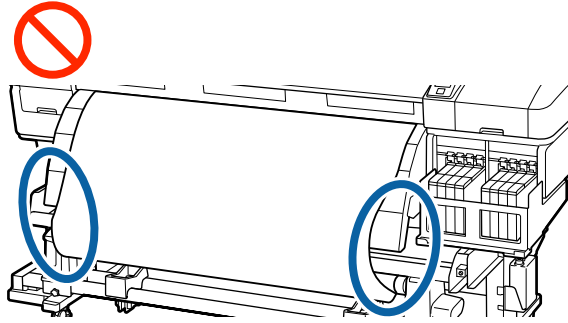

5. Confirm that the tension is even by lightly tapping the media on both sides as shown here.

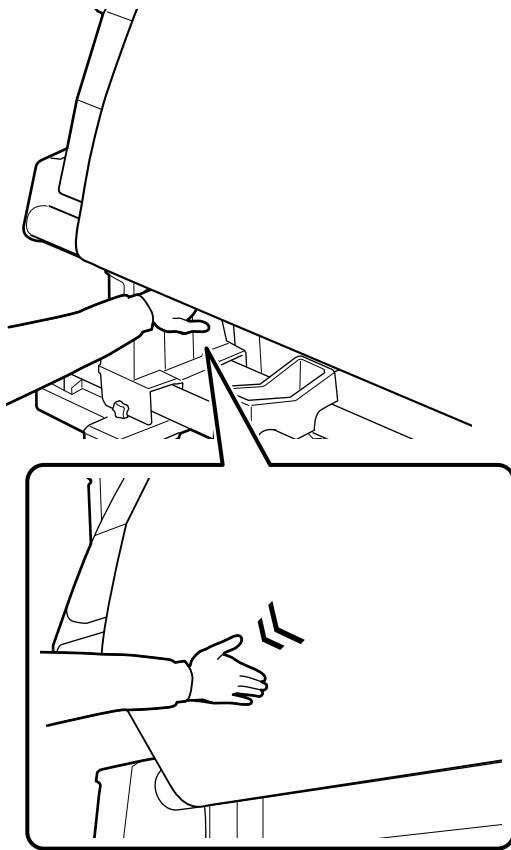


6. Also confirm that the edges of the media are aligned with the media already taken up on the roll core.

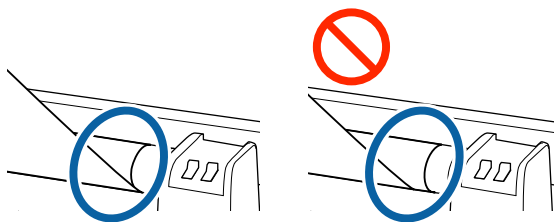

Note: If the edges are not aligned, reverse these steps to remove the media, and repeat these steps to reload it on the auto take-up reel.

7. Move the **Auto** switch to the  position.

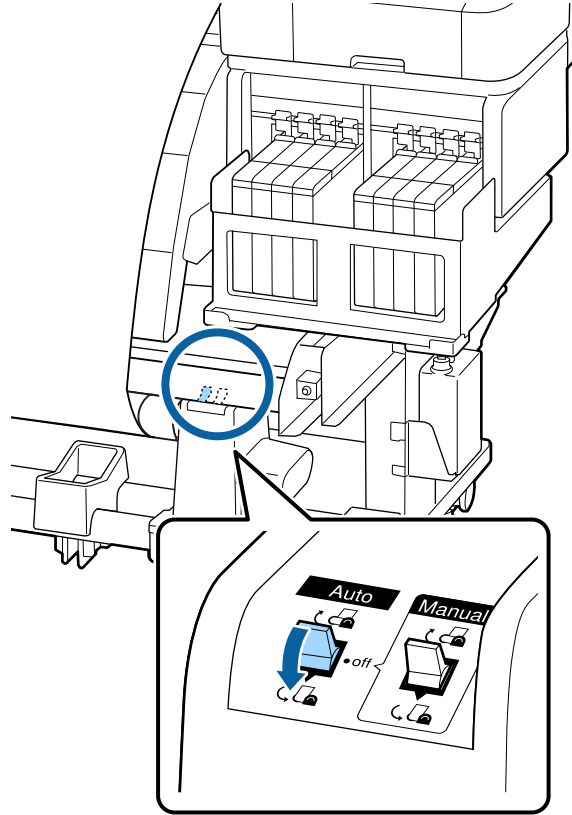


Parent topic: [Using the Auto Take-up Reel](#)

Removing Media from the Auto Take-up Reel


After printing on media loaded on auto take-up reel, follow these steps to remove it.

1. Move the **Auto** switch to the **off** position.

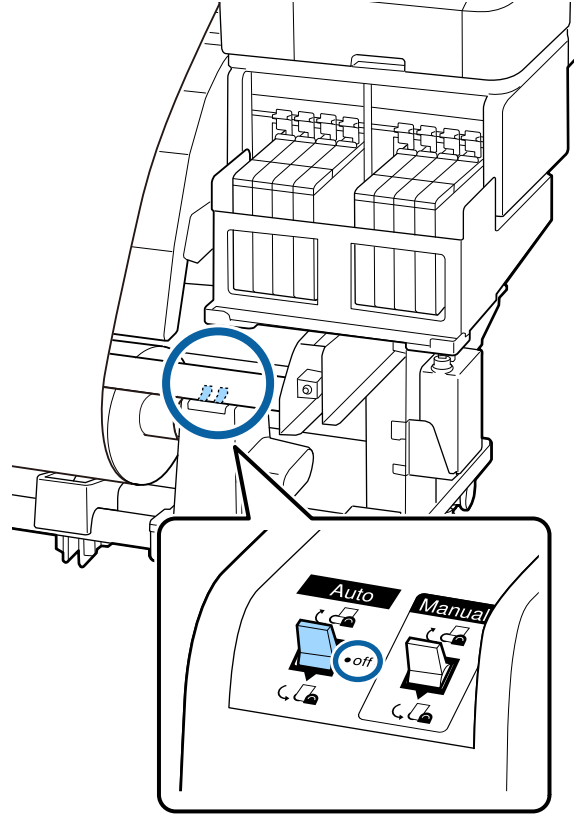


2. Cut the media and roll the cut end onto the auto take-up reel.


3. On the left side of the roll core holder on the auto take-up reel, rotate the handle as shown here.

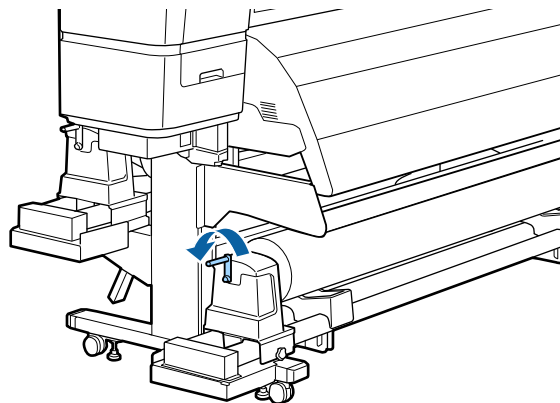


4. While supporting the left side of the media roll, loosen the left roll core holder locking screw and remove the roll core holder from the roll.

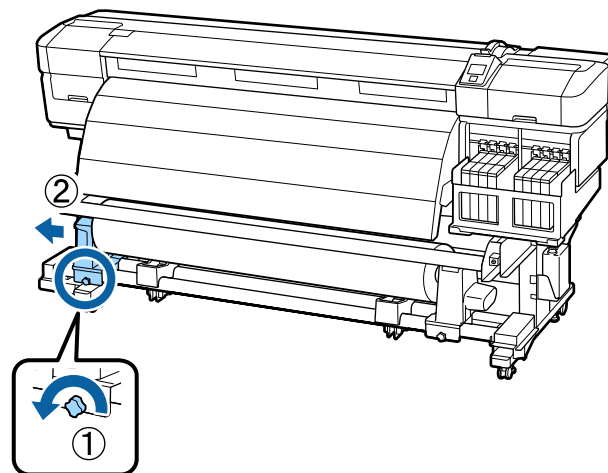


5. Lower the media roll onto the roll support.

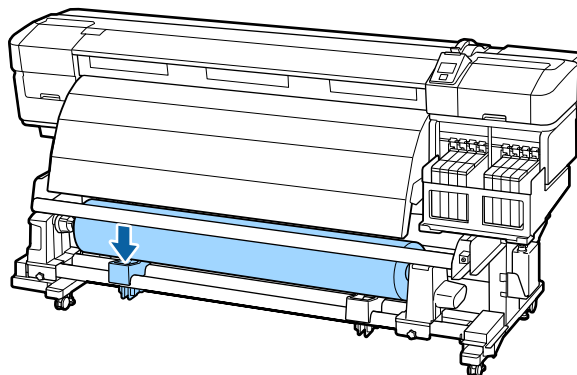

6. While supporting the right side of the media roll, loosen the right roll core holder locking screw and remove the roll core holder from the roll.

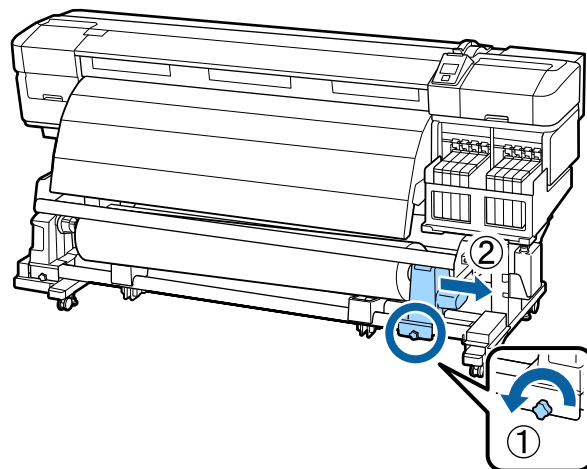

7. Lower the media roll onto the roll support.

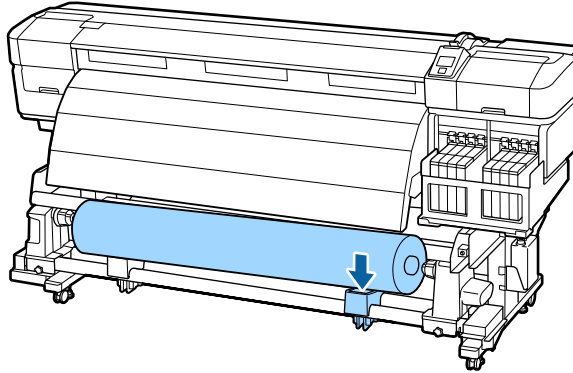

Parent topic: [Using the Auto Take-up Reel](#)

Using the Control Panel Menus

Follow the instructions in these sections to access the printer menu system and select settings.

[Accessing the Printer's Menus](#)

[Media Setup Menu Settings](#)

[Printer Setup Menu Settings](#)

[Maintenance Menu Settings](#)

[Printer Status Menu Settings](#)

[Network Setup Menu Settings](#)


[Preference Menu Settings](#)


[Reset All Settings Menu](#)

Accessing the Printer's Menus

You can use the printer menus to adjust the settings that control how your product works.

1. Press the **Menu** button on the control panel.
You see the menus on the LCD screen.
2. Press the up or down arrow button to scroll through the menus.

Note: Press the  back button to go back.

3. To change settings in the highlighted menu, press the **OK** button.
4. Press the up or down arrow button to move through the settings. Press the right or left arrow button to position the cursor when entering data on the screen.
5. To select a setting, press the **OK** button.
6. When you finish changing settings on a menu, press the  pause/cancel button to return to the main screen.

Parent topic: [Using the Control Panel Menus](#)

Media Setup Menu Settings

Settings on the Media Setup menu let you customize various adjustments for up to 30 different media types.

Caution: Follow the instructions in the topic links below the table to use these menu settings correctly.

Setting	Options	Description
Media Remaining	Remaining Setup	Displays and records the amount of media remaining on a roll.
	Length	Enter the total roll length, from 3 to 3280 ft (1.0 to 999.5 m).
	Remaining Alert	Enter the length at which the printer will alert you, from 4 to 50 ft (1 to 15 m).
	Print Remaining Length	Prints the amount of media remaining on the current roll before you replace it.
Select Media	1 to 30	Selects a number for the settings bank to use for printing.
	RIP Settings	Specifies using the software RIP settings instead of the printer settings.
Customize Settings	—	See the next table.
RIP Settings	—	See the third table.
Print Media List	Print	Prints the contents of media setting banks 1 to 30.

Customize Settings options

Options	Description
Current Settings	Changes settings for the currently selected media.
Setting Name	Enter a name up to 22 characters for the media settings bank.
Feed Adjustment	Select Manual if banding persists after head cleaning and alignment.
Platen Gap	Select 2.0 for most media. Select 1.5 if print quality is unsatisfactory. Select 2.5 only if printouts are scratched or smudged. Choosing a larger gap than necessary can cause ink stains inside the printer, reduced print quality, or shorter product life.

Options	Description
Head Alignment	<p>Select one of the following when print results are grainy or out of focus:</p> <p>Manual(Bi-D): when printing in both directions.</p> <p>Manual(Dual Head): if the previous setting does not improve the results, or if you are printing in one direction.</p> <p>Manual(Uni-D): if the previous setting does not improve the results.</p>
Heating & Drying	<p>Set any of the following:</p> <p>Heater Temperature: from 86 to 131 °F (30 to 55 °C); defaults to 122 °F (50 °C).</p> <p>Drying Time Per Pass: from 0.0 to 10.0 seconds. You can maintain a constant drying time by basing it on the media width.</p> <p>After Heater Feed: feeds media to the after heater after printing (if the media will be cut before the next job starts).</p> <p>Blank Area Feed: speeds up feeding of blank areas, from Mode 0 (highest speed) to Mode 3.</p>
Media Suction	<p>Set from 0 to 10 to increase the gap between the print head and thin or flexible media. If print quality is reduced or media does not feed correctly, you may need to lower the suction.</p>
Head Movement	<p>Selects the range of print head movement:</p> <p>Data Width: increases print speed by restricting movement to the printed area.</p> <p>Printer Full Width: provides more even print results.</p>
Multi-Strike Printing	<p>Select the number of times each line is printed, from 2 to 8 (or select Off to disable).</p>
Roll Type	<p>Select Printable Side Out or Printable Side In based on how the media is rolled.</p>

Options	Description
Tension Measurement	<p>Selects how often tension is measured and automatically adjusted:</p> <p>Periodically: recommended for most media.</p> <p>Every page: provides more precise tensioning (but slower printing).</p>
Feeding Tension	<p>Select Auto for most media.</p> <p>When you select Manual, you can set a value from 0 to 40. If media creases, set the value higher than Lv32. If banding appears, set the value lower than Lv32.</p> <p>When Media Size Check is off, select Manual and set the value based on the media width.</p>
Take-up Tension	<p>Select Auto for most media.</p> <p>When you select Manual, you can set a value from 1 to 9. If media wrinkles, banding appears, or ink sticks to the back of the take-up roll, set the value lower than Lv7. If thick media cannot be wound correctly, set the value higher than Lv7.</p>
Feed Speed	Select Lv2 for most media. Select Lv1 for thin media if it is creased, torn, stuck together, or if horizontal banding appears.
Prevent Sticking	Select On only if the media sticks to the platen when the printer is turned on or when printing starts.
Restore Settings	Select Yes to return all settings for the selected media to their default values.

RIP Settings options

Options	Description
Platen Gap	Select 2.0 for most media. Select 1.5 if print quality is unsatisfactory. Select 2.5 only if printouts are scratched or smudged. Choosing a larger gap than necessary can cause ink stains inside the printer, reduced print quality, or shorter product life.

Options	Description
Head Alignment	<p>Enter a media Input thickness value from 4 to 40 mil (0.1 to 1.0 mm).</p> <p>Select one of the following when print results are grainy or out of focus:</p> <p>Manual(Bi-D): when printing in both directions.</p> <p>Manual(Uni-D): when printing in one direction.</p> <p>Manual(Dual Head): if the previous setting does not improve the results.</p>
Roll Type	Select Printable Side Out or Printable Side In based on how the media is rolled.
Tension Measurement	<p>Selects how often tension is measured and automatically adjusted:</p> <p>Periodically: recommended for most media.</p> <p>Every page: provides more precise tensioning (but slower printing).</p>
Feeding Tension	<p>Select Auto for most media.</p> <p>When you select Manual, you can set a value from 0 to 40. If media creases, set the value higher than Lv32. If banding appears, set the value lower than Lv32.</p> <p>When Media Size Check is off, select Manual and set the value based on the media width.</p>
Take-up Tension	<p>Select Auto for most media.</p> <p>When you select Manual, you can set a value from 1 to 9. If media wrinkles, banding appears, or ink sticks to the back of the take-up roll, set the value lower than Lv7. If thick media cannot be wound correctly, set the value higher than Lv7.</p>
Prevent Sticking	Select On only if the media sticks to the platen when the printer is turned on or when printing starts.
Restore Settings	Returns all RIP settings to their default values.
Print	Prints the contents of media setting banks 1 to 30.

Parent topic: [Using the Control Panel Menus](#)

Related tasks

[Loading Media](#)

[Saving Sets of Media Settings](#)

[Adjusting the Media Feed](#)

[Aligning the Print Head](#)

[Adjusting Heating and Drying During Printing](#)

Printer Setup Menu Settings

The Printer Setup menu lets you control margin settings, automatic cleaning cycles, and other aspects of your product's operation.

Caution: Follow the instructions in the topic links below the table to use these menu settings correctly.

Setting	Options	Description
Side Margin(Right)	0.12 to 1.00 inch (3 to 25 mm)	Selects the width of the right margin.
Side Margin(Left)	0.12 to 1.00 inch (3 to 25 mm)	Selects the width of the left margin.
Print Start Position	0.00 to 32.00 inches (0 to 800 mm)	Sets an additional margin on the right side of the media.
Margin Between Pages	Normal No Margin /–10 mm to +10 mm	Sets a margin between pages.
Media Size Check	On Off	Automatically detects the edges of the media. Leave this setting On unless the printer displays a Media Size Error when media is loaded correctly. Changes to the settings are applied after the media is reloaded.
Media End Check	On Off	Automatically detects the end of the media. Leave this setting On unless the printer displays Media Out when media is loaded correctly.

Setting	Options	Description
Media Skew Check	On Off	Stops printing and displays an error when skewed media is detected. Leave this setting On to avoid jams caused by skewed media.
Media End Option	Continue Stop Printing	Selects whether to continue an unfinished print job after a roll is replaced.
Print Nozzle Pattern	Off 1 to 10 pages	Selects how often to print an automatic nozzle check pattern.
Periodical Cleaning Light Medium Heavy	Off 1 to 240 hours	Selects the frequency and strength of automatic head cleaning cycles. Even when Off is selected, the printer will automatically clean the print head at a fixed interval after printing to keep the nozzles from clogging.
Cleaning Cycle	Off 1 to 10 pages	Selects the frequency of automatic head cleaning cycles.
Heat Off Timer	15 to 240 minutes	Selects the interval before the heater turns off automatically and the printer enters sleep mode. In sleep mode, the control panel also turns off and other components consume less power.
Restore Settings	Yes No	Returns all items in the Printer Setup menu to their default settings.

Parent topic: [Using the Control Panel Menus](#)

Related references

[Printable Area and Media Size Checking](#)


Related tasks

[Checking for Clogged Print Head Nozzles](#)

[Cutting Media](#)

[Cleaning the Print Head](#)

Maintenance Menu Settings

The Maintenance menu lets you run nozzle checks, cleaning cycles, and other maintenance operations. You can access the menu directly by pressing the  maintenance button.

Caution: Follow the instructions in the topic links below the table to use these menu settings correctly.

Setting	Options	Description
Nozzle Check	Print At Right Print At Center Print At Left	Prints a nozzle check pattern in the specified location on the media.
Cleaning All Nozzles Head1/Head2 Head1 Head2 Selected Nozzles	Execute (Light) Execute (Medium) Execute (Heavy)	Lets you clean all or selected nozzles, based on the nozzle check pattern. Select the lightest cleaning level first. If nozzles are still clogged, select a heavier cleaning.
Head Maintenance	Move Head	Positions the print heads for cleaning.
Waste Ink Counter	—	Lets you reset the waste ink counter if you replace the waste ink bottle before being prompted by a message on the control panel.

Parent topic: [Using the Control Panel Menus](#)

Related tasks

[Checking for Clogged Print Head Nozzles](#)

[Cleaning the Print Head](#)

[Replacing the Waste Ink Bottle](#)

Printer Status Menu Settings

The Printer Status menu lets you track printer usage and firmware.

Setting	Options	Description
Print Status Sheet	Print	Prints a sheet showing current printer settings.
Firmware Version	xxxxxxx,x_xx,xxxx	Displays the printer's firmware version.

Parent topic: [Using the Control Panel Menus](#)

Network Setup Menu Settings

The Network Setup menu lets you enter network settings manually if necessary.

Setting	Options	Description
IP Address Setting	Auto Panel	Determines whether IP addresses are obtained automatically through DHCP or manually. Select Panel to enter an IP address, subnet mask, and default gateway address.
Print Status Sheet	Print	Prints the current network status and settings.
Restore Settings	Yes No	Restores all items in the Network Setup menu to their default settings.

Parent topic: [Using the Control Panel Menus](#)

Preference Menu Settings

The Preference menu specifies language and other settings for the printer's controls.

Setting	Options	Description
Date And Time	MM/DD/YY HH:MM	Sets the printer's built-in clock. The time and date are used in logs and status sheets.
Language	Various languages	Selects the language used on the control panel display.

Setting	Options	Description
Unit: Length	m ft/in	Selects the unit of length used on the control panel display and when printing test patterns
Unit: Temperature	°C °F	Selects the temperature units used on the control panel display
Alert Sound Setting	On Off	Enables the alert sound when an error occurs. Press the OK button to turn off the sound.
Alert Lamp Setting	On Off	Enables the alert light when an error occurs.

Parent topic: [Using the Control Panel Menus](#)

Reset All Settings Menu

The Reset All Settings menu lets you turn on the **Alert Lamp Setting** and **Alert Sound Setting**. **On** is the default for these settings.

Setting	Options	Description
Reset All Settings	Yes No	Returns the Alert settings to their defaults.

Parent topic: [Using the Control Panel Menus](#)

Maintenance

See the instructions in these sections to maintain your printer for optimum results.

[When to Maintain Your Product](#)

[Preparing for Maintenance](#)

[Stirring High Density Black Ink](#)

[Replacing the Ink and Chip Unit](#)

[Print Head Maintenance](#)

[Cleaning Around the Print Heads](#)

[Cleaning the Wipers and Wiper Attachment Points](#)

[Cleaning the Anti-drying Caps](#)

[Cleaning the Platen, Pressure Rollers, and Media Holding Plates](#)

[Cleaning the Heat Shield](#)

[Replacing the Waste Ink Bottle](#)

[Replacing the Wiper and Wiper Cleaner](#)

[Replacing the Media Holding Plates](#)

[Applying Carriage Rod Grease](#)

[Using the Spacer](#)

When to Maintain Your Product

See the guidelines here to determine when you perform maintenance operations on your product or replace or refill consumables. If you need to perform an operation, use the links at the end of this topic.

Caution: To prevent sedimentation and incorrect colors in your printed media, stir the High Density Black ink in the ink tank once a week.

Note: You can set up certain maintenance operations to run automatically using settings on your product control panel.

Symptom	Maintenance or consumable operation
A low ink warning appears on the product LCD screen.	Check if you need to replace an ink and chip unit for the indicated color.

Symptom	Maintenance or consumable operation
A prepare and replacement message appears on the LCD screen.	Replace the waste ink bottle.
A message on the product LCD screen tells you to apply carriage rod grease.	Apply carriage rod grease to the carriage rods.
You want to check the print quality for clogged nozzles.	Run a nozzle check to print a check pattern.
A nozzle check pattern indicates clogged nozzles.	Clean the print head.
Print quality has declined.	
Printed media is faint, or contains horizontal stripes or uneven colors.	
Even after cleaning the print head several times, print quality has declined.	Perform the following as necessary: <ul style="list-style-type: none"> • Clean around the print heads. • Clean the wipers and their attachment points. • Clean the anti-drying caps.
Printed media is smudged.	
Ink, paper particles, or lint from the media accumulate on the platen, pressure rollers, or media holding plates.	Clean the platen, pressure rollers, and media holding plates as necessary.
Ink adheres to the heat shield.	Clean the heat shield.
Water or dirt adheres to the front cover.	Clean the front cover.
Ink adheres to the absorber on the back of the wiper cleaner.	Replace the wiper cleaner.
Printed media is faint, smudged, or incomplete and the wiper is torn or deteriorated.	Replace the wiper.
The media holding plates are deformed or damaged.	Replace the media holding plates.
Vertical creases appear in printed media even after adjusting the tension settings.	Use the spacer.

Parent topic: [Maintenance](#)

Related tasks

[Replacing the Waste Ink Bottle](#)
[Replacing the Wiper and Wiper Cleaner](#)
[Replacing the Media Holding Plates](#)
[Applying Carriage Rod Grease](#)
[Checking for Clogged Print Head Nozzles](#)
[Cleaning the Print Head](#)
[Cleaning Around the Print Heads](#)
[Cleaning the Wipers and Wiper Attachment Points](#)
[Cleaning the Anti-drying Caps](#)
[Cleaning the Platen, Pressure Rollers, and Media Holding Plates](#)
[Cleaning the Heat Shield](#)

Related topics

[Replacing the Ink and Chip Unit](#)
[Using the Spacer](#)

Preparing for Maintenance

Before you perform any maintenance procedures, see these sections to prepare for maintenance.

[Maintenance Supplies](#)
[Maintenance Precautions](#)
[Cleaning the Front Cover](#)
[Using Ink Cleaner](#)
[Moving the Print Head for Maintenance](#)

Parent topic: [Maintenance](#)

Maintenance Supplies

Before performing any maintenance tasks or replacing ink, make sure you have the maintenance supplies listed here.

Protective eyewear


Obtain commercially available eyewear to protect your eyes from ink and ink cleaner.

Mask

Obtain a commercially available mask to protect your mouth and nose from ink and ink cleaner.

Maintenance Kit

Use the maintenance kit that came with your product for general cleaning. The kit contains the following items:

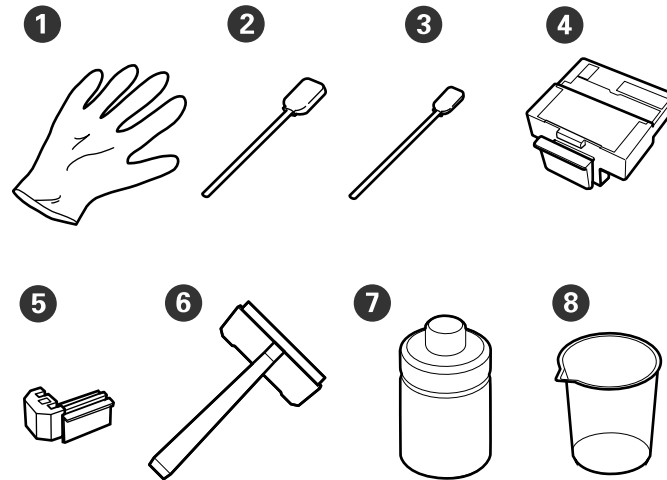

Number	Part	Quantity
1	Gloves	2
2	Cleaning sticks (large)	25
3	Cleaning sticks (small)	25
4	Wiper cleaner	2
5	Wiper	2
6	Cleaning wiper	1
7	Ink cleaner	1
8	Cup	1

Metal or plastic tray


Obtain a commercially available metal or plastic tray to hold cleaning tools and consumables you remove from the product.

Soft cloth or brush

Obtain a commercially available static-free, lint-free soft cloth or brush to clean inside the printer.

Grease Kit

Use the grease kit that came with your product to apply grease to the carriage rods.

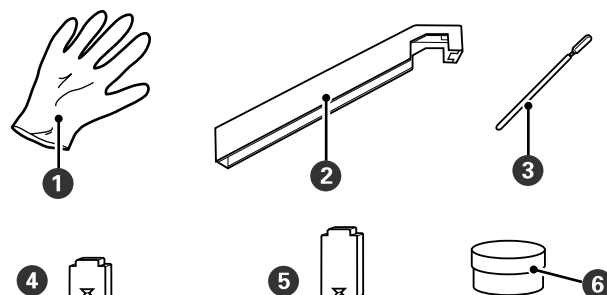

Number	Part	Quantity
1	Glove	16
2	Grease tool	1
3	Cleaning stick	8
4	Pad A	16
5	Pad B	16
6	Secondary carriage rod grease	2

Parent topic: [Preparing for Maintenance](#)

Maintenance Precautions

Follow these precautions as you maintain your product:

- Remove loaded media from the product before performing any maintenance tasks.
- Touch a metal object to discharge any static electricity before performing any maintenance tasks.
- Never touch the belts, cables, circuit boards, or other parts not covered in the maintenance task steps or you could adversely affect the print quality or damage your product.
- Use only the cleaning sticks included in the product maintenance kit to clean your product to avoid damaging the print head.
- Do not reuse cleaning sticks.

- Do not touch the ends of the cleaning sticks to prevent oil from your hands from damaging the print head.
- Do not use alcohol or water to clean the nozzle surface, caps, or wiper or you may damage your product.
- Store ink packs, secondary carriage rod grease, and waste ink out of the reach of children.
- Wear protective eyewear, gloves, and a mask when performing maintenance tasks.
- Wash your hands after performing maintenance.

Warning: If ink, waste ink, ink cleaner, or secondary carriage rod grease contact your skin, or get into your eyes or mouth, immediately do the following:

- Thoroughly wash the substance from your skin with soapy water. If your skin becomes irritated or discolored, contact a doctor.
- Immediately rinse the substance from your eyes with water to avoid bloodshot eyes or mild inflammation. If you experience eye problems, contact a doctor.
- If a substance gets in your mouth, contact a doctor immediately.
- If you swallow a substance, do not induce vomiting and contact a doctor immediately. Inducing vomiting may cause material to get in your windpipe and cause injury.

Parent topic: [Preparing for Maintenance](#)

Related references


[Maintenance Supplies](#)

Cleaning the Front Cover

When using the heater, condensation may form on the front cover, causing water to drip and stain the media. Wipe any water or dirt from the front cover using a damp, soft cloth.


1. Remove the media from the printer.
2. Turn the printer off and unplug it.

3. Wipe any water or dirt from the front cover with a damp, soft cloth.

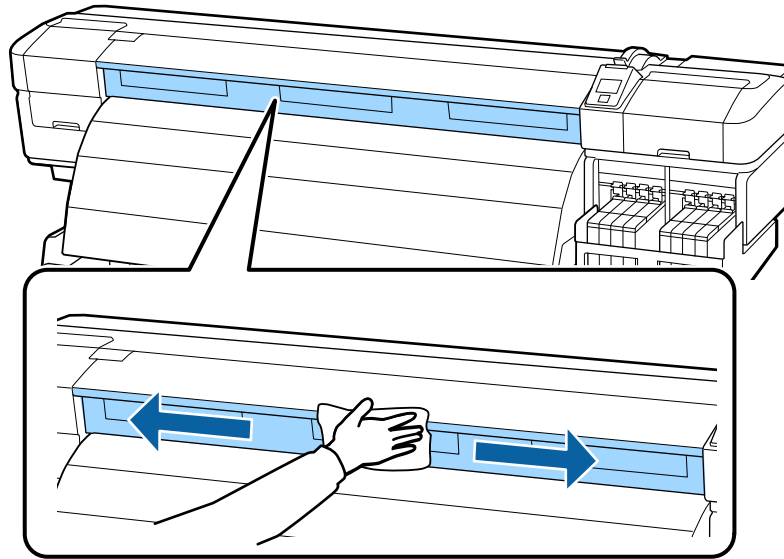

4. Open the front cover.

5. Wipe any water or dirty from inside the front cover.

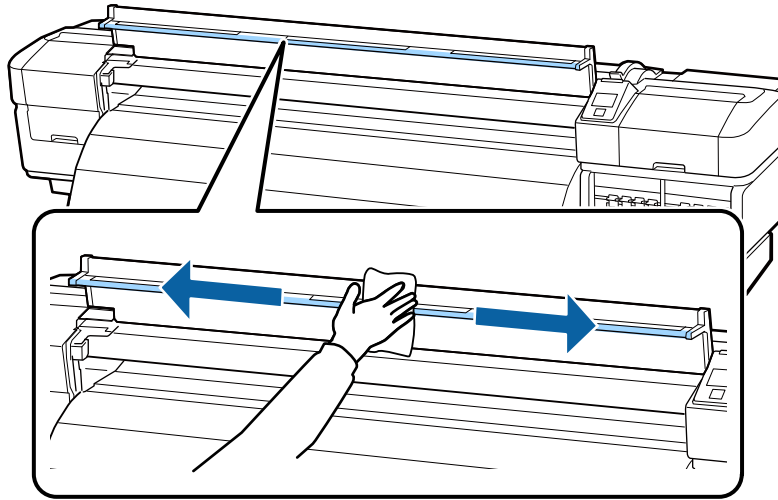

6. Close the front cover.

Parent topic: [Preparing for Maintenance](#)

Using Ink Cleaner


Use the ink cleaner and cup that came in the maintenance kit to clean only around the print head and caps. Whenever you use the ink cleaner, follow the steps here.

Caution: Using ink cleaner on any other parts of your product could damage the product.


Be sure to do the following:

- Store ink cleaner at room temperature and out of direct sunlight.
- Use fresh ink cleaner with a fresh cleaning stick each time; do not reuse them.
- Dispose of used cleaning sticks and ink cleaner according to local disposal regulations.

1. Place the cup on a try and pour approximately 0.3 ounce (10 ml) of ink cleaner into the cup.

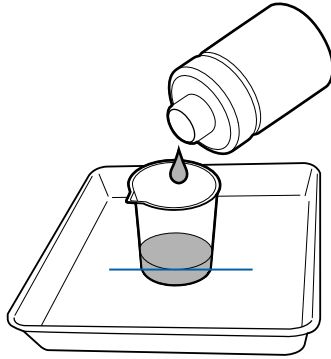

2. Recap the ink cleaner bottle.
3. Dip a fresh cleaning stick into the ink cleaner and let any excess drip into the cup.

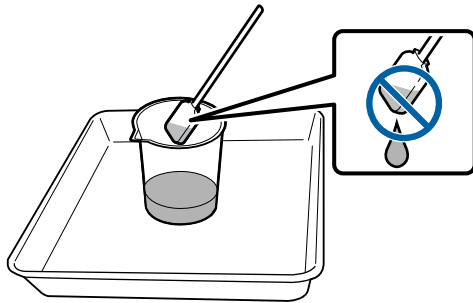


Parent topic: [Preparing for Maintenance](#)

Moving the Print Head for Maintenance

Certain maintenance tasks require that you move the print head as described here before performing the task.

Caution: Always move the print head as described here. Do not move the print head manually or you may cause your product to malfunction.

1. When the product is turned on, press the  maintenance button on the control panel.
You see the Maintenance menu.
2. Press the up or down arrow buttons on the control panel to select **Head Maintenance** and press the **OK** button.
The print head moves into maintenance position.
3. Perform your maintenance task as necessary.


Note: After 10 minutes, a alarm sounds to warning you that the print head is still in maintenance position. You also see a notice on the LCD screen telling you to clean the print heads after maintenance. After completing your maintenance task, press the **OK** button to clean the print heads. The alarm sounds again at 10 minute intervals if the print heads are not in the home position.

Parent topic: [Preparing for Maintenance](#)


Stirring High Density Black Ink

To prevent sedimentation and incorrect colors in your printed media, stir the High Density Black ink in the ink tank once a week.


1. Open the ink inlet cover for the High Density Black ink shown here.

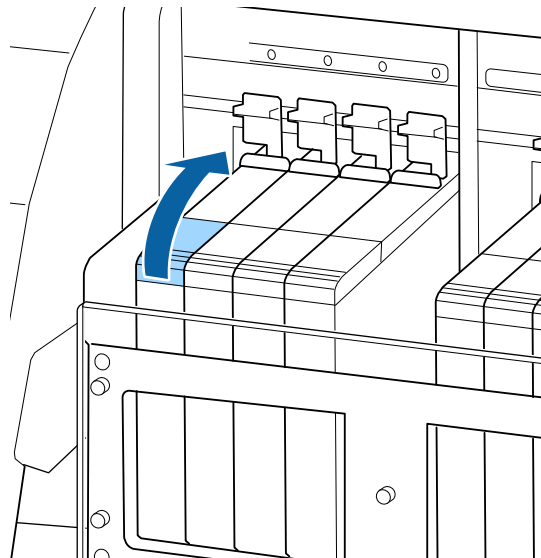

2. Grasp the loop at the top of the ink inlet cap and slowly remove the ink inlet cap.

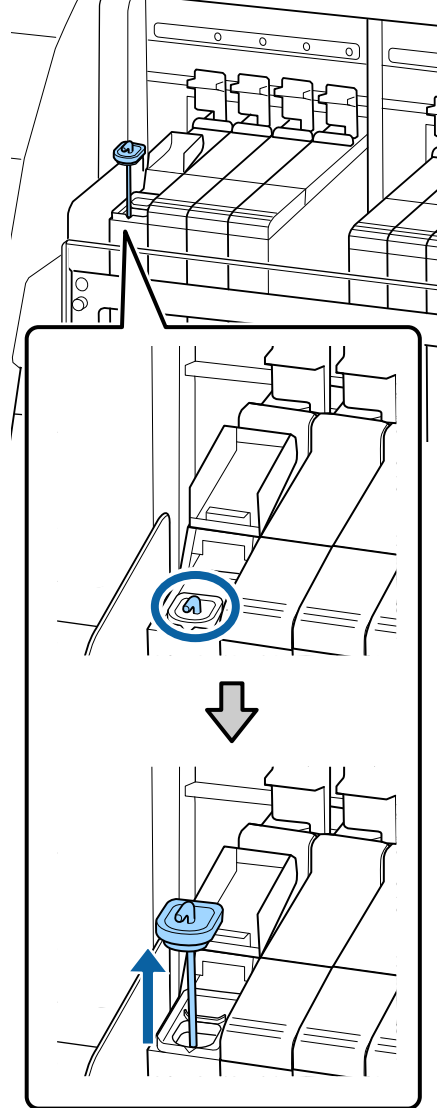


3. Move the stirring stick up and down 15 times. Insert the stick completely into the ink tank and raise the stick up to the top each time.

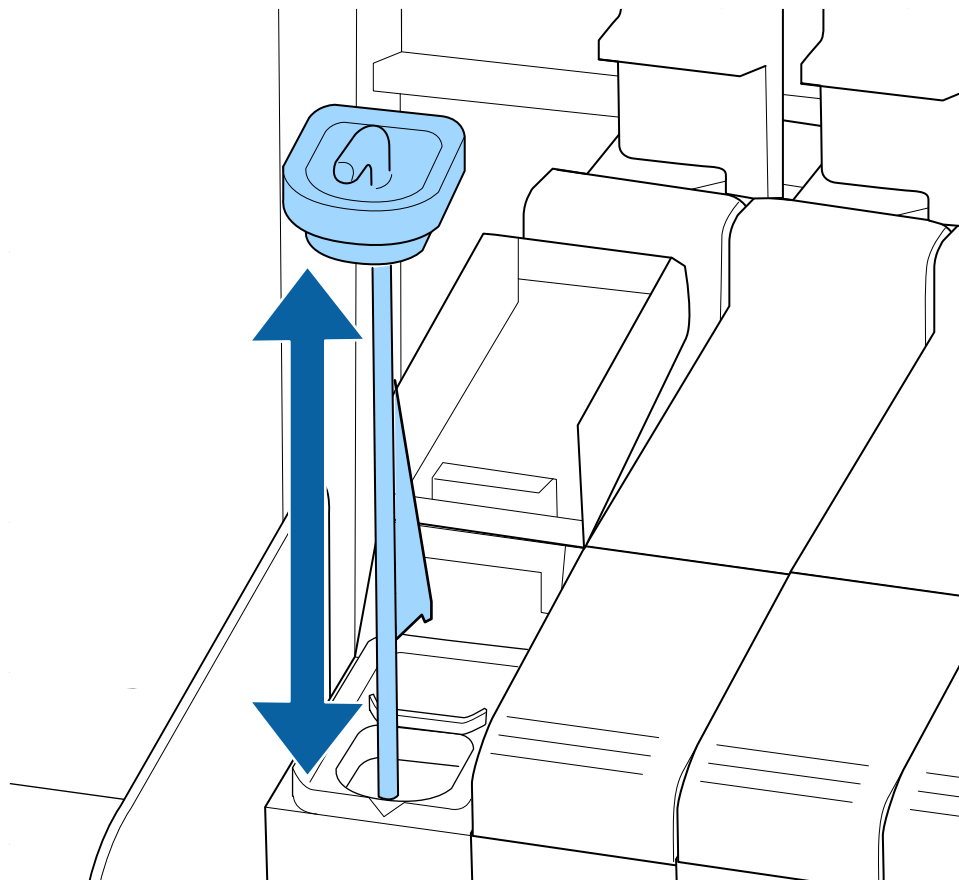


Caution: Move the stick slowly and steadily, or ink may splatter.

4. Insert the stirring stick into the ink tank and replace the ink inlet cap

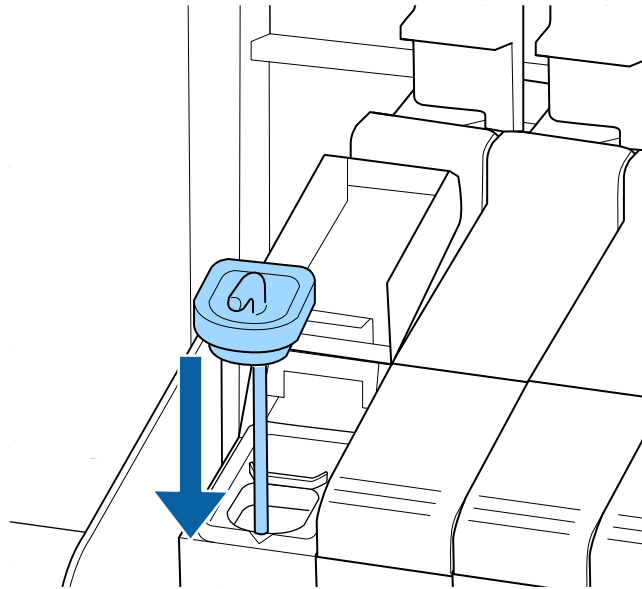

Caution: Press the ink inlet cap down firmly. If the slider comes into contact with the ink inlet cap when pulling it out, the cap could get damaged.

5. Close the ink inlet cover.

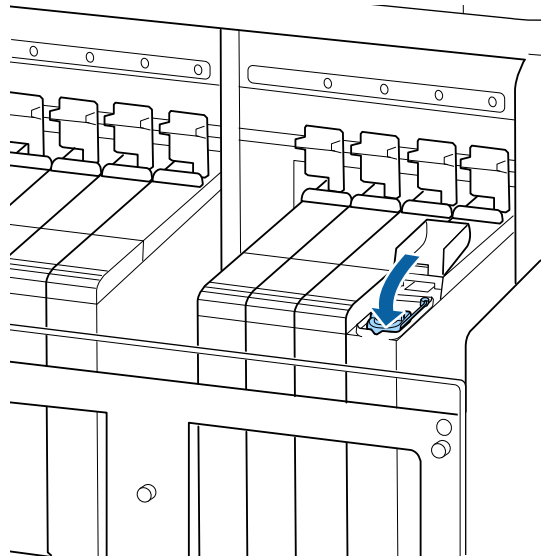

Parent topic: [Maintenance](#)

Replacing the Ink and Chip Unit

See these sections to replace the ink chip unit in your product.

[About Ink and Chip Unit Replacement](#)

[Ink and Chip Unit Precautions](#)

[Replacing the Chip Unit and Refilling Ink](#)

Parent topic: [Maintenance](#)

Related references

[Consumables and Replacement Parts](#)

About Ink and Chip Unit Replacement

When the message **Check Ink Levels** is displayed on the LCD screen, you need to refill the ink and replace the chip unit soon. Obtain an ink pack of the appropriate color as soon as possible.

You will be unable to print if a chip unit needs to be replaced. If the **Check Ink Levels** message is displayed during a print job, the print job pauses while you refill the ink and replace the chip unit. You can use the same procedure to refill the ink and replace chip units for all colors.

Note: When the message **Refill Ink Tank** is displayed on the LCD screen and the remaining ink level is greater than 2.8 in. (70 mm) from the base of the ink tank, it is time to replace the ink tank. The ink tank must be replaced because fine dirt, dust, and other foreign material causes the ink tank's filter to malfunction. The ink tank replacement interval depends on the usage environment and conditions. Contact Epson Support for information on replacing components.

Note: Your product has a remaining ink warning system. This system does not directly detect the amount of ink remaining in the ink tank. Instead, the amount of ink remaining is estimated based on the ink usage conditions and displayed as a message. The accuracy of this system depends on consistent and proper ink refills.

If the procedure for replacement and ink refilling here is not followed correctly, the remaining ink warning system may not function properly. To prevent this, replace the chip unit and refill the ink as soon as possible once the remaining ink level falls below 2.8 inches (70 mm) from the base of the ink tank.

Parent topic: [Replacing the Ink and Chip Unit](#)

Related tasks

[Replacing the Chip Unit and Refilling Ink](#)

Ink and Chip Unit Precautions

Follow these precautions as you refill the ink in your product:

- Store ink packs in a location out of the reach of children.
- Wear protective eyewear and gloves when refilling ink.
- Be sure to read the Safety Data Sheet (SDS) before using ink packs. You can download it from epson.com/proimaging.
- Gently cut or tear off the ink pack spout seal. If you cut the ink pack spout seal too quickly, ink may splatter.
- Do not squeeze open ink packs. Ink may spill.
- Gently tilt the ink pack when pouring ink into the ink tank.
- Do not place anything on the ink tank or subject it to strong impacts, or the ink tank could detach.
- Do not switch between High Density Black ink and Black inks in the same ink tank. You must contact Epson Support to have a service engineer replace the type of ink being used in an ink tank.

- Epson recommends the use of genuine Epson ink packs.
- Epson cannot guarantee the quality or reliability of non-genuine ink. The use of non-genuine ink may cause damage that is not covered by Epson's warranties, and under certain circumstances, may cause erratic printer behavior.
- Information about non-genuine chip unit status may not be displayed, and use of non-genuine ink is recorded for possible use in service support.

Warning: Should ink contact your skin or enter your eyes or mouth, immediately take the following actions:


- If fluid contacts your skin, immediately wash it off using large volumes of soapy water. Consult a physician if the skin appears irritated or discolored.
- If fluid enters your eyes, rinse them immediately with water. Failure to observe this precaution could result in bloodshot eyes or mild inflammation. If problems persist, consult with a physician.
- If swallowed, do not induce vomiting and consult with a physician immediately. Inducing vomiting may cause material to get in your windpipe and cause injury.

Parent topic: [Replacing the Ink and Chip Unit](#)

Replacing the Chip Unit and Refilling Ink

Follow the steps here to replace the chip unit and refill the ink in your product.

1. When the message **Check Ink Levels** appears on the LCD screen, use the scale on the ink pack to check how much ink is left in the ink tank.

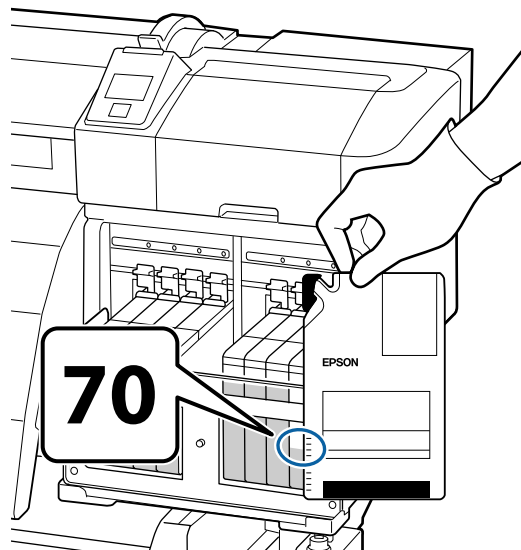


If the remaining ink level is greater than 2.8 in. (70 mm) from the base of the ink tank, continue to use the printer until the remaining ink level is 2.8 in. (70 mm) from the base of the ink tank so that you can use all the ink in a new ink pack to refill the ink tank.


If the remaining ink level is 2.8 inches (70 mm) or less, go to the next step.

Note: When the message **Refill Ink Tank** is displayed on the control panel screen and the remaining ink level is greater than 2.8 in. (70 mm) from the base of the ink tank, it is time to replace the ink tank. The ink tank must be replaced because fine dirt, dust, and other foreign material causes the ink tank's filter to malfunction. The ink tank replacement interval depends on the usage environment and conditions. Contact Epson Support for information on replacing components.

2. Lift the lock lever for the slider of the chip unit you intend to replace.

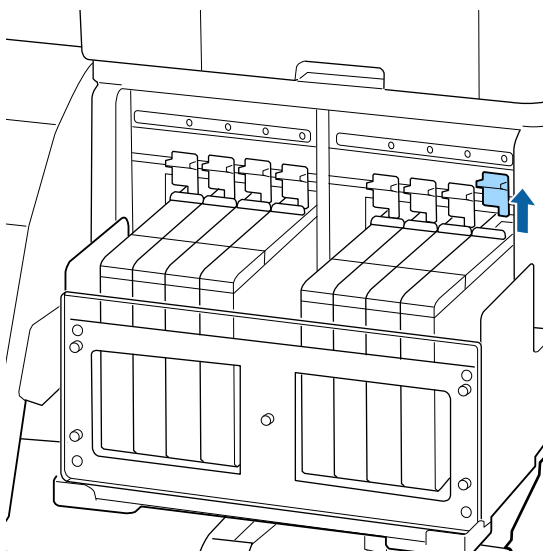


3. Insert a finger into the groove on the top of the slider and pull the slider straight out.

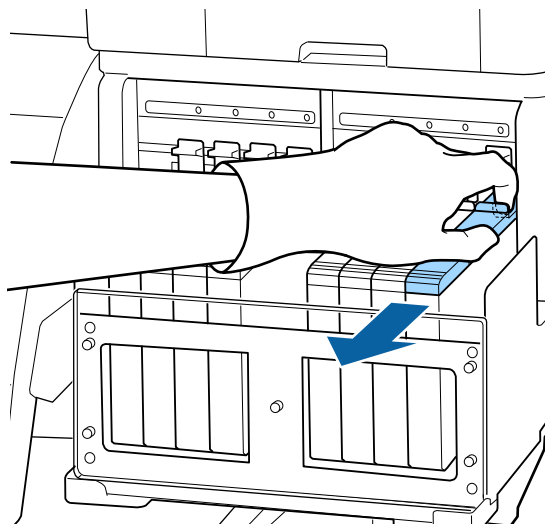


Caution: Do not tilt the slider. If you drop the chip unit, it may break.


4. Remove the chip unit from the slider.

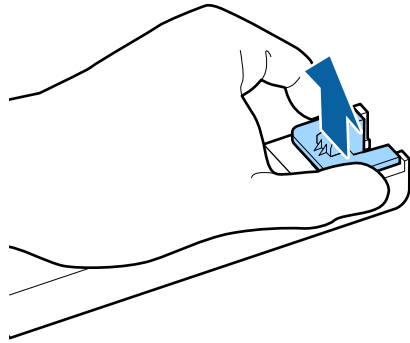

5. Confirm that the label color on the slider matches the label on the new ink pack. Then attach the chip unit supplied with the new ink pack to the slider.

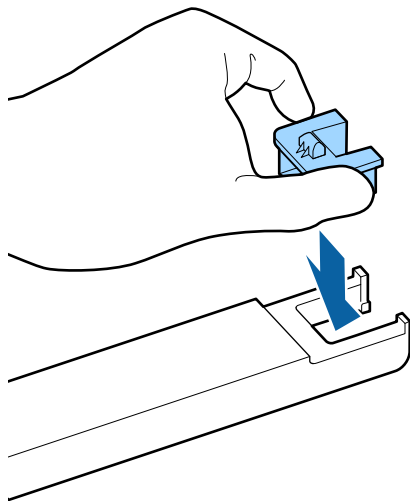


6. Hold the slider level and insert it. Lower the lock lever.

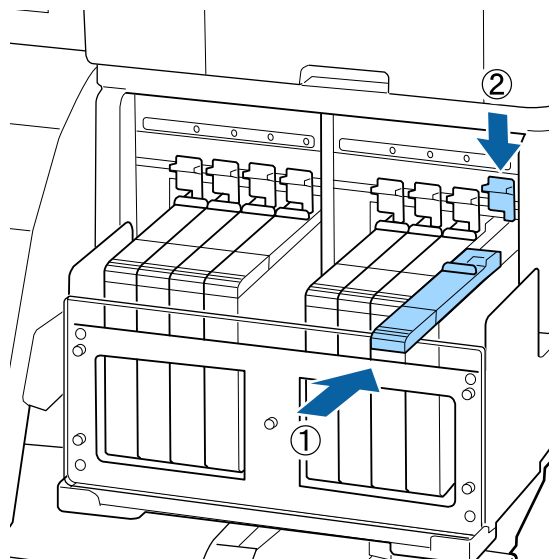


Caution: Do not push the slider in with too much force. Failure to observe this precaution could damage the printer.

7. Shake the new ink pack horizontally approximately 2 inches (5 cm) left and right for 5 seconds (approximately 15 times).

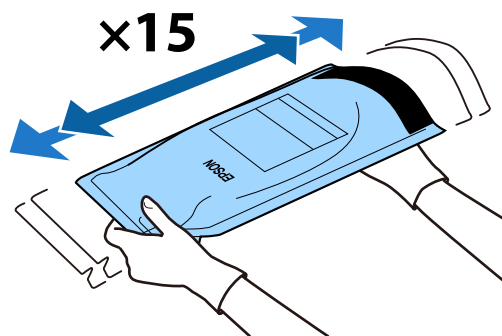


8. Open the ink inlet cover.

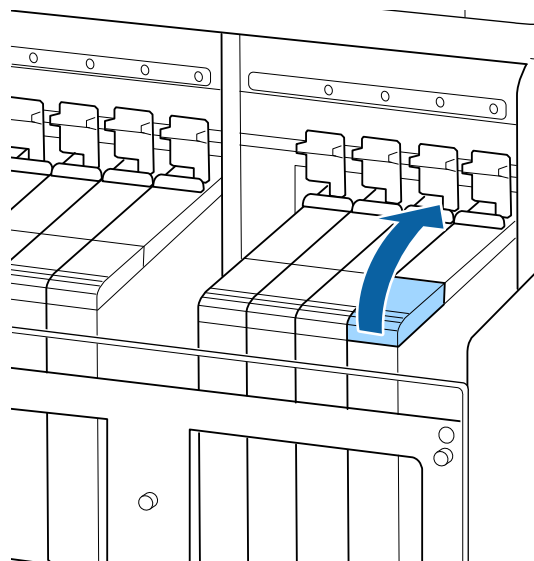


9. Do the following:



- For all ink colors except High Density Black ink, remove the ink inlet cap from the ink tank.

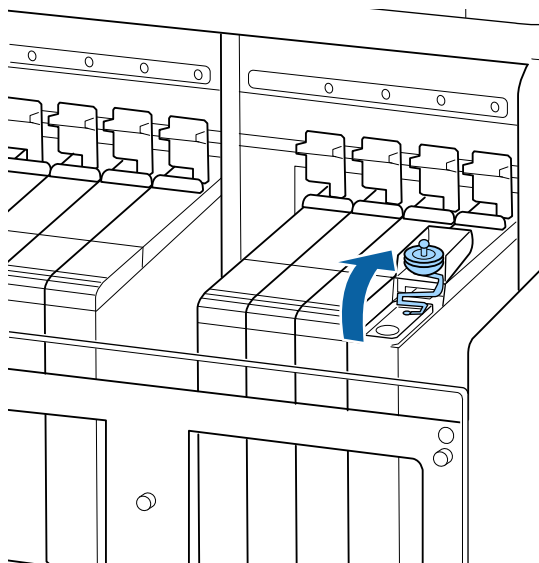


- For the High Density Black ink, grasp the loop at the top of the ink inlet cap and slowly remove the ink inlet cap.

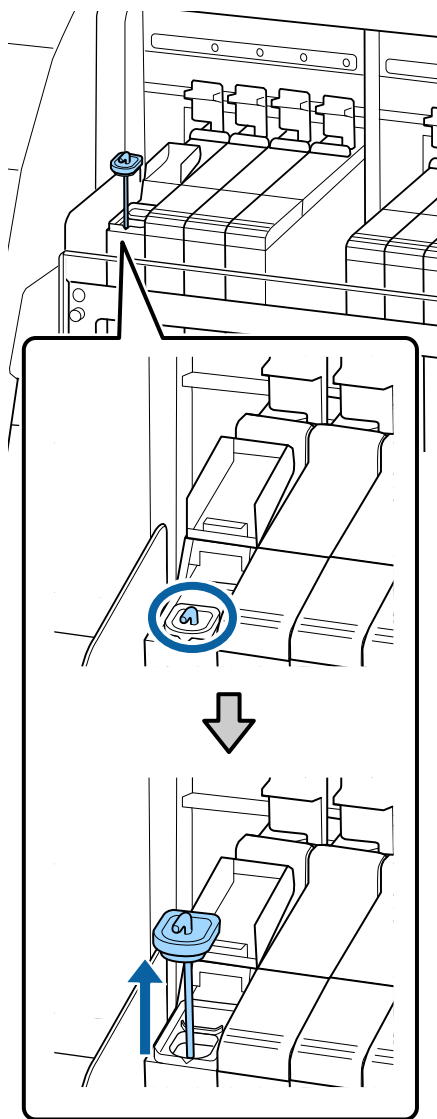


Rest the stirring stick on the tab at the edge of the tank as shown.

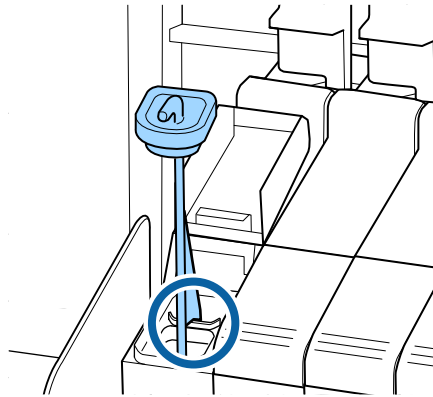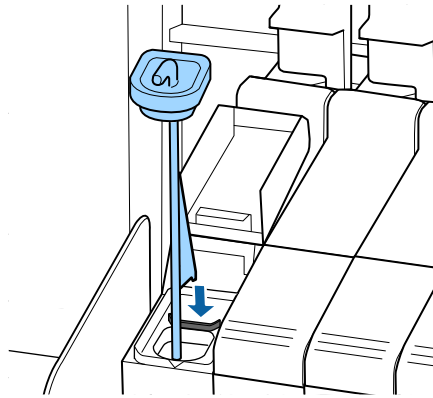

10. Cut or tear off the ink pack spout seal.

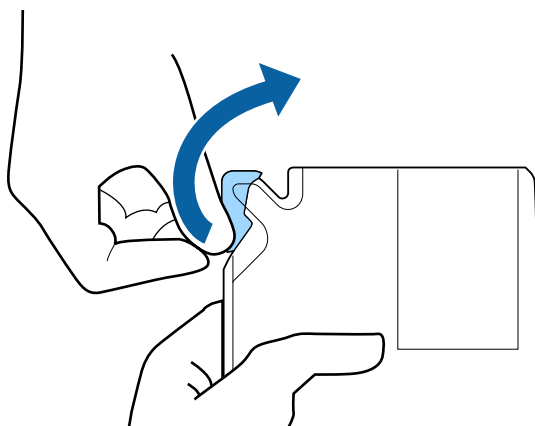


11. Insert the spout of the ink pack into the groove and slowly tilt it to pour out the ink.

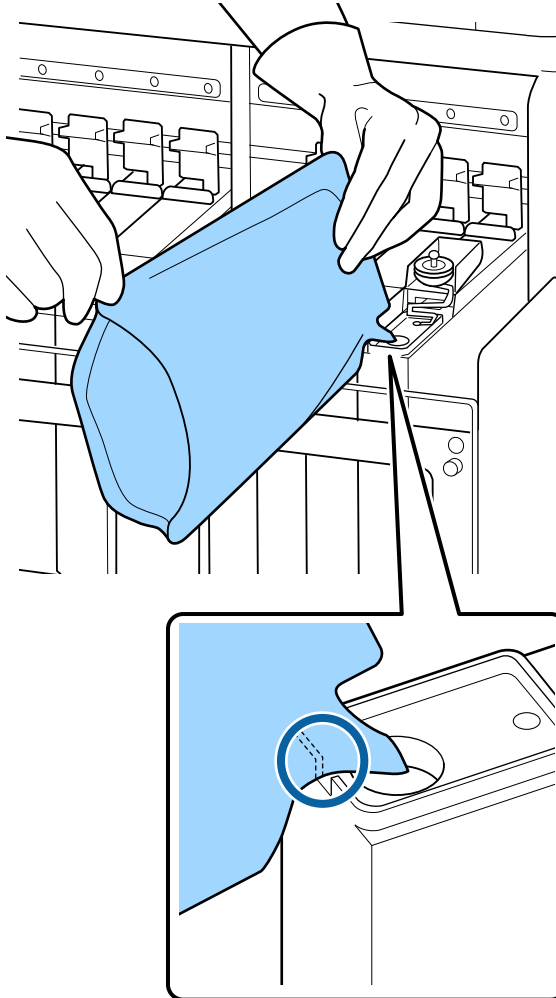


Note: Be sure to completely empty the ink pack into the tank. Do not use an ink pack to refill multiple ink tanks. This can prevent the proper display of messages from the remaining ink warning system.

12. Do the following:

- For all ink colors except High Density Black ink, replace the ink inlet cap.

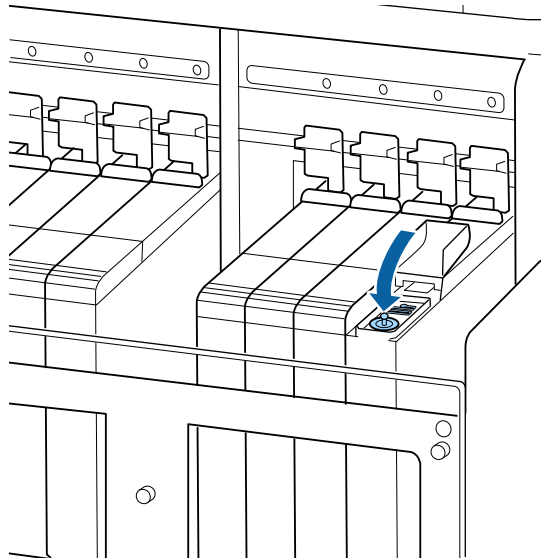


- For the High Density Black ink, lift up the stirring stick, guide it into the ink tank, and replace the ink inlet cap as shown.

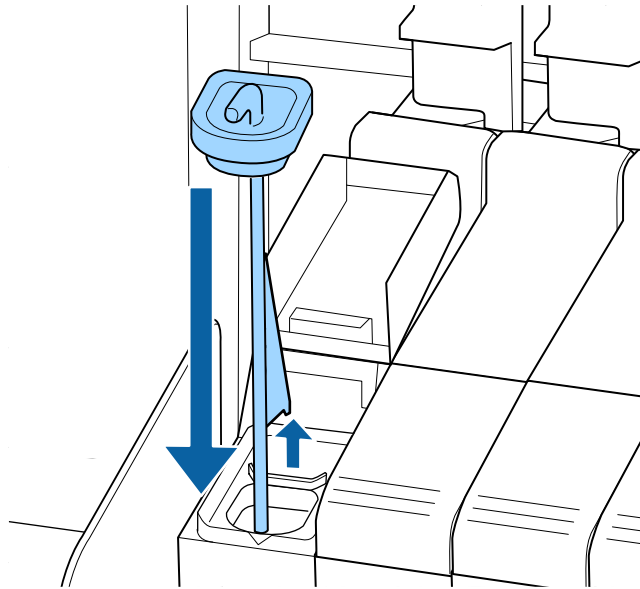

Caution: Press down the ink inlet cap firmly so it does not interfere with the slider and damage the ink inlet cap.

13. Close the ink inlet cover.

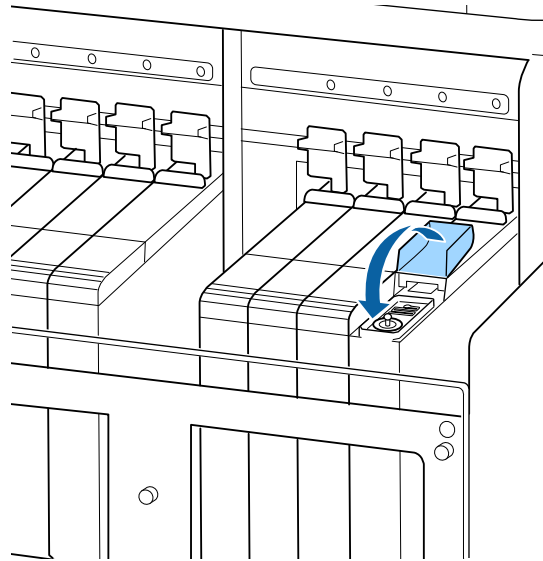

Note: If ink adheres to the heat shield, clean the heat shield.

Parent topic: [Replacing the Ink and Chip Unit](#)

Related concepts

[About Ink and Chip Unit Replacement](#)

Related references

[Ink and Chip Unit Precautions](#)

[Where to Get Help](#)

[Consumables and Replacement Parts](#)

Related tasks

[Cleaning the Heat Shield](#)

Print Head Maintenance

Print head maintenance ensures the best print quality.

Perform the following maintenance as necessary:

- **Nozzle Check:** Check for clogged nozzles before each print job or if you have not used the printer for an extended period of time. Inspect the printed check pattern and clean the print head if you notice faint or missing areas.
- **Head Cleaning:** Clean the print head if you notice faint areas or gaps in the printed result.

[Checking for Clogged Print Head Nozzles](#)

[Cleaning the Print Head](#)

Parent topic: [Maintenance](#)

Checking for Clogged Print Head Nozzles

To maintain optimum print quality, perform a nozzle check before printing. This lets you visually inspect the printed check pattern and clean the nozzles, if necessary. There are two ways to check the nozzles:

- Set up the product to automatically print a check pattern before each print job. You can select how often the product performs a nozzle check in the **Printer Setup** menu.
- Manually run a nozzle check from the product control panel, as described here.

1. Press the  maintenance button.


You see the **Maintenance** menu on the product LCD screen.

2. Select **Nozzle Check**, select the print position for the check pattern, and press the **OK** button.

The product prints a nozzle check pattern.

3. Check the printed pattern to see if there are gaps in the lines.

Nozzles are clean

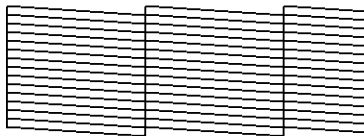

Nozzles need cleaning



4. If there are no gaps, the print head is clean and you can continue printing.

If there are gaps or the pattern is faint, clean the print head.

Parent topic: [Print Head Maintenance](#)

Related references

[Printer Setup Menu Settings](#)

[Maintenance Menu Settings](#)

Related tasks

[Loading Media](#)

[Cleaning the Print Head](#)

Cleaning the Print Head


If printouts are faint or have gaps, you should clean the print head to clear the clogged nozzles. Clean the print head only if print quality declines or image colors are incorrect. You can clean the print head when printing is paused, if necessary, but the colors in your printout may change when you resume printing.

Note: You can also set up the product to automatically clean the print head at selected intervals using the **Periodical Cleaning** setting in the **Printer Setup** menu.

You can select from three levels of head cleaning:

- **Execute (Light):** Use this cleaning level first.
- **Execute (Medium):** Use this cleaning level if you cannot clear the clogged nozzles after cleaning with the light level.
- **Execute (Heavy):** Use this cleaning level if you cannot clear the clogged nozzles after cleaning with the medium level.

Note: If colors are faint or missing even after cleaning the print head, manually clean around the print head inside the product.

1. Press the  maintenance button on the control panel.
You see the **Maintenance** menu. (If printing is paused, you do not see the menu; go to step 3.)
2. Press the up or down arrow button to select **Cleaning** and press the **OK** button.
3. Press the up or down arrow button to choose one of the following cleaning options:
 - **All Nozzles:** Select this option when you see faint printing or gaps in all rows of nozzles in the check pattern. Go to step 5.
 - **Selected Nozzles:** Select this option when you see faint printing or gaps in only certain rows of nozzles in the check pattern. You can select to clean multiple nozzle rows, if necessary.
4. To select the nozzle rows for cleaning, press the up or down arrow button to highlight the row number and press the **OK** button. Repeat for each row you want to clean. When you finish, select **Proceed** and press the **OK** button.
5. Press the up or down arrow button to select the cleaning level and press the **OK** button.
Print head cleaning starts. When it is complete, the menu closes.

Note: If you paused printing to clean the print head, printing resumes when cleaning is finished.

6. Print a nozzle check pattern or check your printout to confirm that the nozzles are cleared.

Parent topic: [Print Head Maintenance](#)

Related references


[Printer Setup Menu Settings](#)

Related tasks


[Checking for Clogged Print Head Nozzles](#)

Cleaning Around the Print Heads

Clean around the print heads to remove any ink, lint, or dust that could affect print quality.

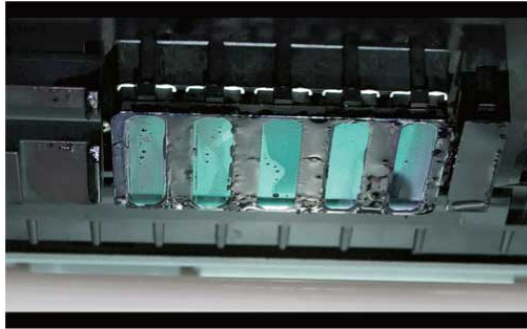


1. Before you clean around the print heads, move the print heads into maintenance position.
2. Open the left maintenance cover.

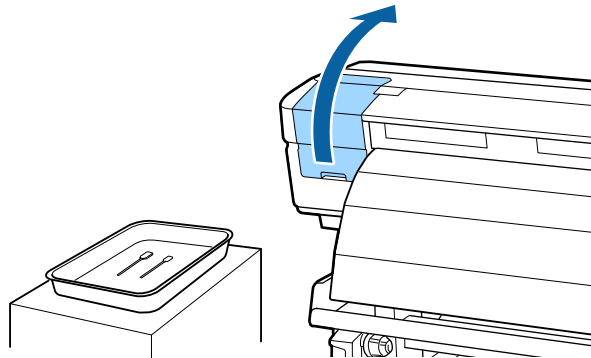


3. Dampen a new, large cleaning stick with ink cleaner.


4. Using a cleaning stick, wipe off any ink from the parts shown here in the direction of the arrow. Use the tip of the cleaning stick to remove any lint or dust from the area.

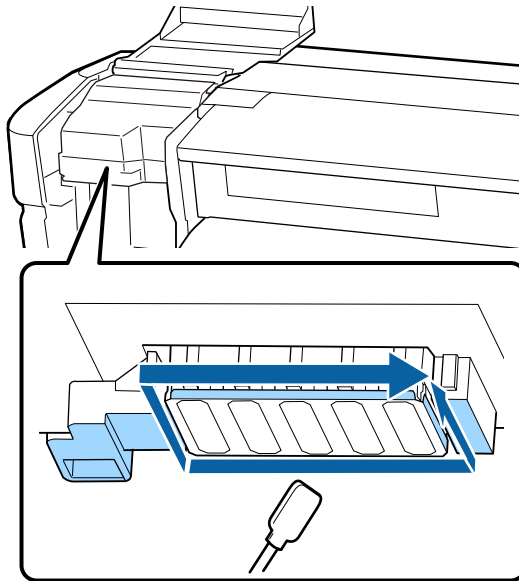


Note: Do not touch the parts shown here during cleaning or you could adversely affect the print quality.

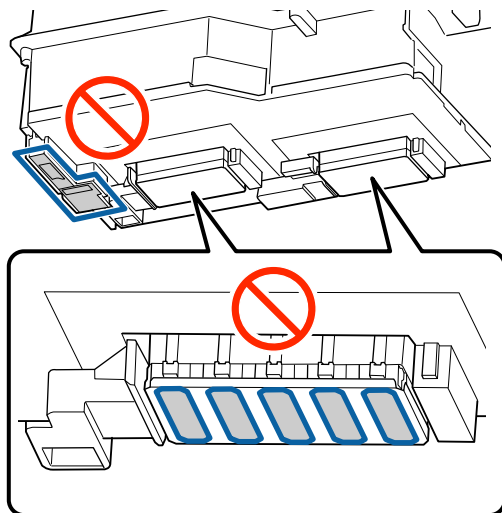

5. Repeat step 3 to clean the right print head as shown here.

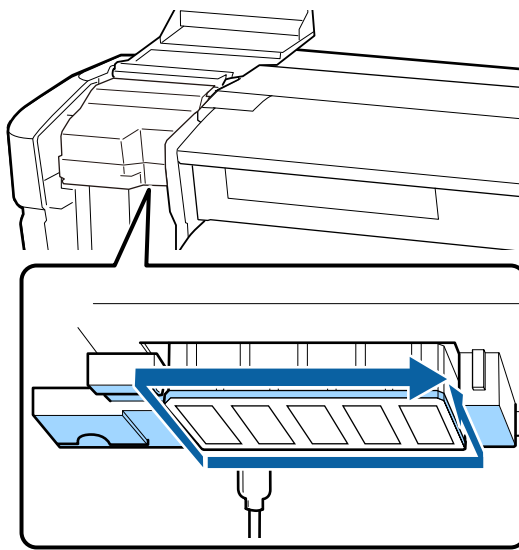


6. Using the tip of a small cleaning stick and wiping in one direction, clean any ink from between the nozzles on both print heads as shown here. Clean only the areas shown below.

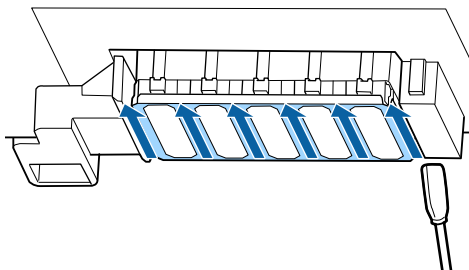


Caution: Do not press on the nozzles with excessive force or you may damage them. Do not move the cleaning stick back and forth; wipe in one direction only.


7. Dampen the large cleaning stick with the ink cleaner, then wipe away any dust and dirt on the front, back, and sides of the wiper blade.

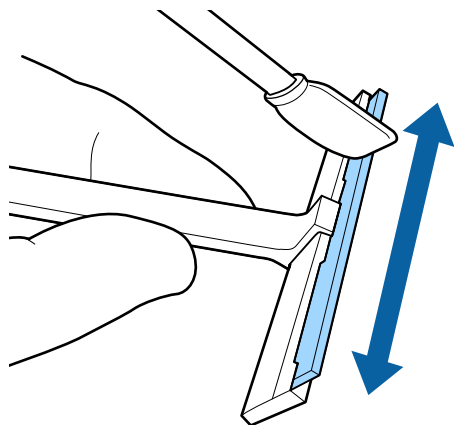


8. Wipe away ink stains and so on from the print head surface by moving the cleaning wiper from the inside toward you once.

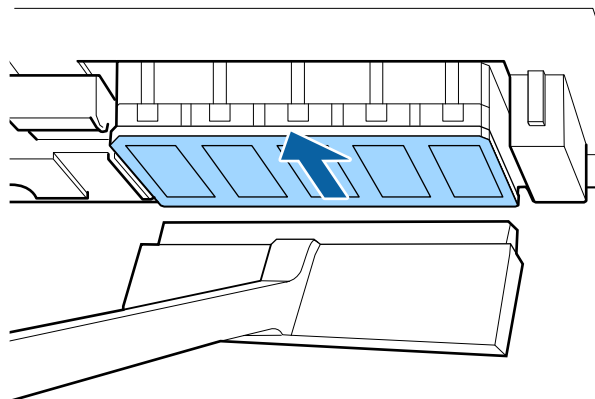

Caution: Do not move the cleaning wiper back and forth or you may damage the print head.

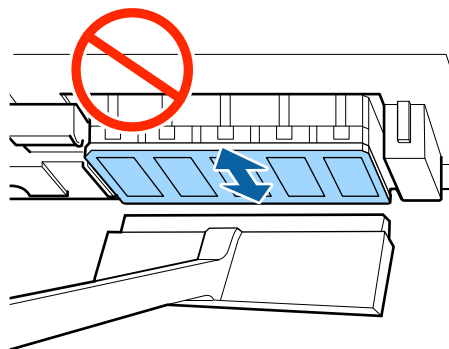

Your cleaned print heads should look like this:

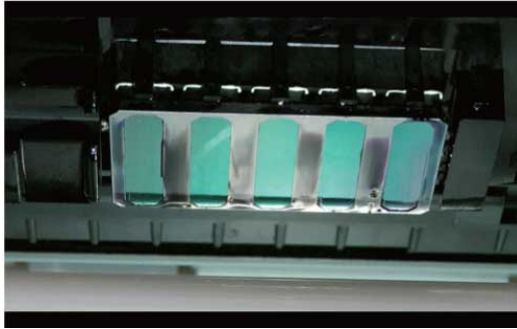

If any dust or lint remains on the print head, clean it again using the the cleaning wiper.

9. Wipe stains off the cleaning wiper, and store it in a location that is not exposed to dust and away from direct sunlight.
10. Close the left maintenance cover.

Parent topic: [Maintenance](#)

Related references

[Maintenance Supplies](#)

[Maintenance Precautions](#)


Related tasks

[Moving the Print Head for Maintenance](#)


Cleaning the Wipers and Wiper Attachment Points

Clean the wipers and the wiper attachment points to remove any ink, lint, or dust that could affect print quality.


1. Open the right maintenance cover.

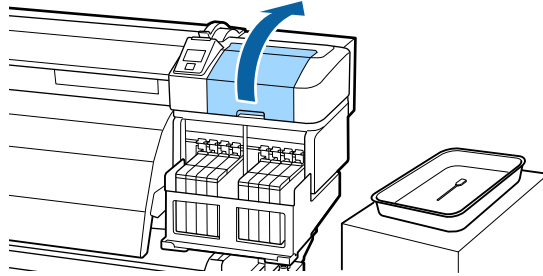



2. Hold the wiper by the attachment point, tilt it to the left as shown, and lift it out of the product.

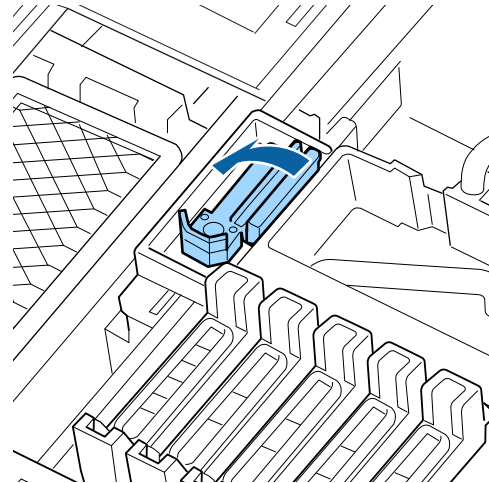


3. Dampen a new, large cleaning stick and clean the front and back of the wiper.

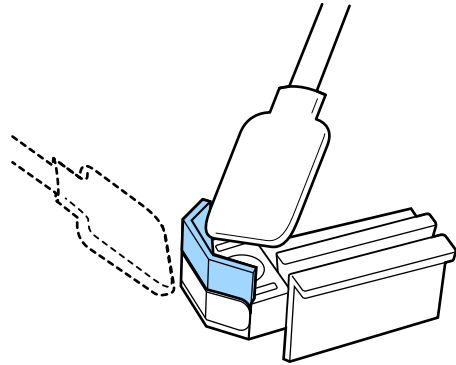


Caution: If the wiper has split or broken as shown here, replace the wiper.

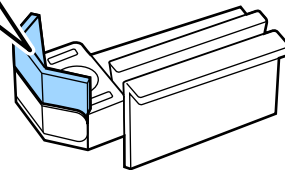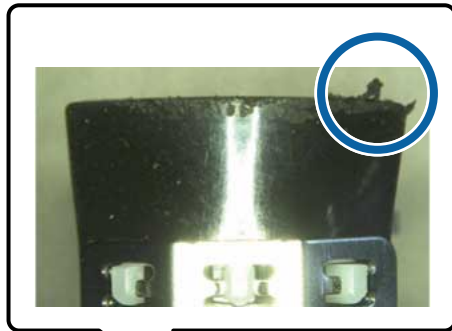


4. Clean the bottom of the wiper as shown here.

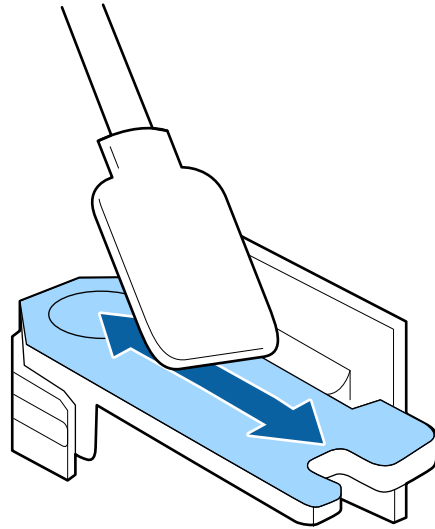

5. Inside the product, clean the wiper attachment points as shown here.

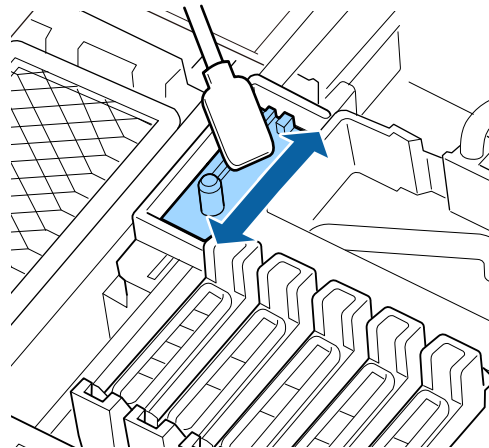

6. Install the wiper on the attachment points and press the wiper down until you hear it click into place.

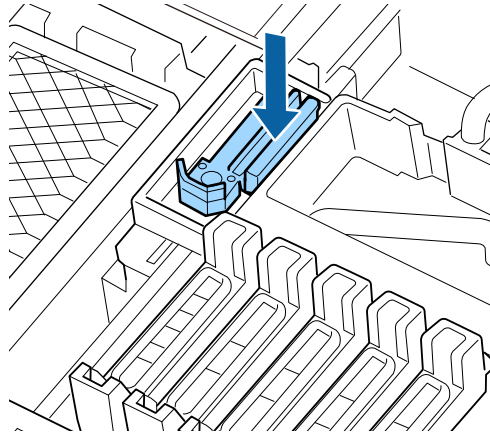

7. Repeat these steps to clean the other wiper and its attachment points.
8. Now clean the anti-drying caps.

Parent topic: [Maintenance](#)

Related references

[Maintenance Supplies](#)

[Maintenance Precautions](#)

Related tasks

[Moving the Print Head for Maintenance](#)


[Cleaning the Anti-drying Caps](#)

Cleaning the Anti-drying Caps


Clean the anti-drying caps to remove any ink that may affect print quality.

1. Dampen a new, small cleaning stick with ink cleaner.


2. Holding a cleaning stick perpendicularly, wipe off any ink from inside the caps as shown here.

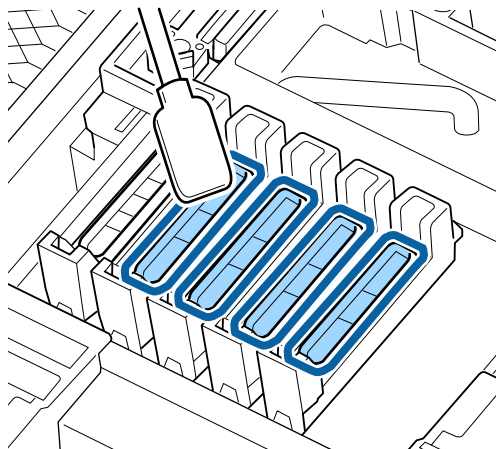


Note: Do not touch the inside of the suction caps shown here to avoid damaging the caps and preventing the print head from capping correctly.

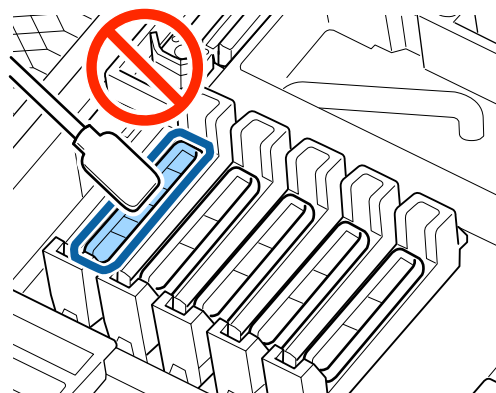


3. Wipe around the outsides of the caps in the same manner.

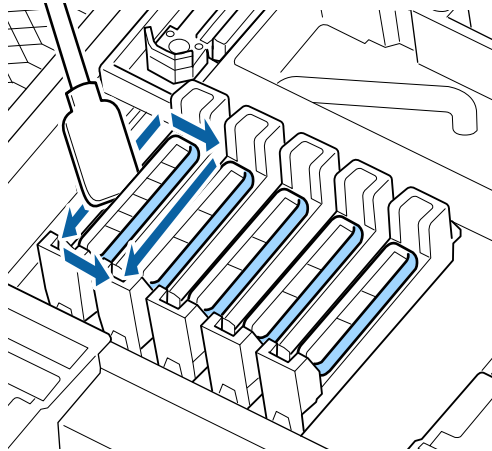


4. Wipe inside the guides shown here in the same manner.

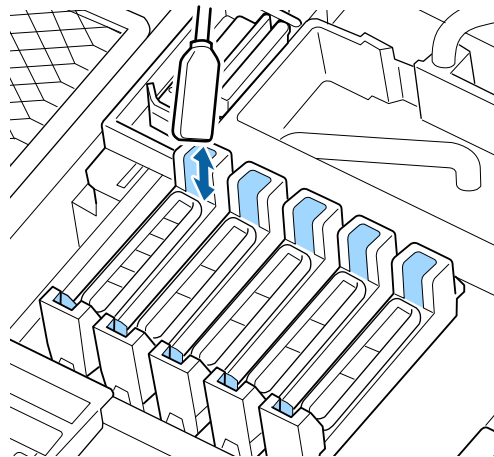

5. Holding a new cleaning stick perpendicularly, wipe off any ink from inside the caps as shown here.

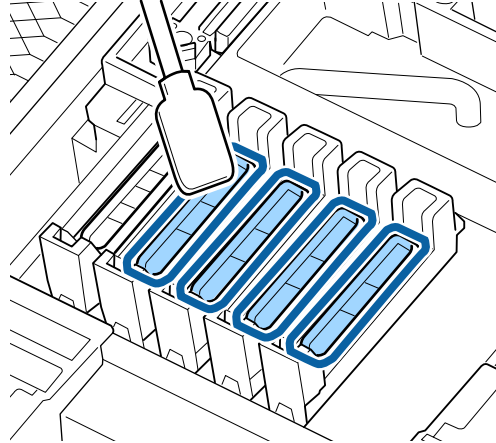

Note: Do not touch the inside of the suction caps shown here to avoid damaging the caps and preventing the print head from capping correctly.

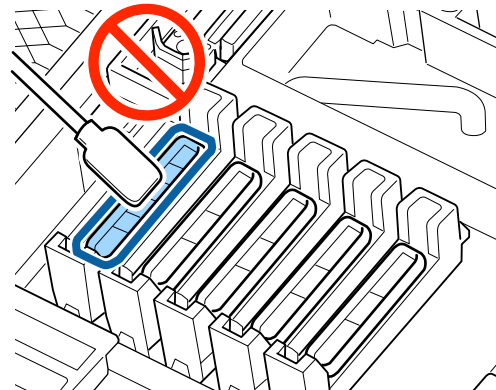

6. Close the maintenance cover and press the **OK** button twice.

Parent topic: [Maintenance](#)

Related references

[Maintenance Supplies](#)

Cleaning the Platen, Pressure Rollers, and Media Holding Plates

Carefully follow the steps here to clean the platen, pressure rollers, and media holding plates to remove ink, paper particles, and lint.


Caution:

- If ink remains on these parts, it could transfer to your printouts. Continued use of your product with ink, paper particles, or lint on these surfaces could damage the print heads or clog the nozzles.
- The after heater may be hot; take care not to burn yourself.

Note: Do not use ink cleaner when cleaning the platen, high pressure rollers, or media holding plates.


1. Turn off the product, wait for the LCD screen to turn off, and unplug the power cable from the electrical outlet.
2. Wait for one minute before continuing.
3. Open the front cover.
4. Raise the media loading lever.

5. Using a dry soft cloth, wipe from side to side between the platen and the pressure rollers as shown here. Then wipe over the top of the pressure rollers.

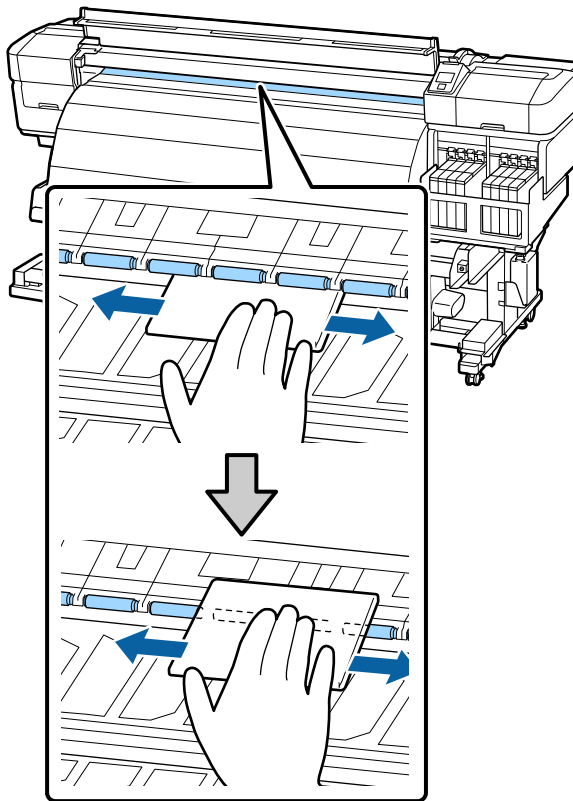


Caution: Do not press on the rollers with excessive force or you may detach them.

6. Using a brush or soft cloth lightly dampened with water, wipe side to side over the platen to clean it as shown here. Also remove any lint or dust from the groove in the platen.

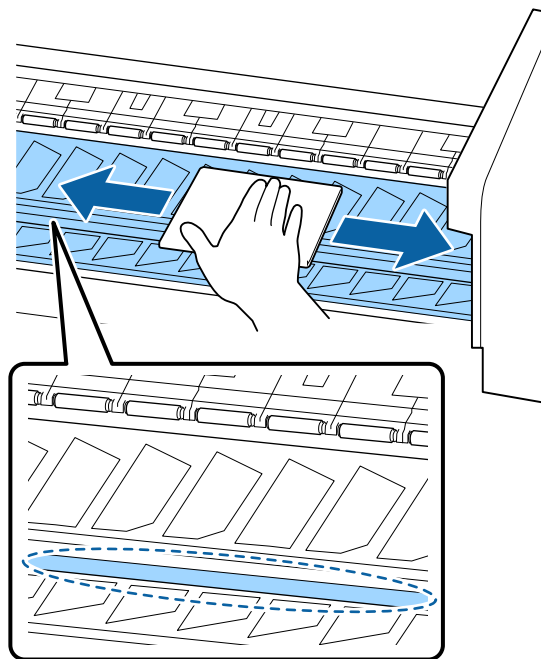

7. Using a soft cloth lightly dampened with water, wipe the media holding plates to clean them. If ink or media glue adheres to the media holding plates, remove the plates and clean both sides as shown here.

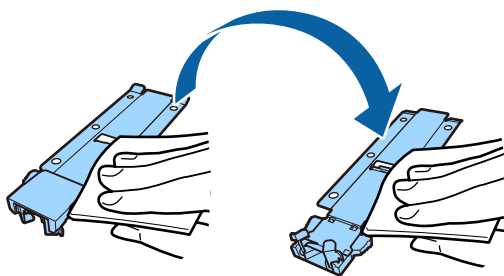


8. Close the front cover, plug in the power cord, and turn the product back on.

Parent topic: [Maintenance](#)


Cleaning the Heat Shield

Clean the heat shield to remove any ink that could affect print quality.


1. Remove the five screws securing the heat shield and remove the heat shield from the ink tank cover as shown here.

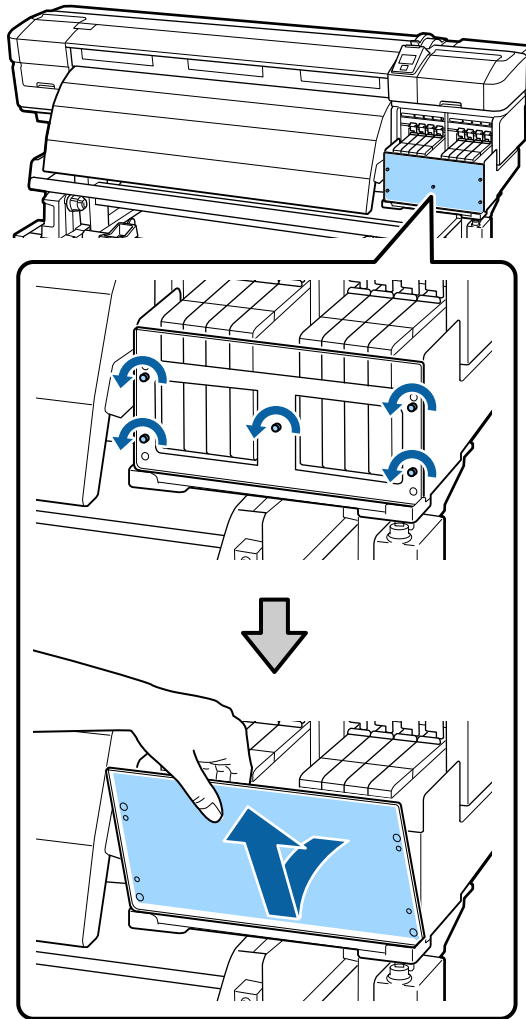

2. Using a soft cloth slightly dampened with water, wipe off the heat shield.

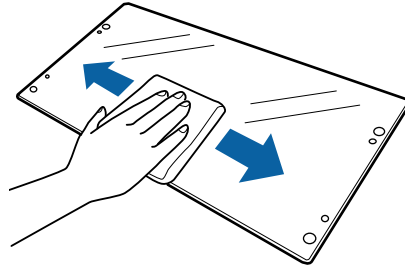

3. Align the holes in the heat shield with the holes in the ink tank cover. Then insert and tighten the screws in the order shown here to secure the cover.

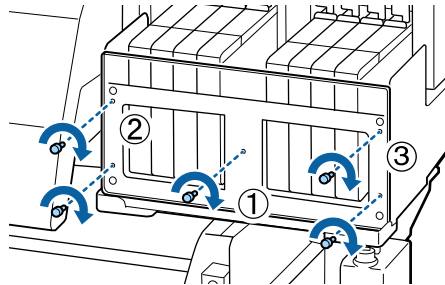

Parent topic: [Maintenance](#)

Replacing the Waste Ink Bottle


When you see one of these messages on the product's LCD screen, you need to replace the waste ink bottle:

- **Prepare empty waste ink bottle**
- **Replace waste ink bottle and press OK**


Wait until the product is not printing or cleaning the print heads before replacing the waste ink bottle.

Caution: Replacing the waste ink bottle during printing or cleaning could cause waste ink to leak. When replacing the waste ink bottle, always wear the gloves included in the maintenance kit. Leave the waste ink in the bottle for disposal and do not transfer it to another container.

1. Raise the ink splash guard on the waste ink bottle.

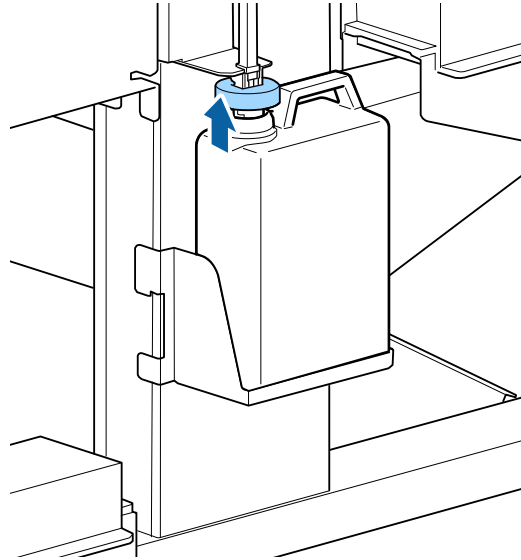

2. Lift up the waste ink bottle and remove it from the holder as shown here.

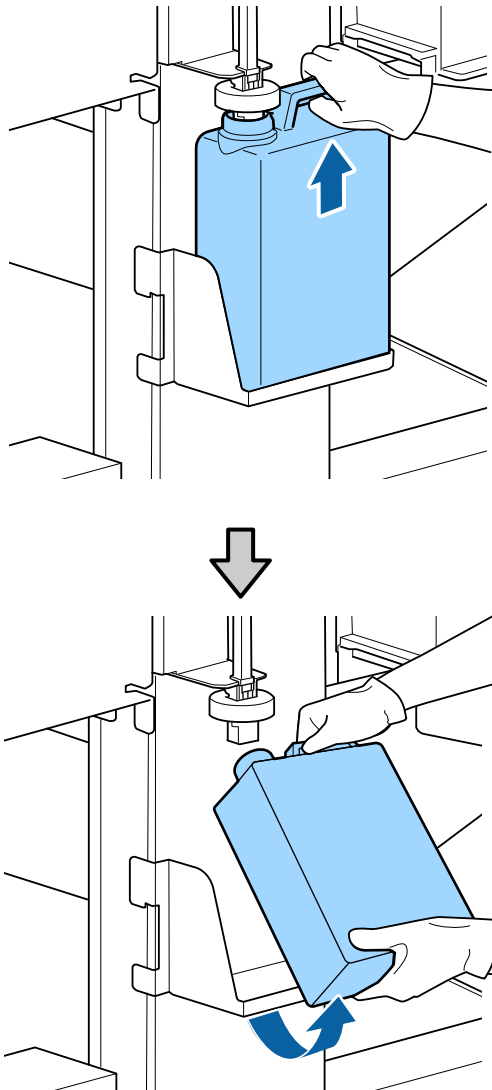


3. Put the inner seal and cap on the used waste ink tank bottle.

4. Insert the waste ink tube into the new waste ink bottle and place the bottle in the holder.


Note: Be sure the waste ink tube is inserted in the waste ink bottle or waste ink could spill onto your product.

5. Lower the ink splash guard onto the waste ink bottle and make sure it firmly seals to the mouth of the bottle.

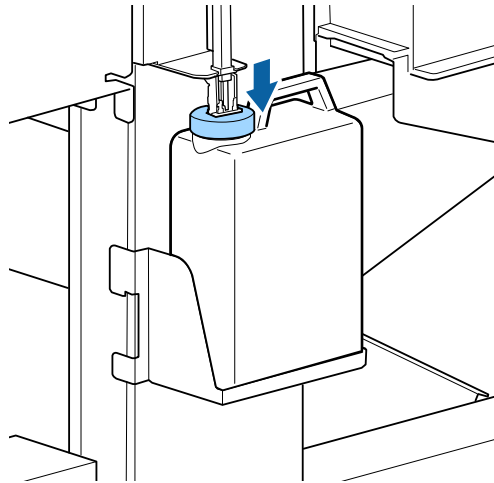

Note: If the ink splash guard does not firmly seal, waste ink could spill onto your product.

6. Press the **OK** button on the product control panel.
7. Press the **OK** button again to reset the waste ink counter.

Note: If you replaced the waste ink bottle before the replacement message appeared on the control panel, press the  maintenance button and select **Waste Ink Counter** to clear the waste ink counter.

Parent topic: [Maintenance](#)

Related references


[Maintenance Precautions](#)

[Consumables and Replacement Parts](#)


Replacing the Wiper and Wiper Cleaner

If your printouts are faint or smudged, or segments are missing even after cleaning the print head, you need to replace the wiper and wiper cleaner. You may also need to replace the wiper and wiper cleaner if ink adheres to the absorber on the back of the wiper cleaner or they are damaged.


1. Before you replace the wiper cleaner, move the print heads into maintenance position.
2. After the print heads move to the left end of the printer, open the right maintenance cover.

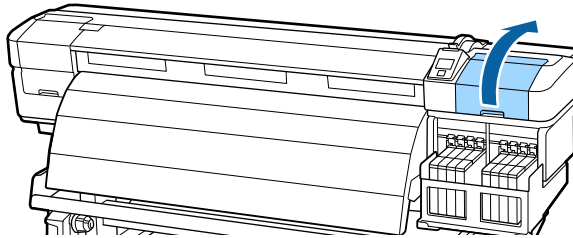


3. Grasp the wiper cleaner and lift it out of your product as shown.

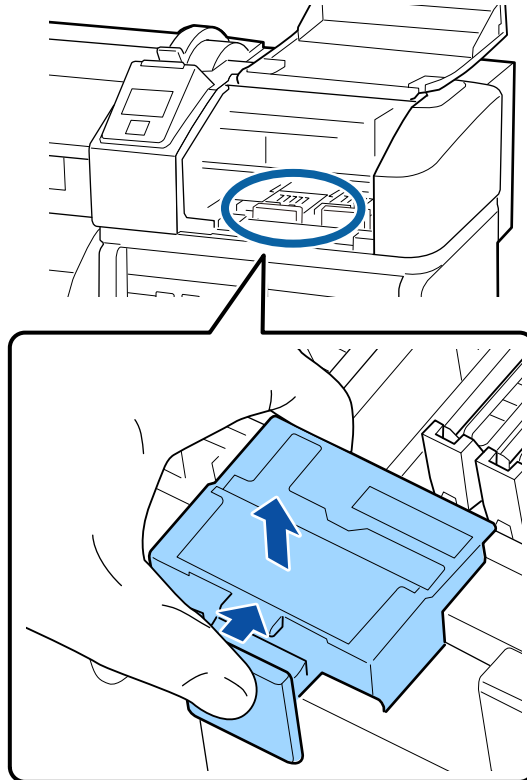


4. Place the new wiper cleaner on the attachment point shown here and press it down until it clicks into place.

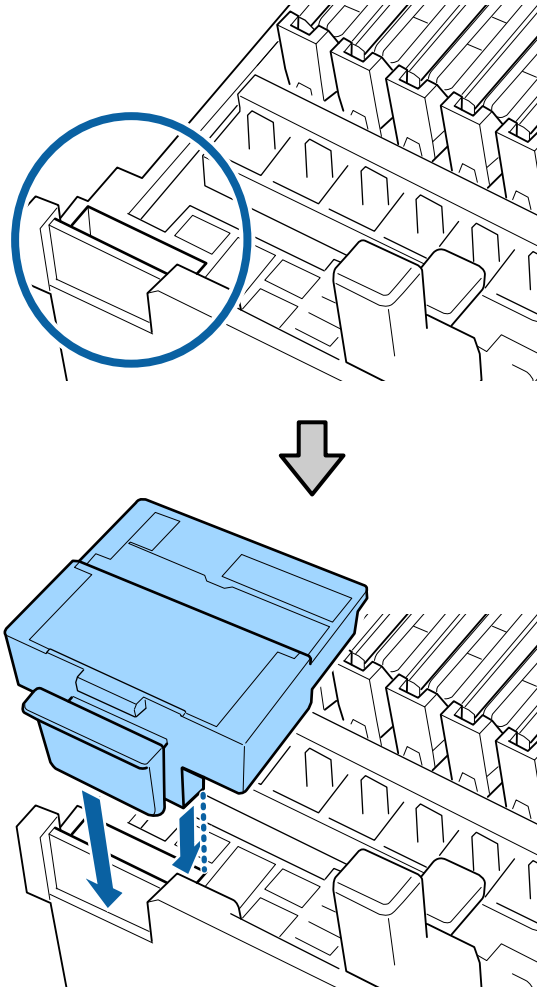

5. Hold the wiper by the attachment point, tilt it to the left as shown, and lift it out of the product.

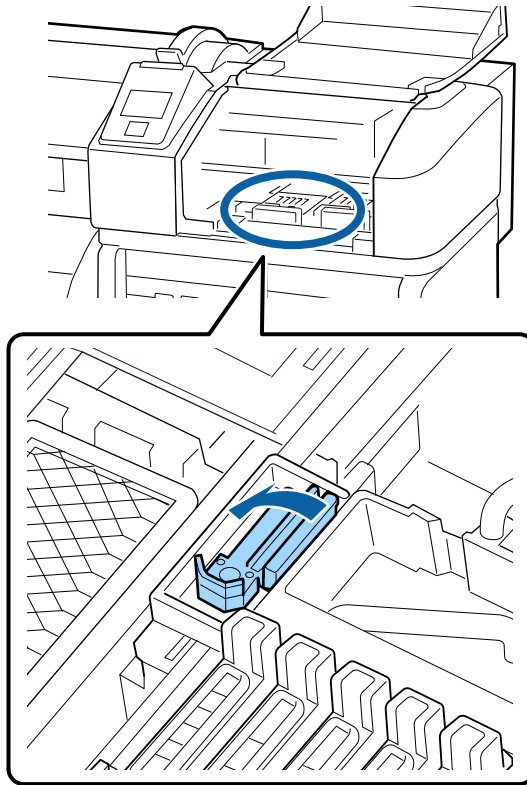

6. Remove the cap on the new wiper, place it on the attachment point, and press it down until it clicks into place.

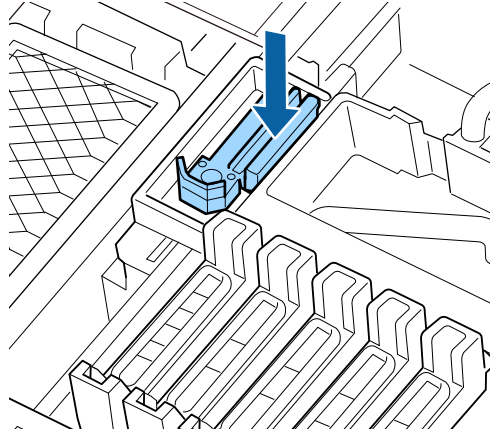

7. Close the maintenance cover.
8. To close the setup menu on the product control panel, press the **OK** button to move the wiper to the inner side.
9. Press the **OK** button again to return the print heads to normal position and close the setup menu.

Parent topic: [Maintenance](#)

Related references

[Maintenance Precautions](#)

[Consumables and Replacement Parts](#)


Related tasks

[Moving the Print Head for Maintenance](#)


Replacing the Media Holding Plates

If the media holding plates that came with your product become damaged or deformed, you need to replace them.


Caution: Continued use of damaged or deformed media holding plates may damage the print heads.

1. Remove any media loaded in the product and press the  power button to turn off the product.


2. Open the left maintenance cover and the front cover.

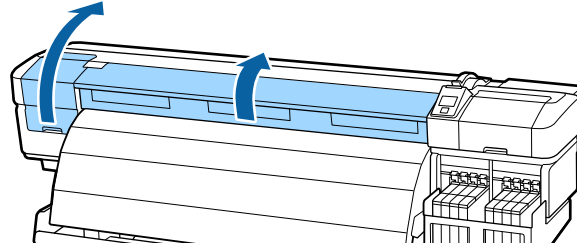


3. Grasp the tabs on the media holding plates and slide them to the left edge of the platen.

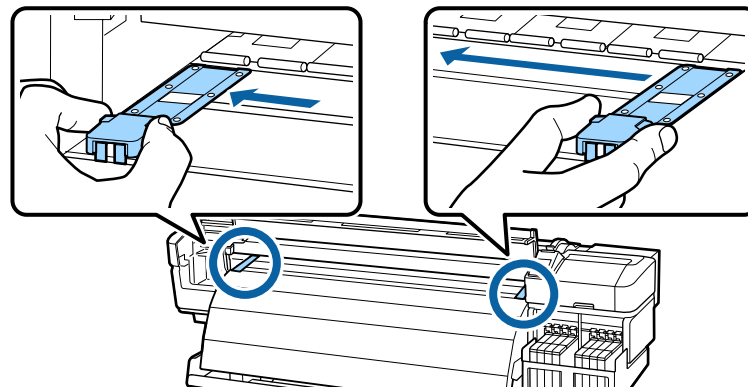


4. Remove the left media holding plate as shown here, then remove the right media holding plate in the same manner.

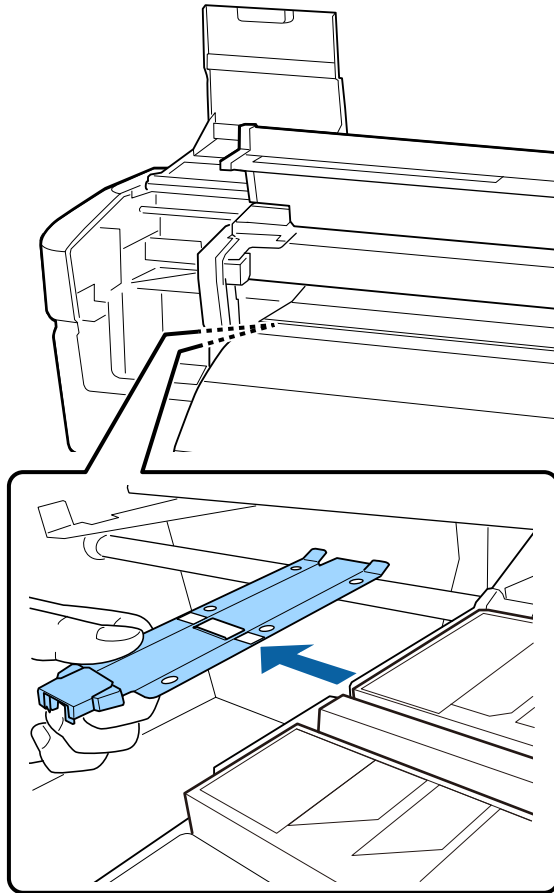

5. Align the white line on a new media holding plate with the edge of the platen.

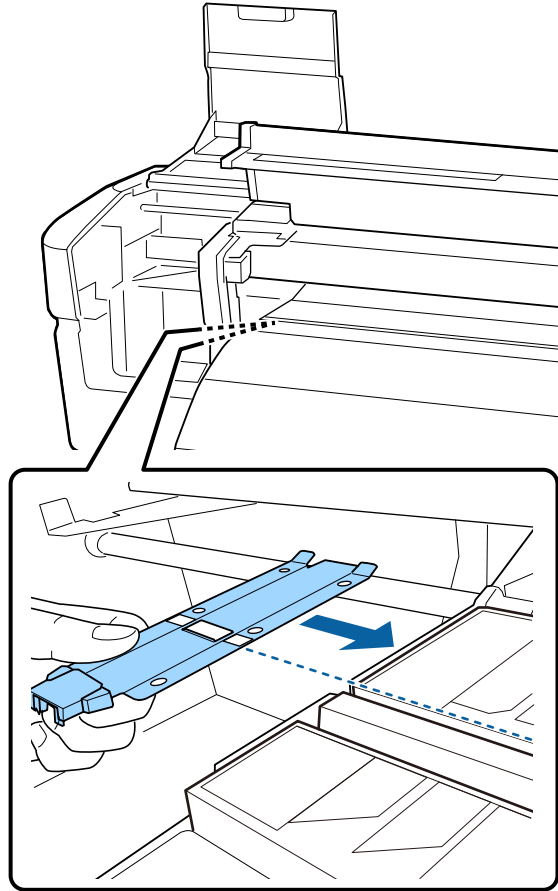


6. While pressing the tip of the media holding plate against the platen, attach the hooks to the front corner of the platen.

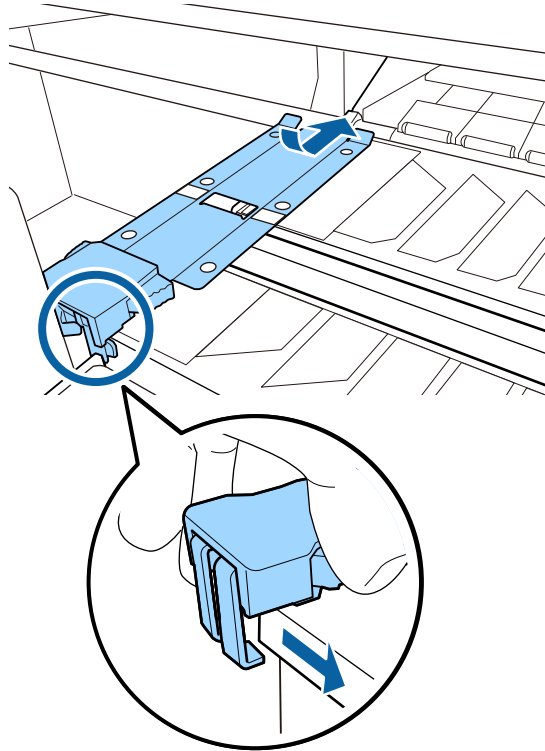

Caution: Do not install the media holding plates on the right edge of the platen or they could drop into the product and cause it to malfunction.

7. Confirm that the two hooked sections of the media holding plate are securely attached as shown here, with no gap between the plate and the platen.
- The latch at the rear of the square hole (1) should rest in the groove on the platen.


- The latch at the rear of the tab (2) should hook onto the front corner of the platen.

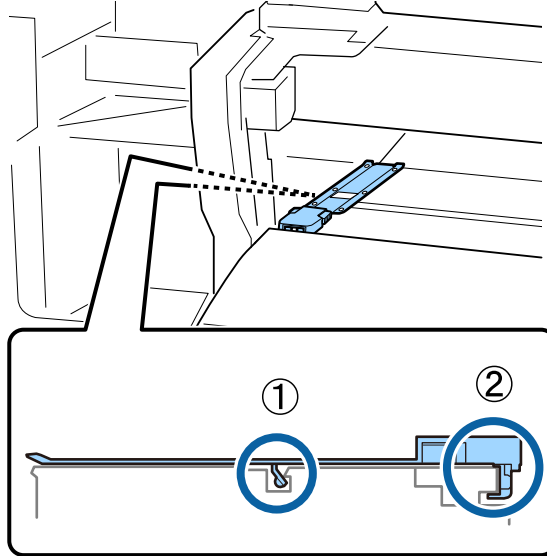

Caution: If the media holding plates are not attached correctly, repeat these steps to reattach them or the print heads may be damaged.

8. Repeat the previous steps to align and attach the other media holding plate, confirming that it is attached correctly.

9. Grasp the tabs on the media holding plates and slide them to the left and right edges of the platen. Release the tabs when they are in position.

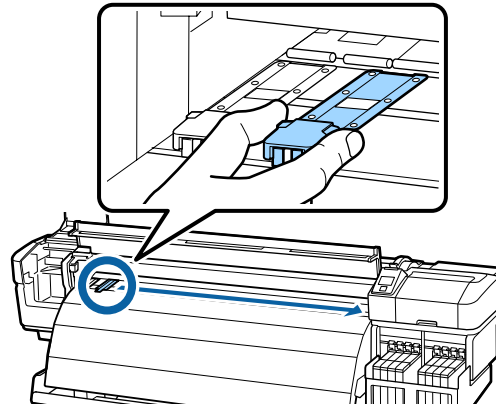

10. Close the left maintenance cover and the front cover.

Parent topic: [Maintenance](#)

Related references

[Maintenance Precautions](#)


[Consumables and Replacement Parts](#)

Related tasks


[Cutting Media](#)


Applying Carriage Rod Grease

When you see the message **Apply carriage rod grease** on the product control panel, you need to apply grease to carriage rods A and B using the grease and tools that came with your product. Use a new grease pad when applying grease to the carriage rods.

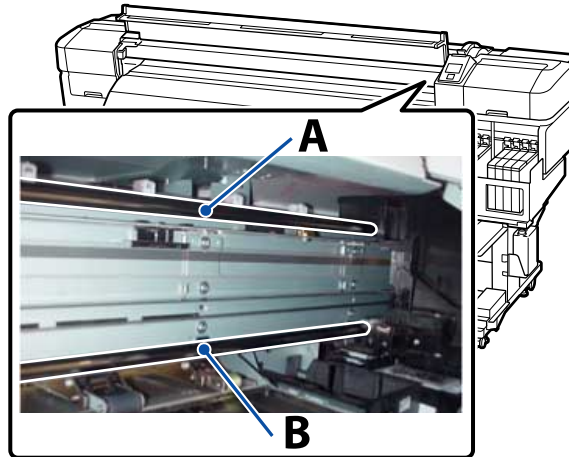


1. To grease carriage rod A, locate the grease tool and pad A that came with your product.

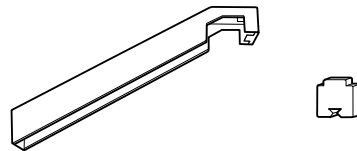


2. Press the  maintenance button.
You see the **Maintenance** menu on the product control panel screen.
3. Press the up or down arrow button to select **Grease Carriage Rod** and press the **OK** button.
You see the message **Grease kit is needed. Continue?**
4. Press the up or down arrow button to select **Yes** and press the **OK** button.
5. Open the front cover.

6. Firmly insert the tab on pad A into the slot on the grease tool and rotate the pad onto the tool as shown here.

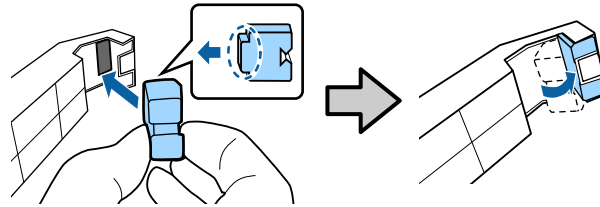


7. Hold the grease tool against the back of carriage rod A and smoothly slide it back and forth across the carriage rod to wipe off any stains.

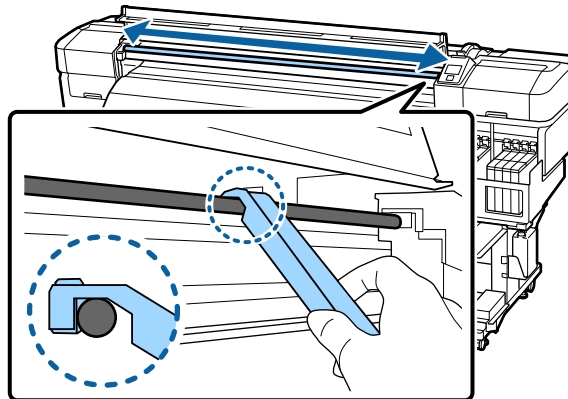

8. Remove the stained pad from the grease tool.
9. Attach a fresh pad A to the grease tool.
10. Use one of the cleaning sticks to stir the grease in the container approximately 10 times. Then wipe the tip of the cleaning stick on the edge of the container to remove the excess grease.

Note: Be sure to remove the excess grease from the cleaning stick or it may fall off the stick and onto the platen or your media.


11. Fully submerge the tip of the cleaning stick into the grease, rotate the stick two or three times, and remove it from the grease. Then apply the grease to pad A on the end of the grease tool.

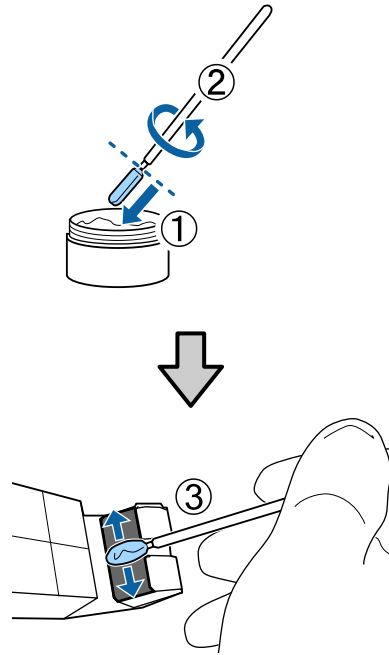


12. Hold the grease tool against the back of carriage rod A and smoothly slide it back and forth twice across the carriage rod to grease the rod, as shown in step 7.
13. To grease carriage rod B, locate pad B that came with your product.



14. Hold pad B against the front of carriage rod B and smoothly slide it back and forth across the carriage rod twice to wipe off any stains.

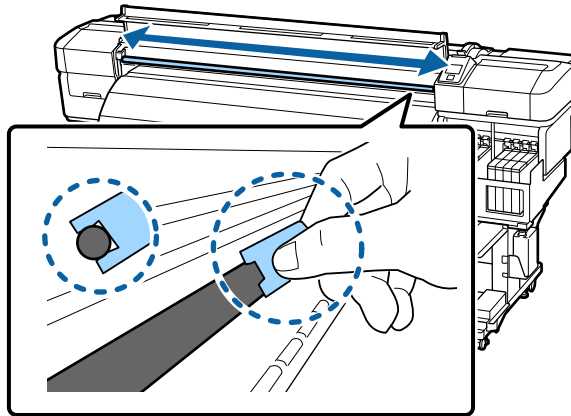

15. Fully submerge the tip of a cleaning stick into the grease, rotate the stick two or three times, and remove it from the grease. Then apply the grease to pad B.

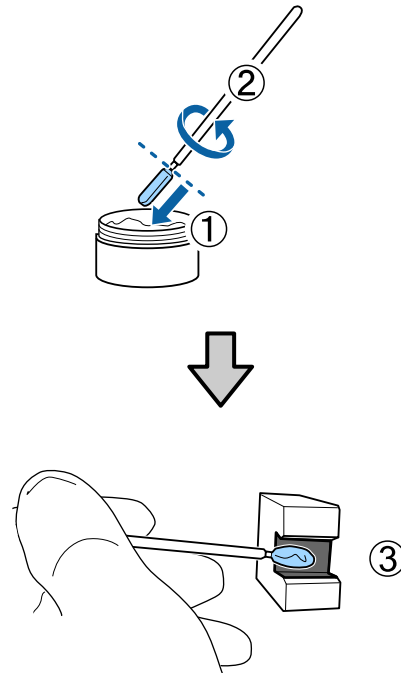

16. Hold pad B against the front of carriage rod B and smoothly slide it back and forth twice across the carriage rod to grease the rod, as shown in step 14.
17. Close the front cover and press the **OK** button on the product control panel.
- The carriage moves back and forth.
18. Remove the used pad A from the grease tool, and dispose of pad A and pad B properly. Close the grease container and store it out of direct sunlight and at room temperature along with the grease tool and other supplies.

Parent topic: [Maintenance](#)

Related references

[Maintenance Precautions](#)

[Consumables and Replacement Parts](#)

[Maintenance Supplies](#)
[Maintenance Menu Settings](#)

Using the Spacer

If you see vertical creases in your printed media that have not improved after adjusting the **Feeding Tension** and **Take-up Tension** settings, you can install the spacer that came with your product in the slot on the media loading lever.

[Removing the Spacer](#)

[Adjusting the Spacer](#)

[Installing the Spacer](#)


[Storing the Spacer](#)

Parent topic: [Maintenance](#)


Removing the Spacer

The spacer is attached to the left leg of the product stand. To use the spacer, you need to remove it from the stand. When you finish using the spacer, you can store the spacer in the same location.

1. Using the large hexagon wrench that came with your product, loosen the screws securing the spacer to the product stand as shown. Do not remove the screws.

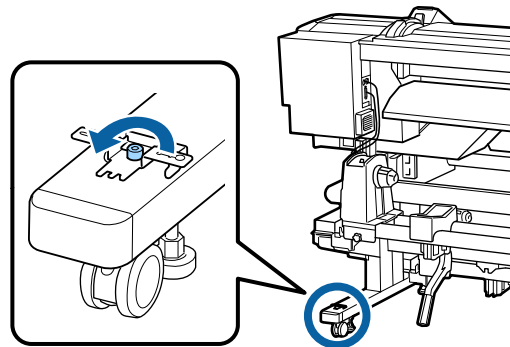

2. Remove the spacer.

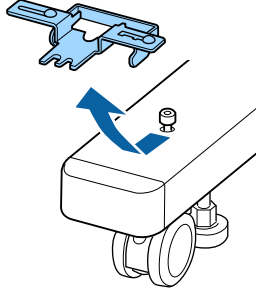


3. Tighten the screws on the product stand.


Parent topic: [Using the Spacer](#)

Adjusting the Spacer


You can adjust the spacer to three different positions (A, B, or C) to reduce vertical creases in your printed media. You should first use the spacer in position A, and then adjust the spacer to position B or C if the vertical creases are not eliminated on the previous settings.

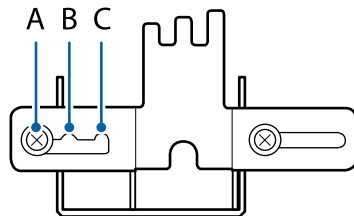


1. Remove the spacer from its storage location.
2. Use a Phillips head screwdriver to loosen the two screws on the spacer.

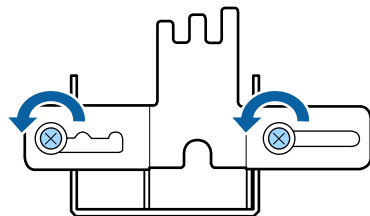

3. Slide the spacer to move the screws from adjustment position A to position B or C as necessary.

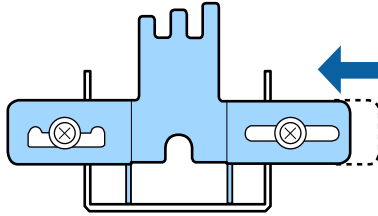

4. Tighten the two screws using the screwdriver.

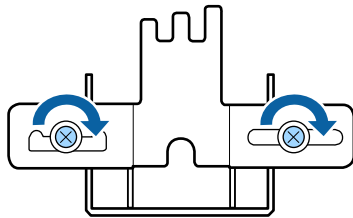


Parent topic: [Using the Spacer](#)

Installing the Spacer


Once you adjust the spacer, you can install it in the slot of the media loading lever.

1. Make sure the product is ready to print.


2. Raise the medial loading lever.

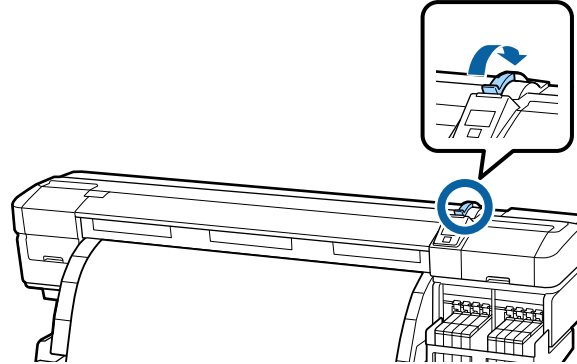

3. Install the spacer in the slot at the base of the media loading lever as shown.

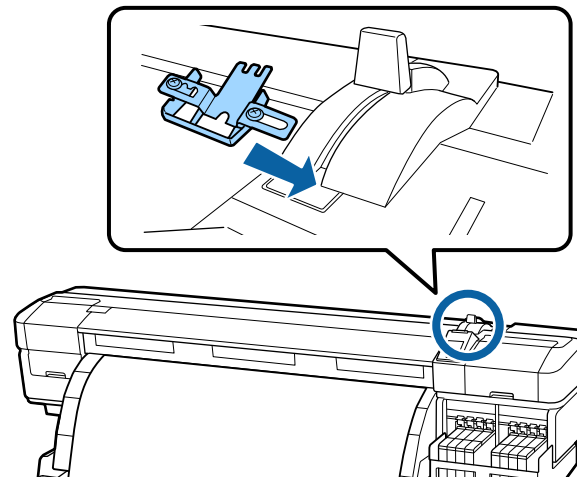

4. Hold the spacer as you lower the media loading lever.

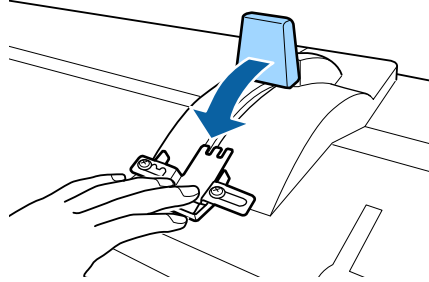


The media confirmation and setting changes appear on the product control panel screen.

5. Change the media settings as necessary.
6. Adjust the media feed.
7. Try printing with the spacer and your new settings, watching the results through the window in the product's front cover.
 - If vertical creases no longer appear in your printed media, you can leave the spacer installed in its current position.
 - If vertical creases still appear, stop printing, raise the media loading lever, and remove the spacer. Adjust the spacer position and repeat these steps to reinstall the spacer, adjust your media and feed settings, and try printing again as necessary.

Parent topic: [Using the Spacer](#)

Storing the Spacer

When you are not using the spacer, loosen the screw on the left leg of the product using the large hexagonal wrench that came with your product. Then slide the spacer under the screw and tighten it.

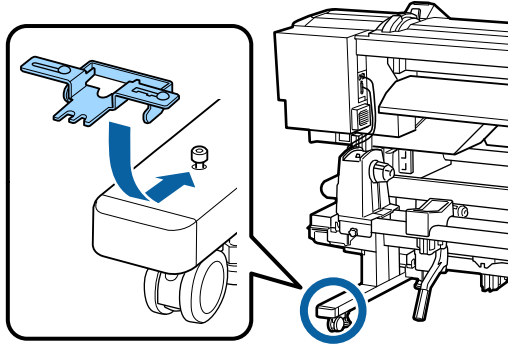

Parent topic: [Using the Spacer](#)

Moving or Transporting the Product

When moving the product, see these sections to prepare and move the product, and set it back up after moving it.

If you need to transport the product a long distance, contact Epson support.

[Prepare to Move the Product](#)

[Removing the Media Guide Bar](#)


[Setting Up the Product After Moving](#)

[Attaching the Media Guide Bar](#)

Prepare to Move the Product

Do the following before moving the product:

1. Remove any loaded media from the media feeding unit and auto take-up reel.
2. Turn off the product.
3. Remove the waste ink bottle.
4. Remove all cables.
5. If you need to move the product through a narrow passageway, remove the media guide bar.
6. Release the caster locks on the left and right legs and fully raise the stand fixing screws.

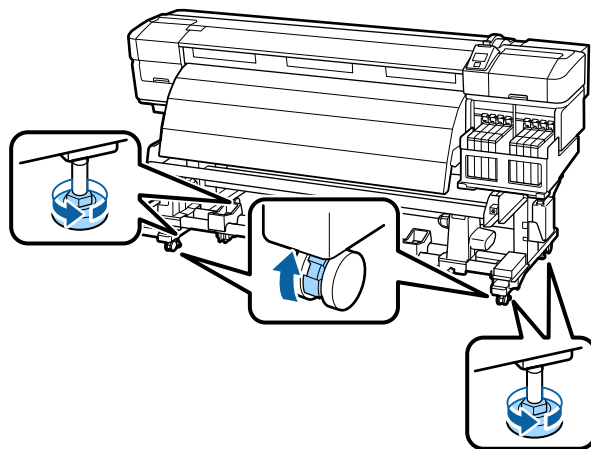

Caution: Roll the product on the casters for only a short distance over a level floor. Do not transport the product using the casters.

Parent topic: [Moving or Transporting the Product](#)

Related tasks

[Cutting Media](#)


[Replacing the Waste Ink Bottle](#)

Removing the Media Guide Bar

If you need to move the product through a narrow passageway, remove the media guide bar.



Caution: Removing the media guide bar requires at least two people.

1. Locate the two hexagon wrenches that came with your product.




2. Turn off the product.


3. With one person supporting the media guide bar, and the other using the small hexagon wrench, loosen the four screws securing the media guide bar on both ends as shown. Then pull out the media guide bar.

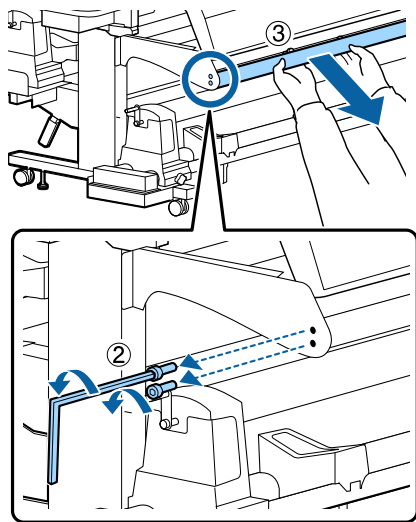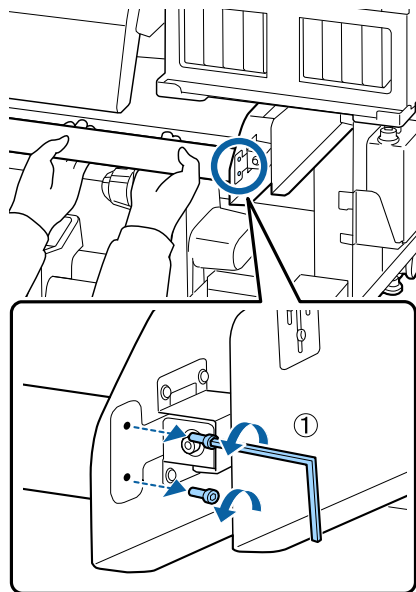


4. Using the large hexagon wrench, slightly loosen the two screws securing the left bracket as shown. Rotate the screws approximately two times.

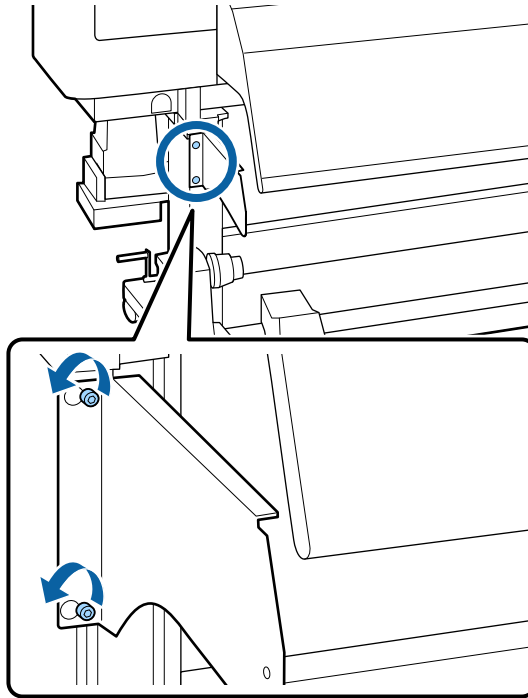


5. Slide the bracket to the right and remove it from the loosened screws as shown.

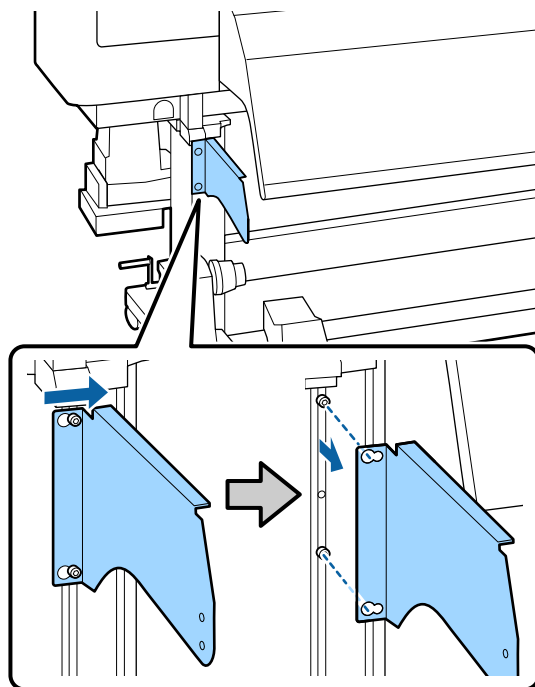


6. Using the small hexagon wrench, slightly loosen the three screws securing the right adjustment plate over the tank cover holding plate. Rotate the screws approximately three times.

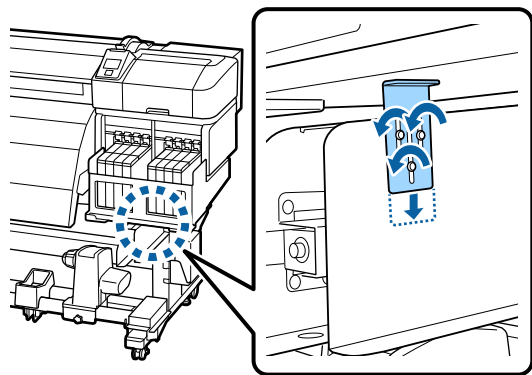


7. While supporting the tank cover holding plate, use the large hexagon wrench to remove the three screws securing the plate. Then remove the plate.

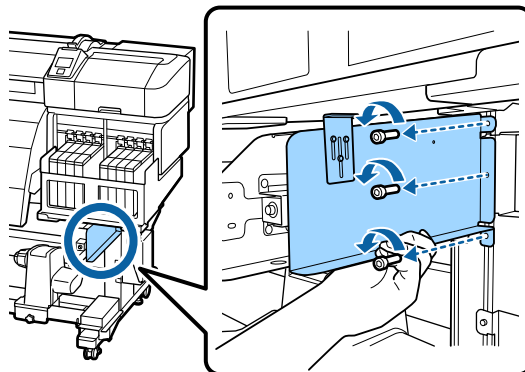

8. Using the small hexagon wrench, remove the two screws securing the bracket for the media guide bar.

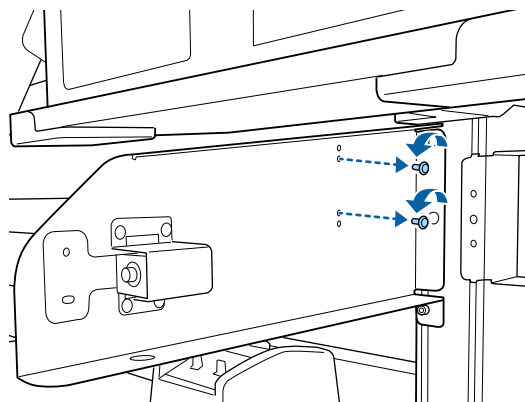

9. While supporting the bracket for the media guide bar, use the large hexagon wrench to remove the three screws securing the bracket. Then remove the bracket.

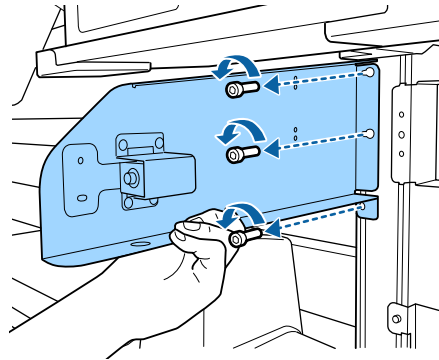

Parent topic: [Moving or Transporting the Product](#)

Related tasks

[Attaching the Media Guide Bar](#)

Setting Up the Product After Moving

Follow these steps to set up the product after moving it.

1. Verify that the location is suitable for installation.
2. Reattach the media guide bar, if you removed it.
3. Perform parallel adjustment for the media feeding unit and auto take-up reel as necessary.
4. Install the waste ink bottle.
5. Connect the power cable to an electrical outlet and turn on the printer.
6. Load media in the product.
7. Perform a nozzle check and confirm that there are no clogged nozzles.
8. Align the print head and check the print quality.

Parent topic: [Moving or Transporting the Product](#)

Related tasks

[Replacing the Waste Ink Bottle](#)

[Attaching the Media Guide Bar](#)

Loading Media

Checking for Clogged Print Head Nozzles

Cleaning the Print Head

Adjusting the Media Feeding Unit

Adjusting the Auto Take-up Reel

Attaching the Media Guide Bar


If you removed the media guide bar, follow these steps to attach it to your product.

Caution: Attaching the media guide bar requires at least two people.


1. Locate the two hexagon wrenches that came with your product.




2. Turn off the product.
3. Position the right bracket for the media guide bar as shown, insert the three screws you removed, and use the large hexagon wrench to tighten them.

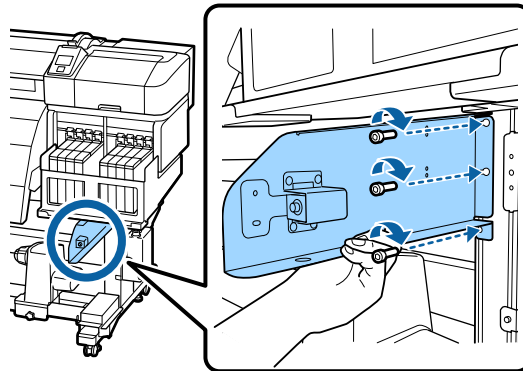


4. While supporting the bracket, insert the two screws you removed from the bracket, and use the small hexagon wrench to tighten them.

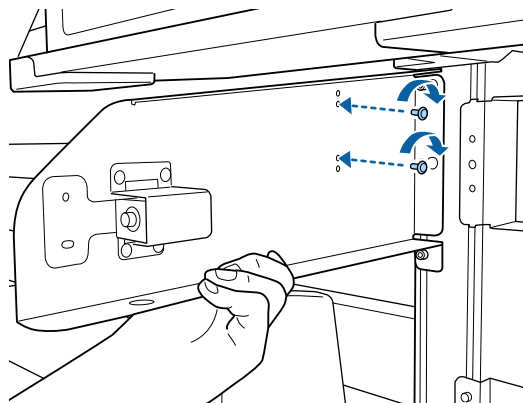


5. Position the tank cover holding plate as shown, insert the three screws you removed, and use the large hexagon wrench to tighten them.

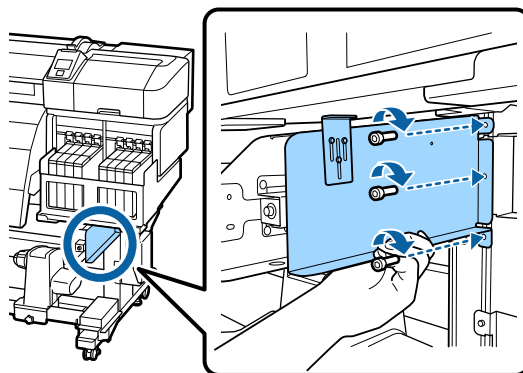


6. Lift up the tank cover adjustment plate until it touches the tank cover and tighten the three screws as shown.

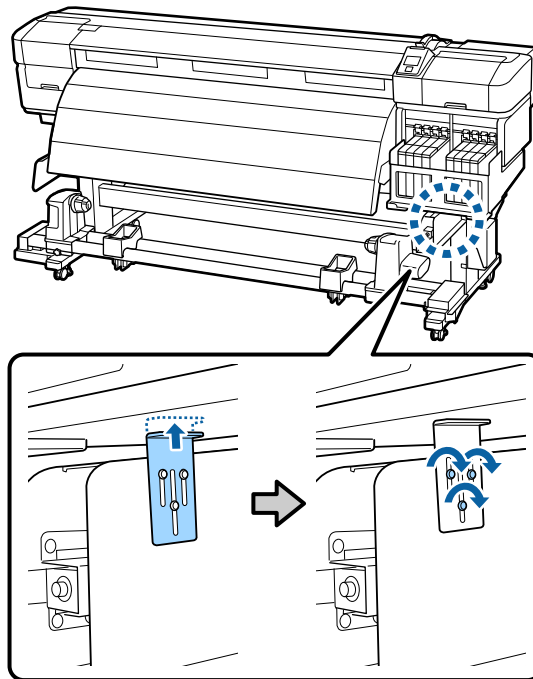





7. Attach the left bracket over the loosened screws as shown and slide it to the left.

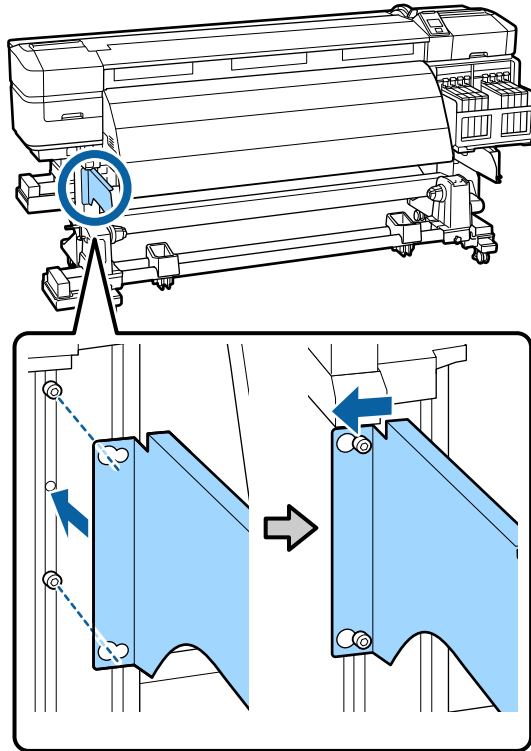

8. Using the large hexagon wrench, tighten the two screws securing the left bracket as shown.

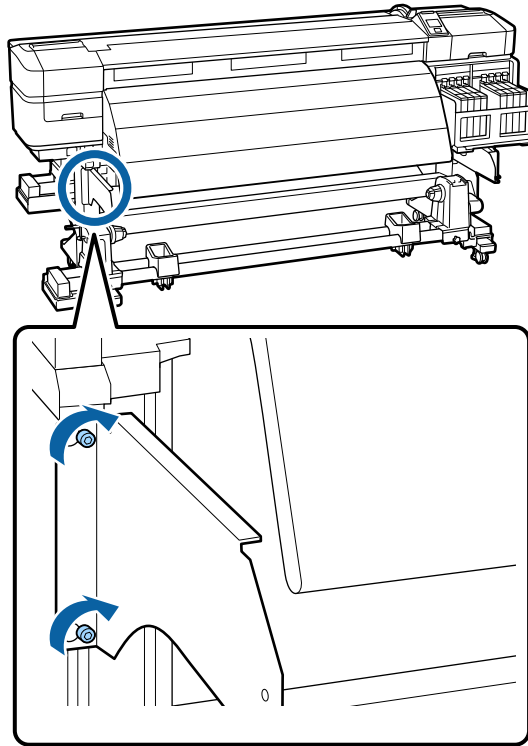

9. With one person supporting the media guide bar, and the other using the small hexagon wrench, attach the media guide bar and tighten the four screws securing it on both ends as shown.

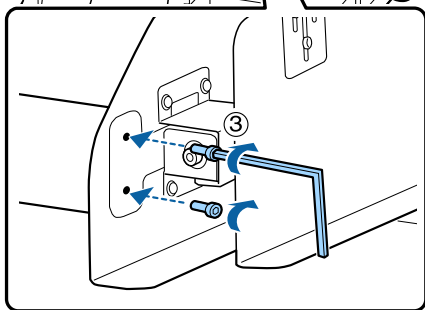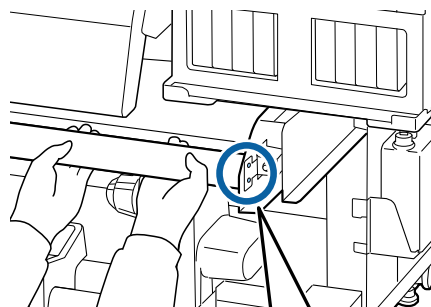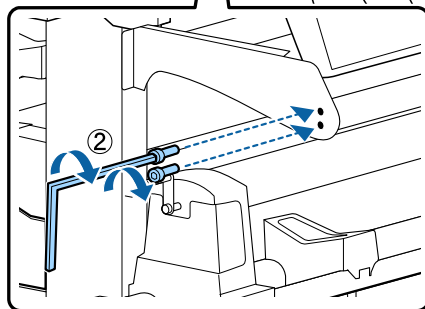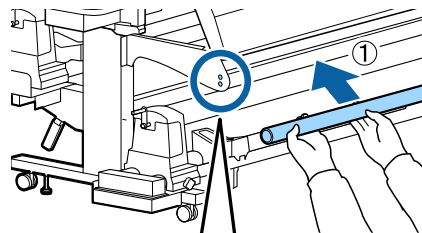

10. Perform a parallel adjustment.

Parent topic: [Moving or Transporting the Product](#)

Solving Problems

Check these sections for solutions to problems you may have using your product.

[Product Status Messages](#)

[Solving Printer Problems](#)

[Solving Printing Problems](#)

[Solving Media Skew Problems](#)

[Solving Print Quality Problems](#)



[Where to Get Help](#)

Product Status Messages











You can often diagnose problems with your product by checking the messages or icons on its LCD screen.

Error Messages

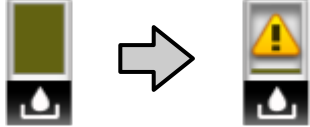LCD screen message	Solution
Prepare empty waste ink bottle.	The waste ink bottle is almost full. Make sure you have a replacement waste ink bottle handy.
Chip Unit Error Chip unit not recognized. Reattach or replace.	Remove and reinstall the chip unit. If the error recurs, replace the chip unit with a new one. Condensation may have formed inside the ink tank. Make sure the ink is at room temperature for at least four hours.
Chip Unit Error Chip unit not recognized. Is this ink supported by this printer model?	Use only chip units from genuine Epson ink packs specified for this product.
Check Ink Levels	Check the remaining ink in the ink tank using the scale on the ink pack and, if necessary, refill the ink and replace the chip unit. Make sure you have a replacement ink pack in the correct color handy.

LCD screen message	Solution
Command Error Check print settings on RIP.	Press the II  pause/cancel button and select Job Cancel . Make sure the installed RIP software is compatible with the product.
F/W Install Error Firmware update failed. Restart the printer.	Turn off the product, wait a few minutes, and turn it on again. Then reinstall the firmware again. If this message persists, contact Epson for support.
Auto Take-up Reel Unit stopped.	Press the II  pause/cancel button and select Job Cancel to cancel printing. Then set the Auto switch on the auto take-up reel to the off position, set it back to the original position, and reattach the media to the auto take-up reel.
Media Size Error Load correct size media.	Raise the media loading lever and remove the currently loaded media. Be sure the media is at least 11.8 inches (300 mm) wide. If this message appears even when the media is the correct width, turn off the Media Size Check setting and try printing again.
Maintenance Request Replace Part Soon or Replace Part Now XXXXXXXXXX	The product part indicated is nearing or at the end of its service life. Contact Epson for support and provide them with the service code shown on the LCD screen. You must replace the part before printing again. If you continue to print, a call for service occurs.
Call For Service XXX Error XXX Power off and then on. If this doesn't work, note the code and call for service.	A call for service occurs when: <ul style="list-style-type: none"> • The power cable is not connected securely • An error occurs that cannot be cleared When a call for service has occurred, the printer automatically stops printing. Turn off the printer, disconnect the power cable from both the outlet and the printer, and then reconnect them. Turn the printer on and off several times. If the same call for service is displayed on the LCD screen, contact Epson for support and provide them with the service code shown on the LCD screen.

Status Icons

Icons	Description
<p>Waste ink bottle status</p> 	<p>The waste ink bottle status is indicated as follows:</p>  The height of the indicator corresponds to the remaining capacity.  The waste ink bottle is almost full. Make sure you have a new waste ink bottle ready.  The waste ink bottle is full. Replace the waste ink bottle with a new one.
<p>Chip unit status</p> 	<p>The chip unit status (1) is indicated as follows (2: color of affected ink):</p>  Ready to print.  Check the ink level in the ink tank, and replace the chip unit and refill the ink. The icon flashes when the ink tank is close to being empty.  Check the message on the LCD screen.  An error has occurred. Check the message on the screen, and clear the error.  The chip unit is incompatible or could not be recognized by the product, or the slider is unlocked. Check the slider and replace the chip unit, if necessary.

Parent topic: [Solving Problems](#)

Related references

[Where to Get Help](#)

[Printer Setup Menu Settings](#)

Related tasks

[Replacing the Waste Ink Bottle](#)

[Cutting Media](#)

Related topics

[Replacing the Ink and Chip Unit](#)

Solving Printer Problems

Check these sections if you have problems operating your product.

[Printer Does Not Turn On](#)

[LCD Screen Shuts Off](#)

[After Heater Shuts Off](#)

[Forgot the Administrator Password](#)

[Red Light Shines Inside the Printer](#)

Parent topic: [Solving Problems](#)

Printer Does Not Turn On

If the printer does not turn on, try these solutions:

- Make sure the power cable is securely connected.
- Make sure the power outlet works by connecting the power cable for another electronic device.

Parent topic: [Solving Printer Problems](#)

LCD Screen Shuts Off

If the LCD screen shuts off intermittently, the printer may be in Sleep Mode. Try these solutions:

- The printer enters sleep mode when the time selected as the **Heat Off Timer** setting expires and the heaters turn off. Perform a hardware operation such as adjusting the media load lever or send a print job to wake the printer from sleep mode.
- You can adjust the time before the after heater turns off in the control panel to lengthen the time before the printer enters sleep mode.

Parent topic: [Solving Printer Problems](#)

Related references

[Printer Setup Menu Settings](#)

After Heater Shuts Off

If the after heater turns off automatically, try these solutions:

- You can adjust the time before the after heater turns off in the control panel to lengthen the time before they turn off automatically.

Parent topic: [Solving Printer Problems](#)

Related references

[Printer Setup Menu Settings](#)

Forgot the Administrator Password

If you forgot the administrator password you created during network setup, select **Restore Settings** in the Network Setup menu to set a new password.

Parent topic: [Solving Printer Problems](#)

Related references

[Network Setup Menu Settings](#)

Red Light Shines Inside the Printer

The red light always shines inside the printer. This is normal.

Parent topic: [Solving Printer Problems](#)

Solving Printing Problems

Check these sections if you have problems printing with your product.

[Nothing Prints](#)

[Cannot Print Over a Network](#)

[Print Head Moves But Nothing Prints](#)

[Media is Creased](#)

[Printing Continues After Media Roll Empties](#)

[Removing Jammed Media](#)

[Media Does Not Feed Correctly](#)

Parent topic: [Solving Problems](#)

Nothing Prints

If you have sent a print job and nothing prints, try these solutions:

- Make sure your printer is turned on.
- Make sure any interface cables are connected securely at both ends. If you have a spare cable, try connecting with the spare cable.
- Check the model and specifications of the interface cable to see if the cable is appropriate for your computer and printer.
- If you connected your printer to a USB hub, make sure it is a first-tier hub. If it still does not print, connect your printer directly to your computer instead of the hub.
- Make sure the USB hub is recognized correctly on the computer. Disconnect all USB hubs from the computer and connect the printer directly to the computer's USB port.
- Make sure the USB cable length does not exceed 10 feet (3 m).

Parent topic: [Solving Printing Problems](#)

Cannot Print Over a Network

If you cannot print over a network, try these solutions:

- Make sure that your printer is turned on.
- If you are using TCP/IP, make sure the printer's IP address is set correctly for your network. If your network does not assign IP addresses using DHCP, set the IP address manually.
- Check your wired LAN router or access point to see if the LED for the port to which your printer is connected is on or flashing. If the link LED is off, try the following:
 - Make sure the Ethernet cable is securely connected to your printer and to your router, access point, switch, or hub.
 - Try connecting your printer to a different port or a different router, access point, switch, or hub.
 - Try connecting with a different Ethernet cable.
 - Try printing to your printer from another computer on the network.

Parent topic: [Solving Printing Problems](#)

Related references

[Network Setup Menu Settings](#)

Print Head Moves But Nothing Prints

If the print head is moving and nothing prints, try these solutions:

- Print a nozzle check pattern. If the pattern does not print correctly, clean the print head again. (If the printer has not been used for a long time the nozzles may be clogged.)
- If you see the message **Motor Self Adjustment** on the product's LCD screen, the printer is adjusting its internal motor. Wait a few moments for the message to disappear and do not turn off the printer.

Parent topic: [Solving Printing Problems](#)

Related tasks


[Checking for Clogged Print Head Nozzles](#)

[Cleaning the Print Head](#)

Media is Creased


If media loaded in your printer is creased, try these solutions:

- Check that the **Feeding Tension** and **Feed Speed** settings on the product control panel are correct for the currently loaded media.
- If you printed thin media or media lengthened by water absorption at a high density take-up setting, creases that look like this may appear in the media in the after heater:

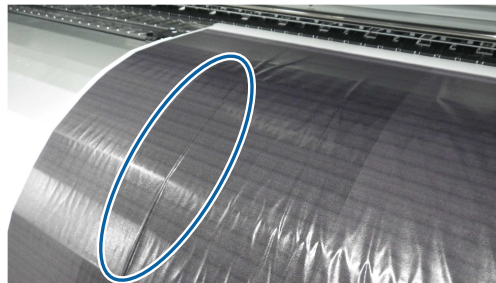

Set the **Take-up Tension** setting to **Manual** and decrease the tension values, or print on thicker media.

- If you printed thin media or media lengthened by water absorption, vertical creases that look like this may occur between the pressure rollers:

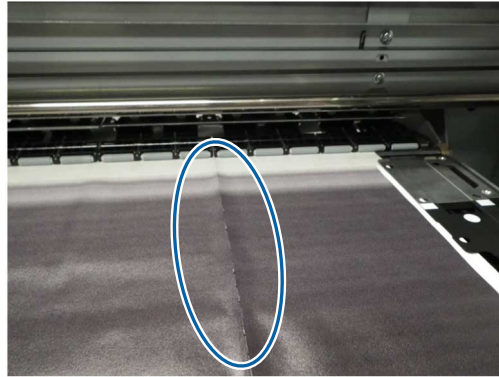

Do the following to reduce creasing:

- Set the **Feeding Tension** setting to **Manual** and increase the tension values.
- Set the **Take-up Tension** setting to **Manual** and decrease the tension values.
- Attach a spacer in the slot of the media loading lever.

Parent topic: [Solving Printing Problems](#)

Related references

[Media Setup Menu Settings](#)

Printing Continues After Media Roll Empties

If printing does not stop when the media roll ends, make sure the **Media End Check** setting is set to **On**. For best results, leave this setting turned on.

Parent topic: [Solving Printing Problems](#)

Related references

[Printer Setup Menu Settings](#)


Removing Jammed Media

If media jams in the printer, check the following:

- Make sure the media is not curled, creased, or folded on the leading edge. Do not use media that exhibits these problems.
- Check the media specifications to make sure you can use the media with your printer and your RIP software. Check the RIP software manufacturers media guidelines.
- Set the **Media Suction** setting to a lower value on the product control panel.

Follow the steps here if media becomes jammed in the product.


1. Open the front cover.

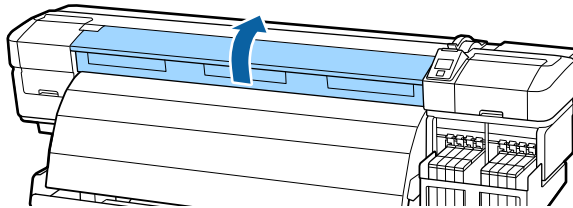

2. Turn off the product.


Note: If you see a message on the product control panel and the product will not turn off, unplug the power cable.

3. Grasp the tabs on the media holding plates and slide them to the left and right sides.

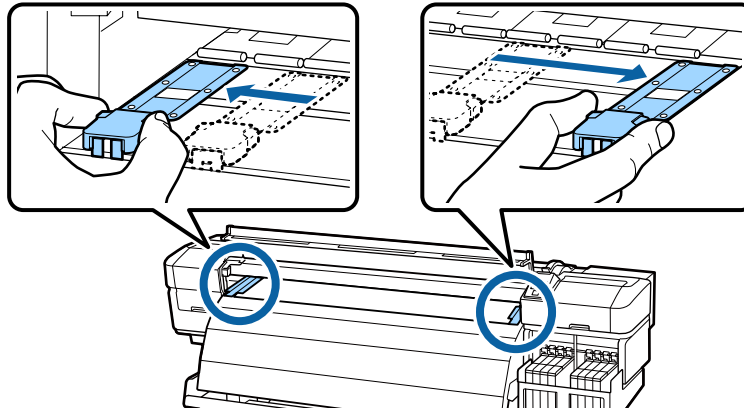


Caution: If the media holding plates are deformed or damaged, do not continue to use them or you could damage the pressure rollers or print heads. Replace the media holding plates before continuing with these steps to remove jammed media.


4. If the print head is over the media, move it away from the jam area by hand.

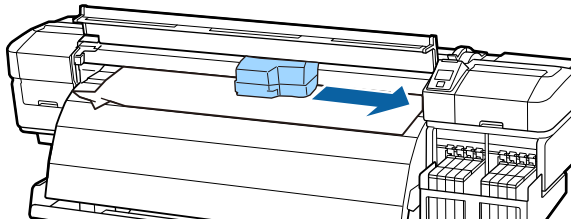

5. Raise the media loading lever.

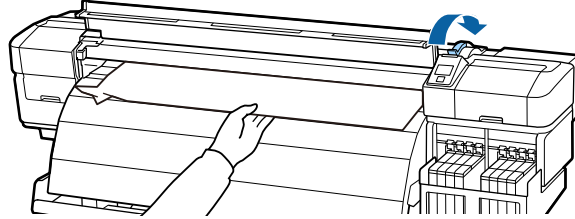

6. Pull the media to the cutter groove and cut off the torn or creased media from the roll.

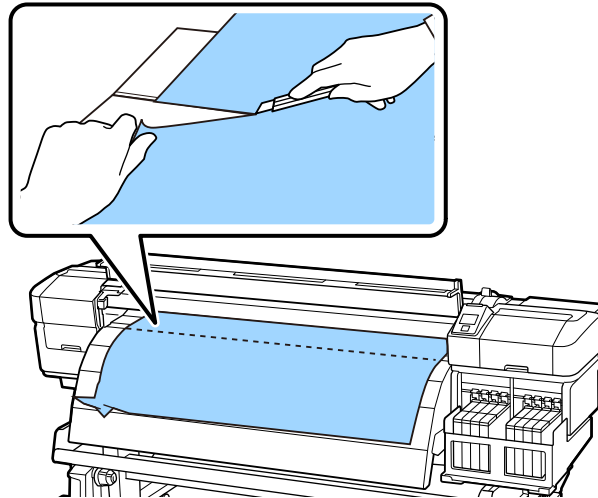

7. Manually rewind the media.
8. Remove any media that remains inside the product.
9. Turn the product back on, load media, run a nozzle check and, if necessary, clean the print heads.

Caution: Do not leave the product turned off with the print heads in an uncapped position for an extended period. The print heads may dry out and the product may not print properly.

Parent topic: [Solving Printing Problems](#)

Related references

[Media Setup Menu Settings](#)

Related tasks

[Cutting Media](#)

[Checking for Clogged Print Head Nozzles](#)

[Cleaning the Print Head](#)

Media Does Not Feed Correctly

If media does not feed straight or roll up on the auto take-up reel correctly, try these solutions:

- Make sure your media is at least 36 inches (91.4 cm) wide for best results.
- If your media is attached to the auto take-up reel with the printable side out, try attaching with the printable side in instead.
- If your media is thick, set the RIP software settings to use 3 passes or higher for best results.
- Perform the parallel adjustment procedures to correct the feed misalignment, especially after moving the printer.

Parent topic: [Solving Printing Problems](#)

Related references

[Media Setup Menu Settings](#)

[Media Specifications](#)

Related tasks

[Loading Media](#)

[Adjusting the Media Feeding Unit](#)

Related topics

[Using the Auto Take-up Reel](#)

Solving Media Skew Problems

If media skew is detected by your product, perform the parallel adjustment procedure to ensure that the media is fed straight into the product and onto the auto take-up reel.

Note: Also perform the parallel adjustment procedure after you have moved the printer.

In addition to parallel adjustment, do the following to avoid media skew problems:

- Set the auto take-up reel to roll the media with the printable side in.
- Use media at least 36 inches (91.4 cm) wide.
- With thick media, set the software RIP to 3 passes or higher.

[Parallel Adjustment Tools](#)


[Adjusting the Media Feeding Unit](#)

[Adjusting the Auto Take-up Reel](#)

Parent topic: [Solving Problems](#)

Parallel Adjustment Tools

Use these tools to perform the parallel adjustment procedure.

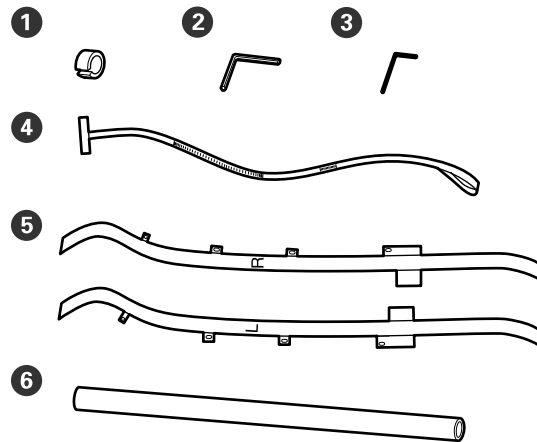

- 1 Counterweights (2)
- 2 Large hexagon wrench
- 3 Small hexagon wrench
- 4 Alignment tool
- 5 Right and left adjustment guides
- 6 Roll core


Parent topic: [Solving Media Skew Problems](#)

Adjusting the Media Feeding Unit


Two people are required for parallel adjustment: one in front of the printer and one in back.

Note: Before beginning the parallel adjustment procedure, make sure the product is level and sitting on a level surface.


1. Turn off the product.
2. Open the front cover and push back the media loading lever.

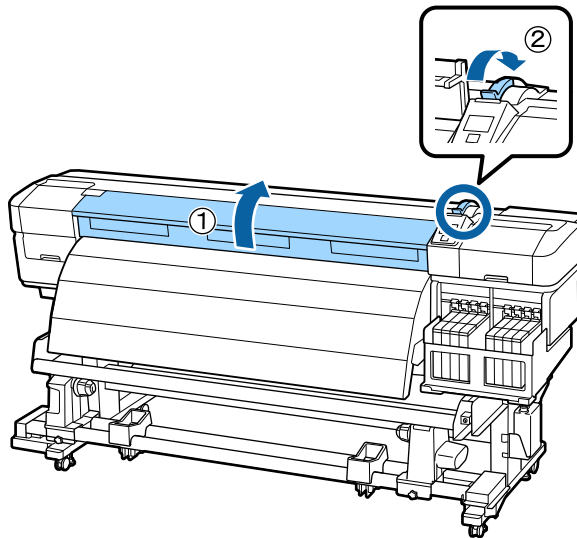


3. On the back of the product, use the large hexagon wrench to loosen the four fixing screws as shown.

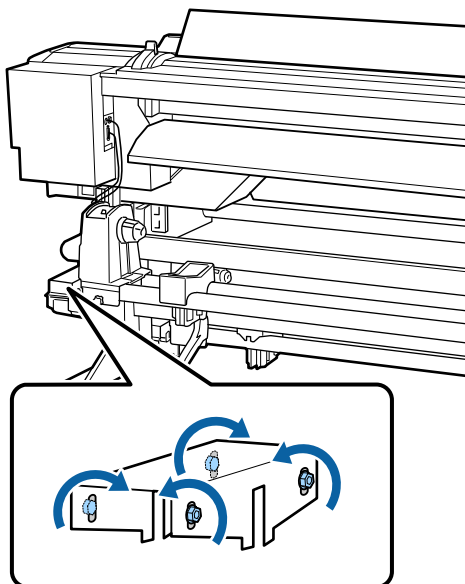

4. From the back of the product, feed the left and right adjustment guides through the paper path as shown.

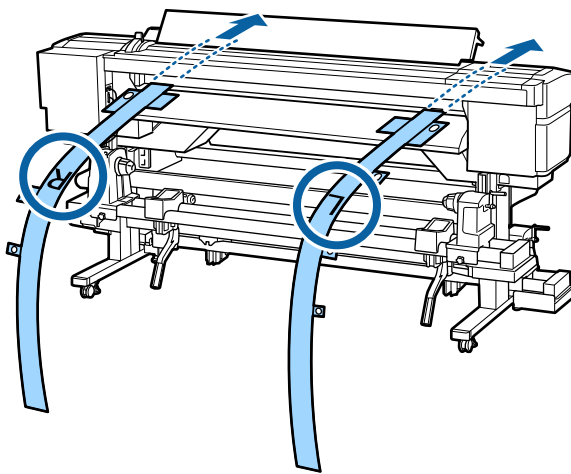


5. Place the tabs over the screws at the back of the product and remove the backing to secure the tabs.

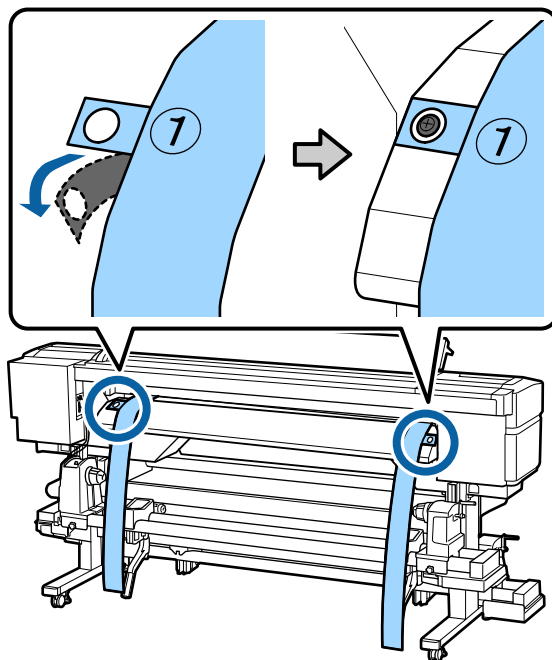


Note: The adhesive does not damage the heating unit.


6. Place the tabs over the screws at the front of the product and attach them as shown.

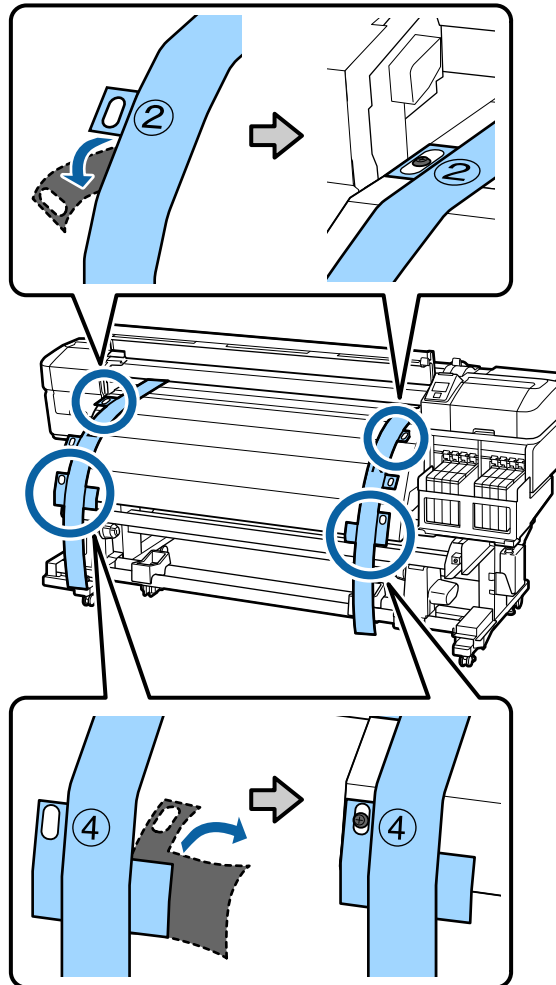



7. At the back of the product, loosen the roll holder fixing screws and align the left side of the roll holder with the left side the product as shown. Then tighten the roll holder fixing screw to secure it in place.

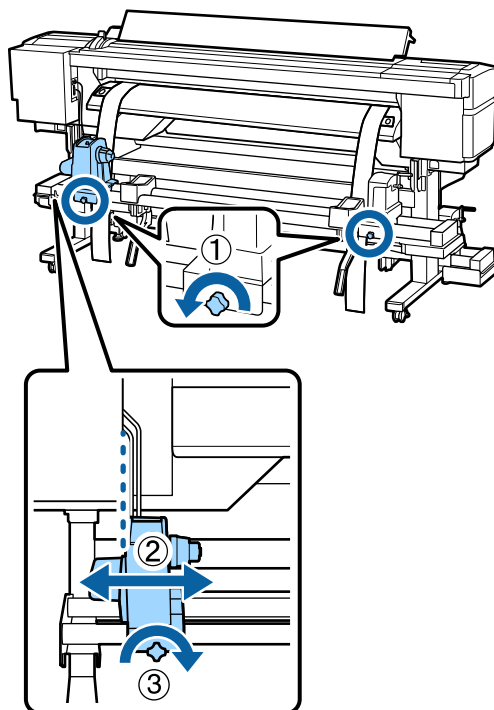


8. Adjust the right roll holder so that the distance between the two is wider than the roll core.

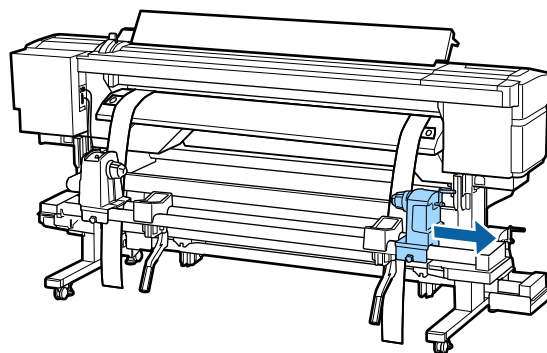


Note: If the roll holder handle shaft is pushed in, rotate the handle toward you (counterclockwise) until it stops.

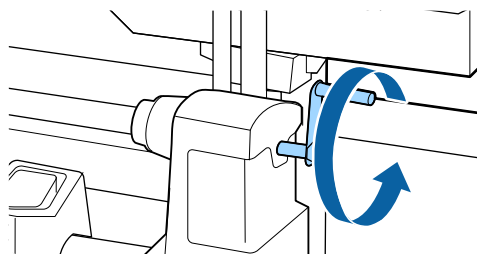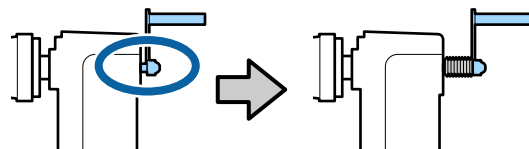


9. Slide the roll core into the loop at the end of the alignment tool.

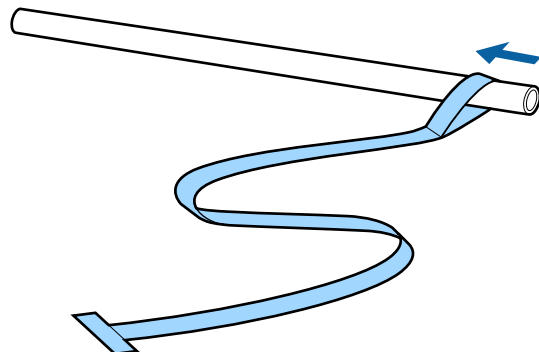


10. Insert the roll core with the alignment tool into the left roll holder. Then insert the right roll holder into the roll core and tighten the roll holder fixing screw.

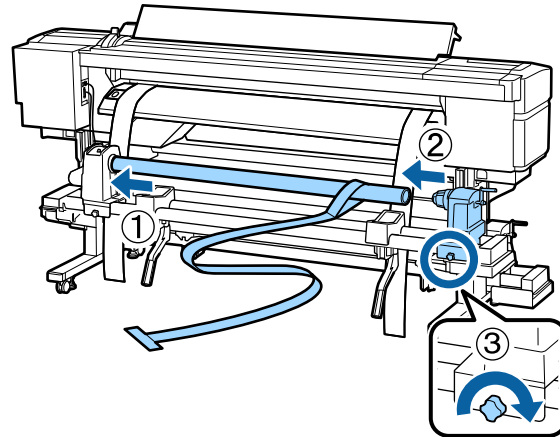


11. Rotate the handle until part A is fully inserted as shown.

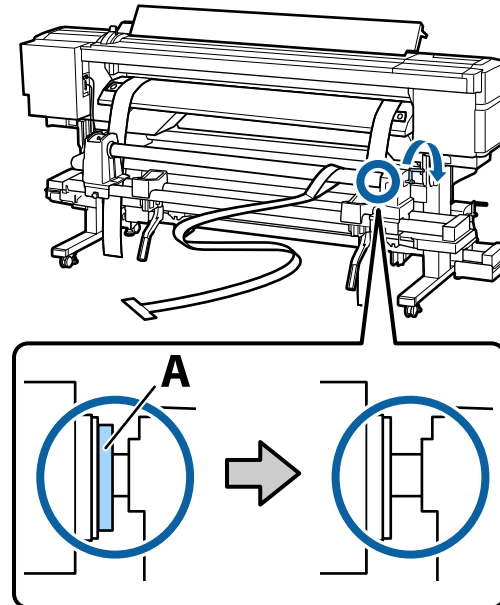


12. Feed the alignment tool into the product.

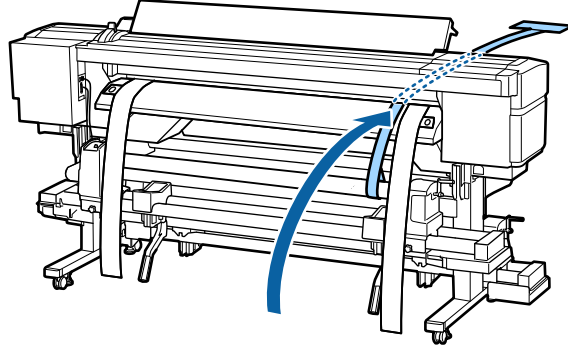


13. Place the alignment tool (a) next to the left adjustment guide (b) and line them up at the front and back of the product.

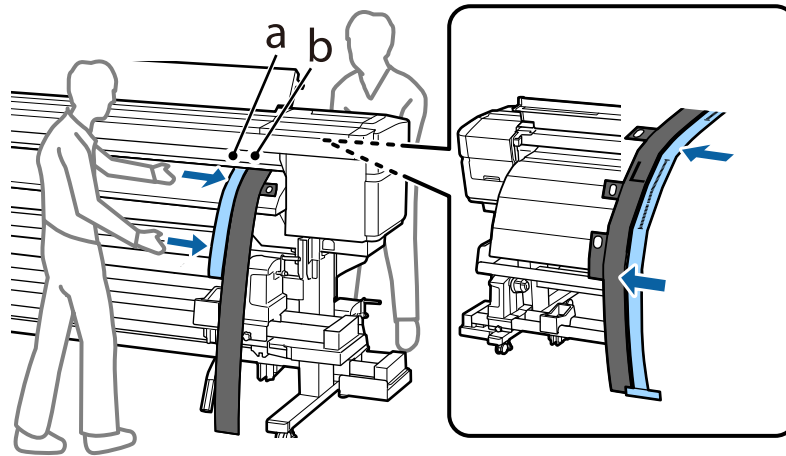

14. Attach a counterweight to the alignment tool to keep it stretched taut. Note the location where it crosses the front of the white line on the platen.

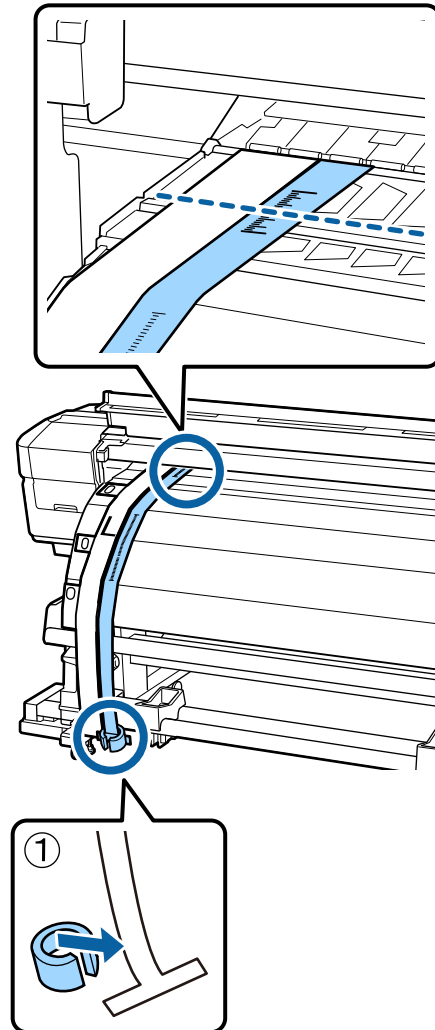


15. Lift up the alignment tool and slide it to the other side of the product, next to the right adjustment guide. Line up the alignment tool and the adjustment guide at the front and back of the product. Note the location where the alignment tool crosses the front of the white line on the platen.

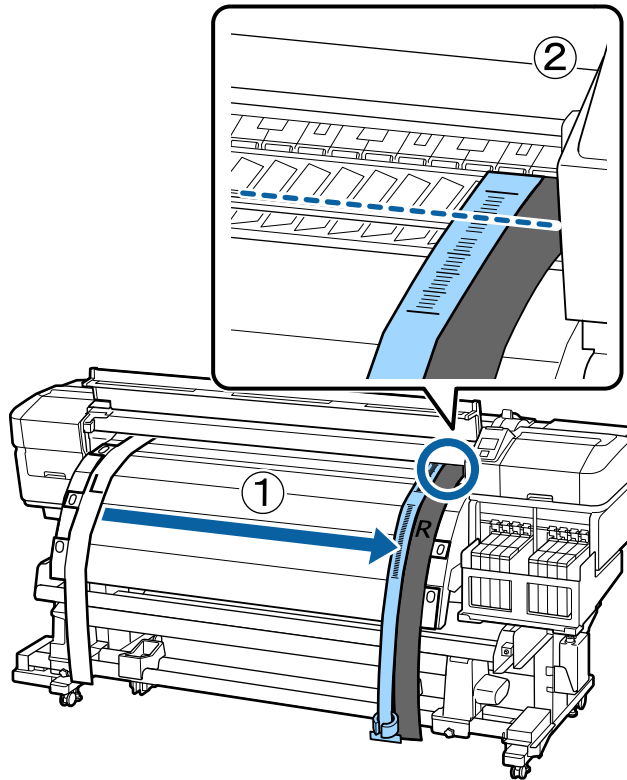


16. Do one of the following:
- If the location you noted is different from the left side, go to the next step.
 - If the location you noted is the same as the left side, go to step 18.
17. Make sure all four of the mounting screws are loose. Then have one person at the back of the product turn the silver adjustment screw. Turn the screw counterclockwise to move the line back and

turn it clockwise to move the line forward. The line moves approximately 1 mm with each turn of the screw.

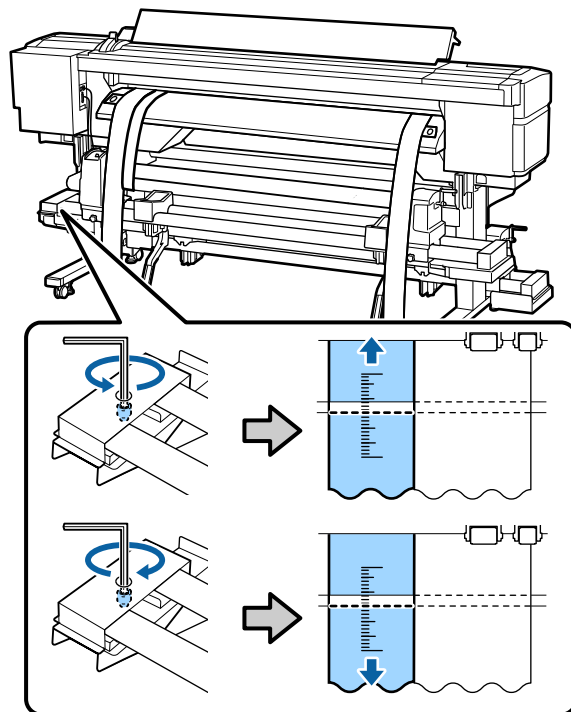


Continue to turn the silver adjustment screw until the measurements are the same.


18. Use the large hexagon wrench to fully tighten all four of the mounting screws.

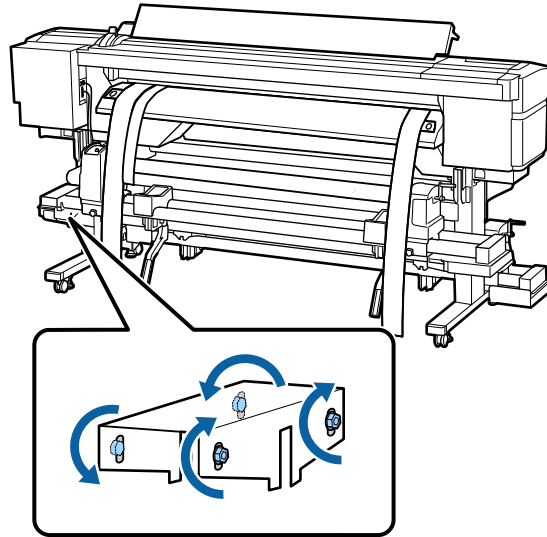


19. At the front of the product, remove the counterweight from the alignment tool.

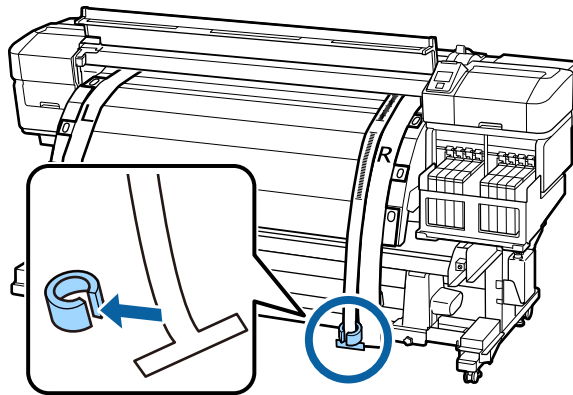

20. From the back of the product, remove the alignment tool. Then loosen the right roll holder fixing screw and slide out the right roll holder.

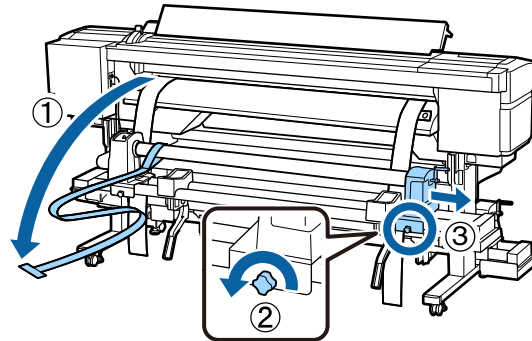

21. Remove the roll core and the alignment tool.

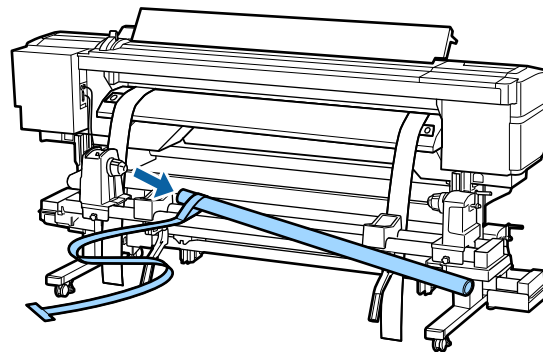

22. Now perform the parallel adjustment of the auto take-up reel.


Parent topic: [Solving Media Skew Problems](#)

Adjusting the Auto Take-up Reel


After adjusting the media feeding unit, you need to perform a similar procedure on the auto take-up reel.

Two people are required for parallel adjustment: one in front of the printer and one in back.



1. Use the large hexagon wrench to loosen the four fixing screws on the front of the product as shown.

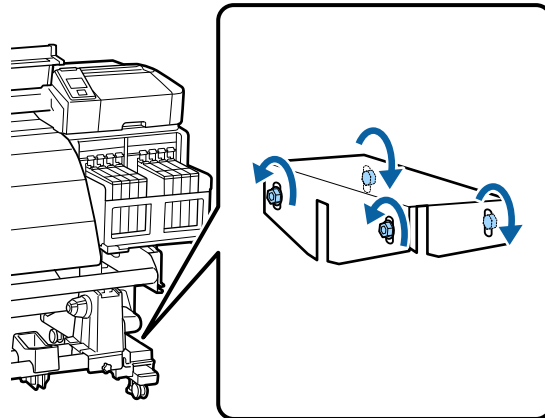


2. Loosen the roll core holder locking screws and move the left roll core holder all the way to the left. Align the inside edge of the right roll core holder with the outside edge of the after heater, then tighten the right roll core holder locking screw.

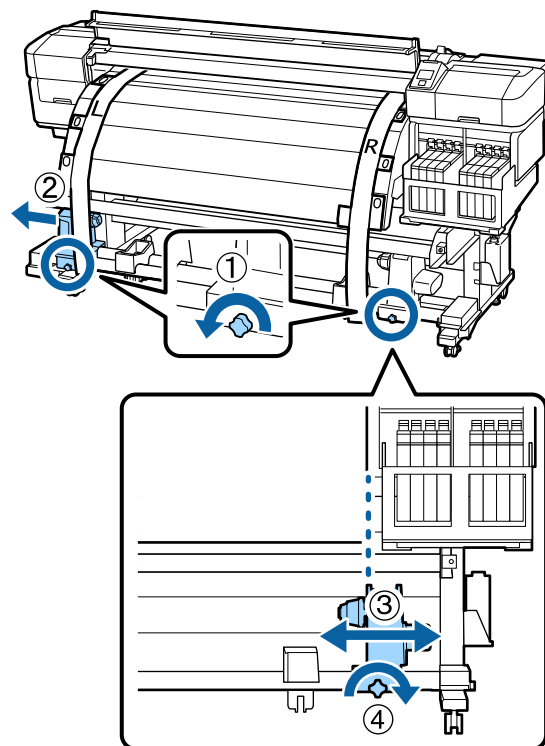


Note: If the left roll core handle shaft is pushed in, rotate the handle until it stops.

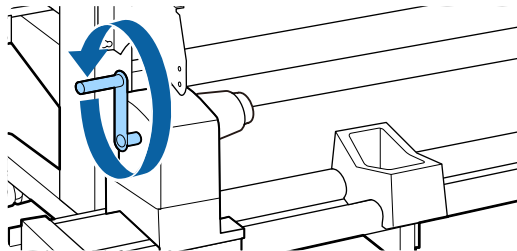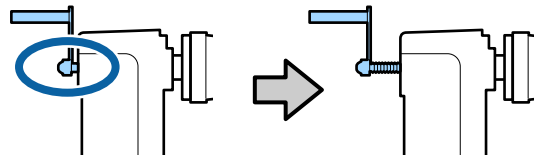


3. Insert the roll core with the alignment tool into the right roll holder. Then insert the left roll core holder into the roll core and tighten the roll core holder locking screw.

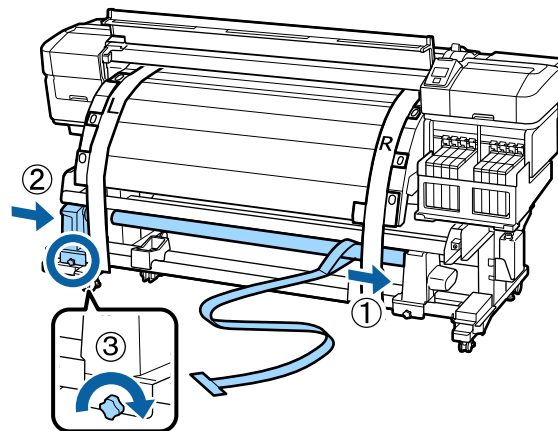


4. Rotate the handle until part A is fully inserted as shown.

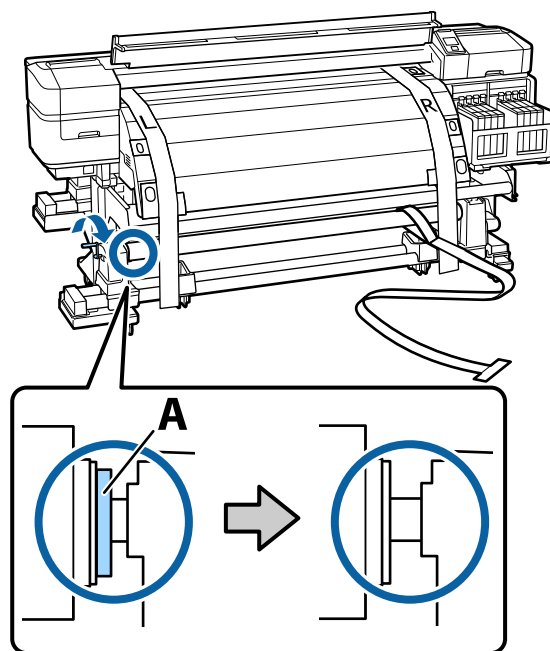


5. Move the alignment tool to the left side and feed it through the paper path between the media guide bar and the after heater.

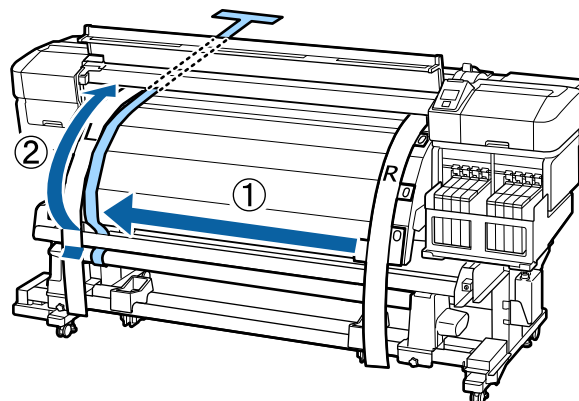


6. Place the alignment tool (a) next to the left adjustment guide (b) and line them up at the front and back of the product. Then attach the counterweight to the alignment tool.

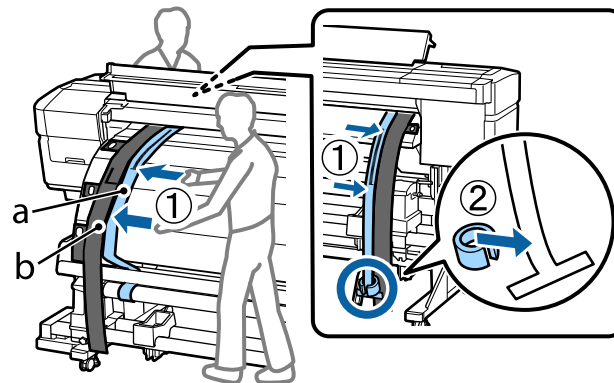

7. Note the location where the alignment tool crosses the front of the white line on the platen.

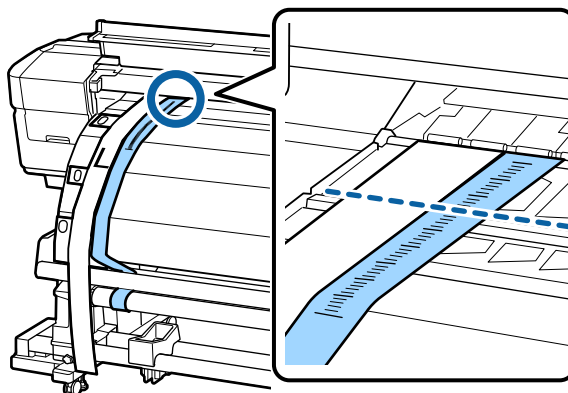


8. Lift up the alignment tool and slide it to the other side of the product, next to the right adjustment guide. Line up the alignment tool and the adjustment guide at the front and back of the product. Note the location where the alignment tool crosses the front of the white line on the platen.

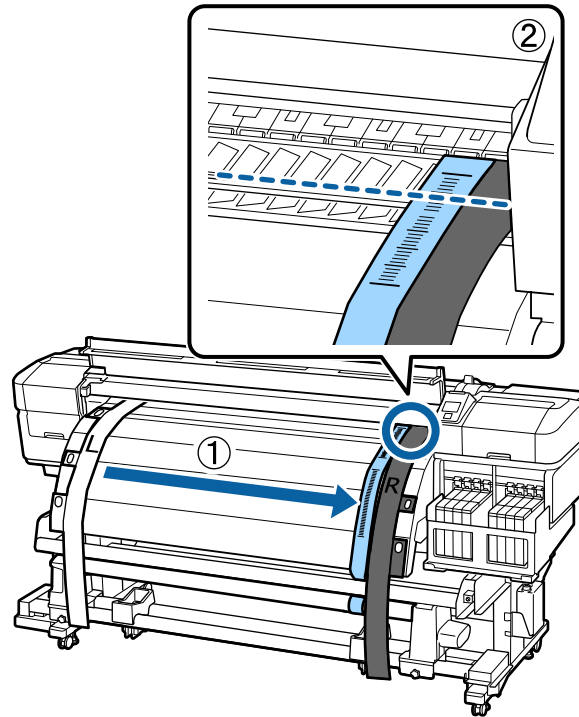


9. Do one of the following:
- If the location you noted is different from the left side, go to the next step.
 - If the location you noted is the same as the left side, go to step 11.

10. Make sure all four of the mounting screws are loose. Use the large hexagon wrench to turn the silver adjustment screw counterclockwise to move the line back and turn it clockwise to move the line forward. The line moves approximately 1 mm with each turn of the screw.

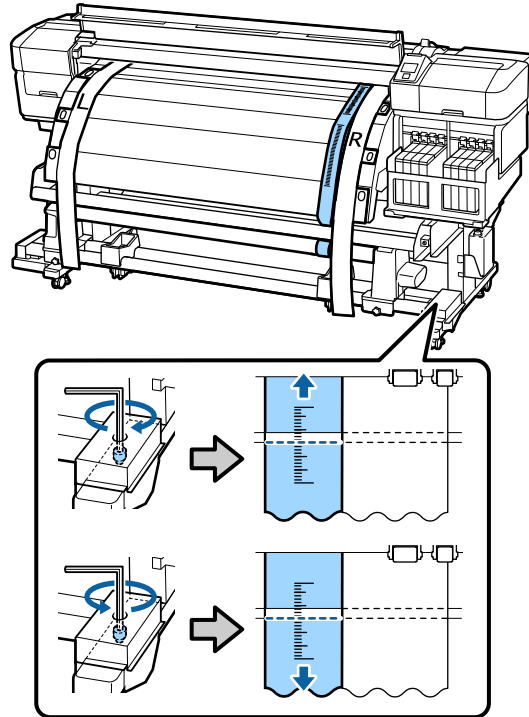


Continue to turn the silver adjustment screw until the measurements are the same.


11. Fully tighten all four of the screws on the right bracket to secure it in place.

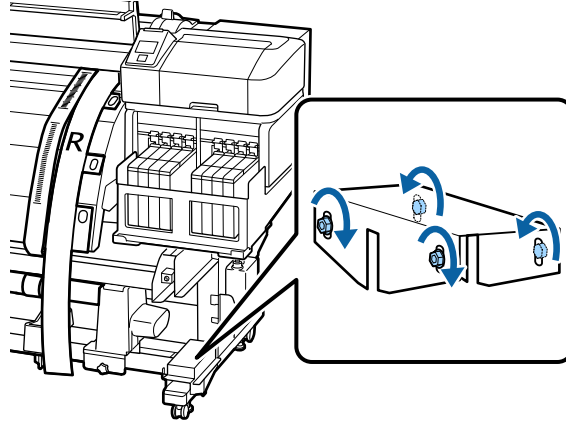


12. At the back of the product, remove the counterweight.

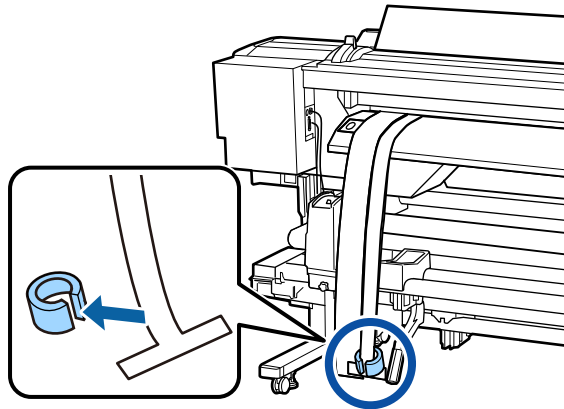


13. At the front of the product, remove the alignment tool.

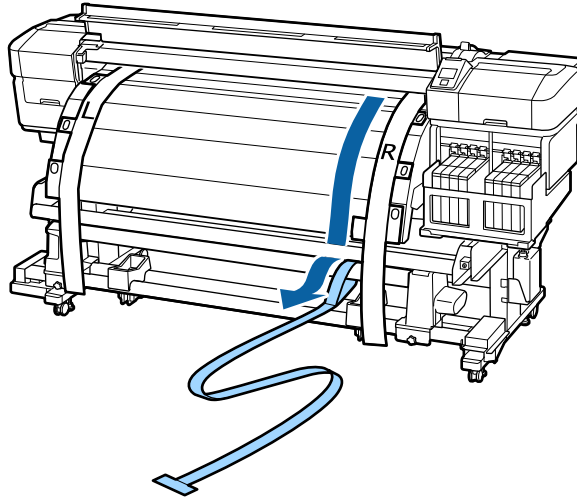


14. Move the alignment tool to the left side and feed it through the paper path between the media guide bar and the after heater.

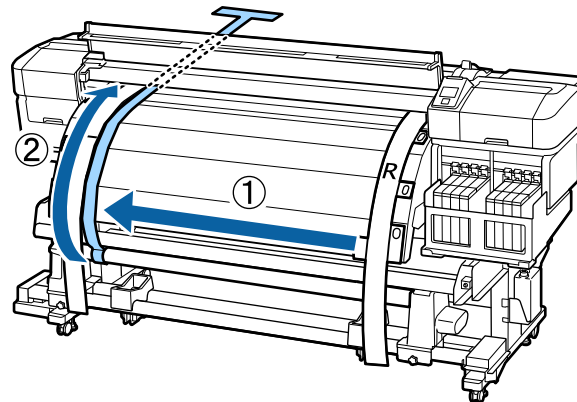


15. Place the alignment tool (a) next to the left adjustment guide (b) and line them up at the front and back of the printer. Then attach the counterweight to the alignment tool.

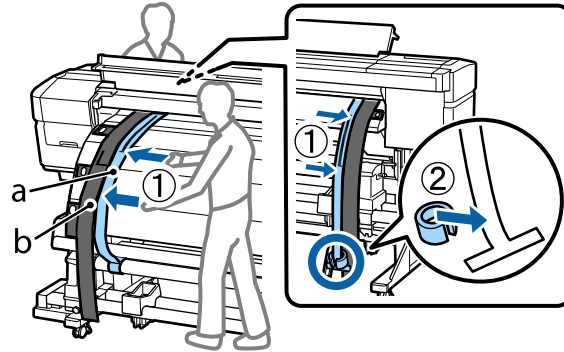

16. Note the location where the alignment tool crosses the front of the white line on the platen.

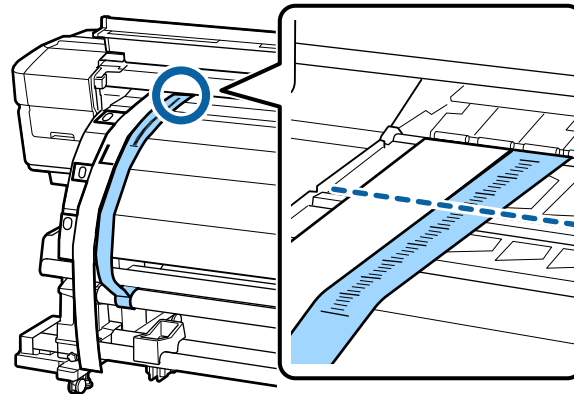


17. Lift up the alignment tool and slide it to the other side of the product, next to the right adjustment guide. Line up the alignment tool and the adjustment guide at the front and back of the product. Note the location where the alignment tool crosses the front of the white line on the platen.

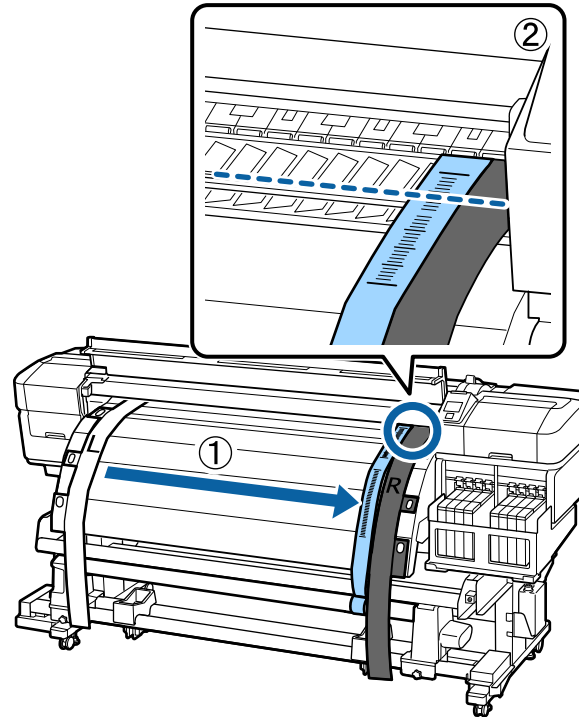


18. Do one of the following:
- If the location you noted is different from the left side, go to the next step.
 - If the location you noted is the same as the left side, go to step 21.

19. Use the small hexagon wrench to loosen the two screws.

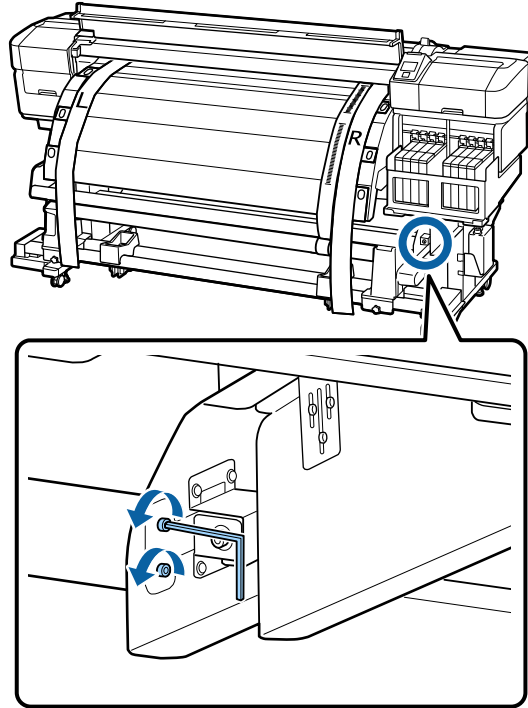


20. Make adjustments using the large hexagon wrench while holding the media guide bar. Turn the adjustment screw counterclockwise to move the line back and turn it clockwise to move the line forward. The line moves approximately 1 mm with each turn of the screw.

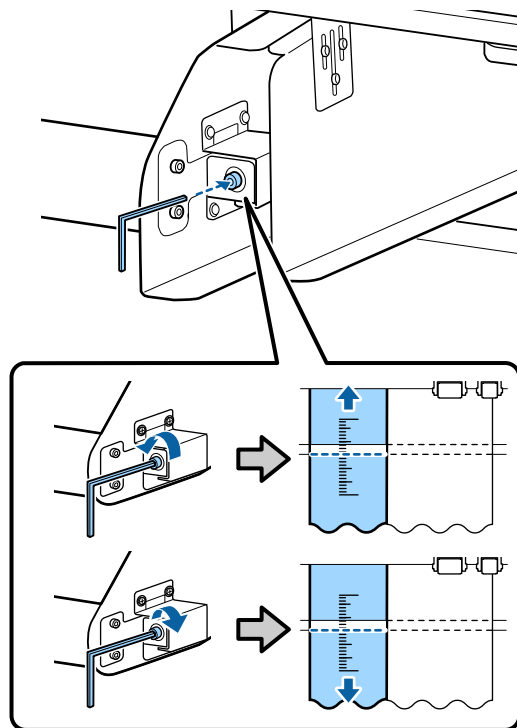


Continue to turn the adjustment screw until the measurements are the same.


21. Use the small hexagon wrench to tighten the two screws.

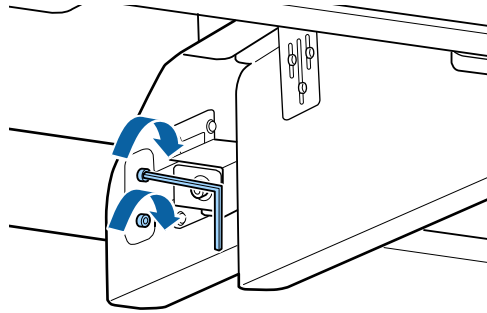


22. At the back of the product, remove the counterweight.

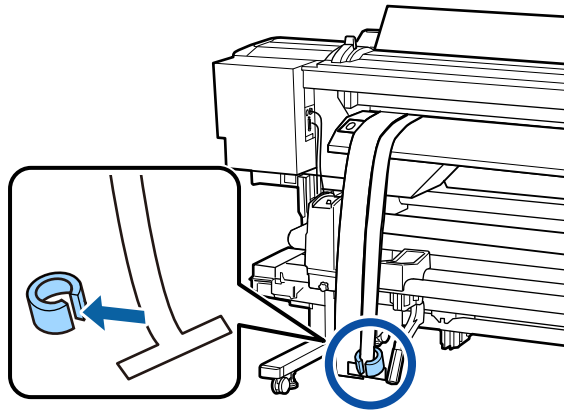


23. At the front of the product, remove the alignment tool. Then loosen the roll holder locking screw and remove the right roll holder.

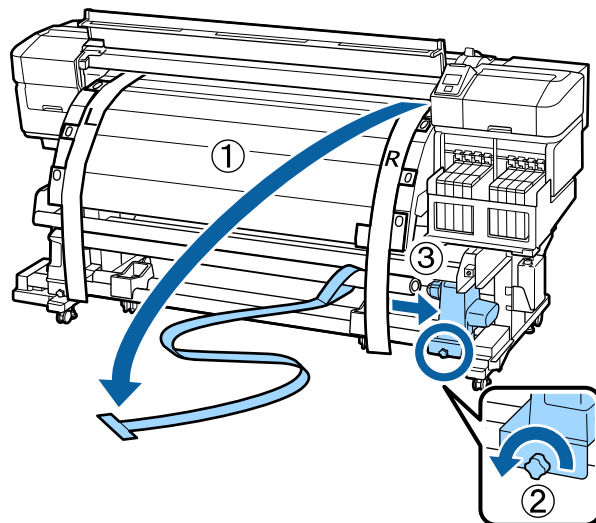


24. Remove the roll core and the alignment tool.

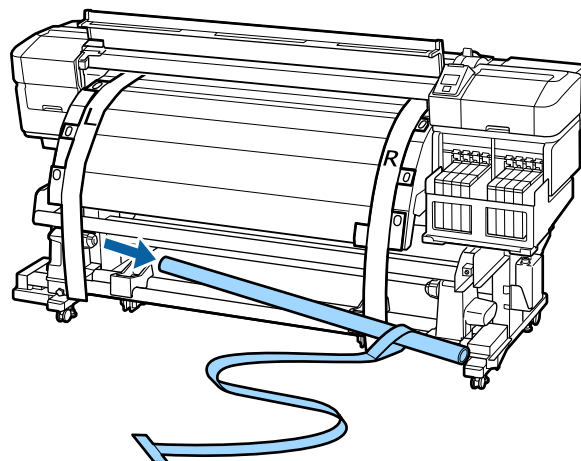

25. Remove the alignment tool from the roll core.

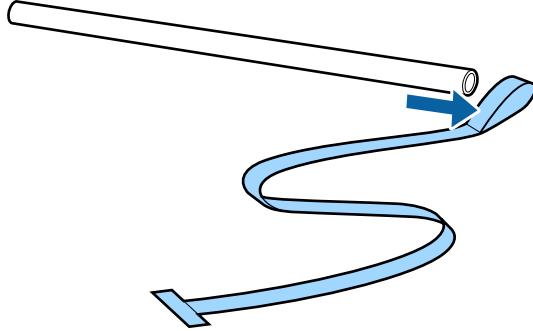

26. Remove the adjustment guides from the product.

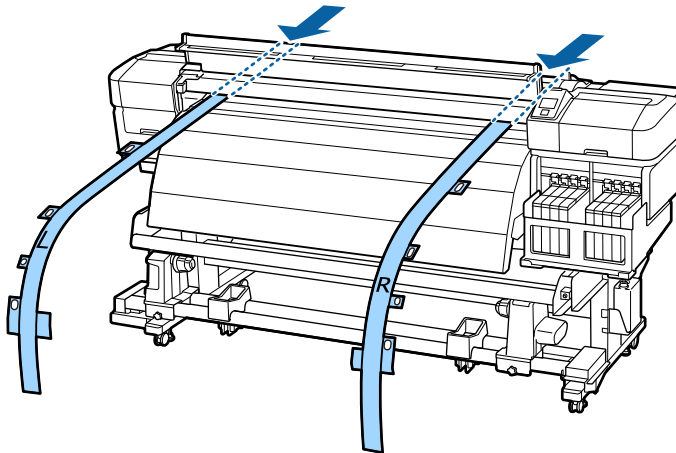

27. Use a damp lint-free cloth to wipe off any dust and lint from the back of the adjustment guides. Roll up the alignment tool and adjustment guides and store them so that they do not become creased.

Parent topic: [Solving Media Skew Problems](#)

Solving Print Quality Problems

Check these sections if you have problems with print quality.

[Nozzle Check Pattern Prints Incorrectly](#)
[Print Head Nozzles Remain Clogged](#)
[Overall Print Quality Is Poor](#)
[Printed Media is Stained or Marred](#)
[Image is not Positioned Correctly on the Media](#)

Parent topic: [Solving Problems](#)

Nozzle Check Pattern Prints Incorrectly

If the nozzle check pattern does not print correctly, try these solutions:

- Clean the print head and print the check pattern again.
- If the printer has not been used for a long time, nozzles may be dried and clogged. Turn the printer on at least once every two weeks to prevent the nozzles from clogging.

Parent topic: [Solving Print Quality Problems](#)

Related references

[Print Head Nozzles Remain Clogged](#)




Related tasks

[Checking for Clogged Print Head Nozzles](#)

[Cleaning the Print Head](#)

Print Head Nozzles Remain Clogged

If cleaning the print head multiple times does not unclog the print head nozzles, you need to clean the areas shown here:

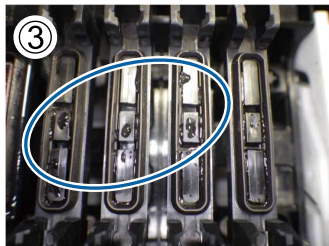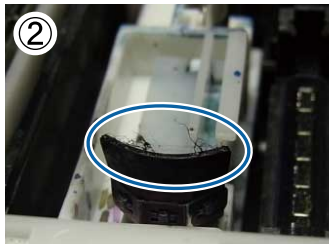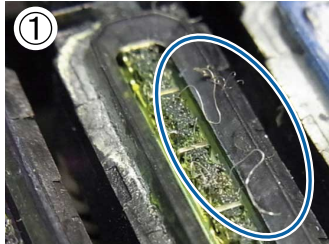

If ink, lint, or dust adheres to the areas shown here, clean these areas or parts inside the printer:

- Around the print head
- Anti-drying caps
- Wipers

Parent topic: [Solving Print Quality Problems](#)

Related tasks

[Cleaning Around the Print Heads](#)

[Cleaning the Wipers and Wiper Attachment Points](#)

[Cleaning the Anti-drying Caps](#)

Overall Print Quality Is Poor

If you notice that your print quality is uneven, too light, too dark, or there are vertical or horizontal lines in the print (banding), try these solutions:

- Run a nozzle check to see if any of the print head nozzles are clogged. Then clean the print head, if necessary.
- Align the print head.
- Perform Feed Adjustment for the media. For the most accurate adjustment, print a test pattern using the **Manual > 500mm Pattern** setting. The same media in a different width may require different adjustment values.
- Use genuine Epson ink packs and make sure the ink packs have not expired.
- Raise the temperature of the after heater, and give the heater and your media time to warm up before printing again.
- Make sure the media settings in your RIP software are correct for the media you are using.
- Set the **Head Movement** setting to **Printer Full Width** on the product control panel for higher quality printouts.
- If you are comparing the print result with the image on your computer screen, the colors may not match. Since monitors and printers produce colors differently, printed colors and screen colors do not always look the same.
- Make sure that the printer cover is closed. Do not open any printer covers during printing. This can cause the print head to stop abruptly, resulting in uneven color.
- If you print with 1 or 2 passes in the RIP software, reduce the feed speed in the RIP software.
- Check that the media holding plates are installed correctly and are not damaged.
- If you are using the media settings in the product control panel, set the **Feed Speed** setting to **Lv1**.

Parent topic: [Solving Print Quality Problems](#)

Related references

[Media Setup Menu Settings](#)

[Consumables and Replacement Parts](#)

Related tasks

[Checking for Clogged Print Head Nozzles](#)

[Cleaning the Print Head](#)
[Aligning the Print Head](#)
[Adjusting the Media Feed](#)

Printed Media is Stained or Marred

If the printed media is stained or the surface is marred, try these solutions:

- Make sure the media is not too thick or thin. Check that it meets the media specifications for your product and RIP software.
- Check that the media is not creased or folded, causing it to contact the print head. If necessary, load new media.
- If your media is wavy, press the down arrow button on the product control panel to feed the media past the affected area. Make sure your printing environment is not too hot or humid to avoid wavy media.
- Clean the print head, wiper, and caps as necessary to remove ink that may have stained these parts and transferred to your printout.
- Adjust the **Platen Gap** setting on the product control panel to prevent the print head from striking the media as you print.
- If your printouts contain marks that look like those shown here, the print head is striking the media as you print:



Try these solutions in this order until the results improve:

- Cut off any wrinkled or wavy media and do not load media until you are ready to print.
- Reload the media and check that all of the media settings are correct.
- Reattach the media to the auto take-up reel and make sure the media is taken up correctly.

- Adjust the after heater temperature.

Parent topic: [Solving Print Quality Problems](#)

Related references

[Media Setup Menu Settings](#)

[Media Specifications](#)

[Environmental Specifications](#)

Related tasks

[Loading Media](#)

Related topics

[Using the Auto Take-up Reel](#)

Image is not Positioned Correctly on the Media

If the printed image is not positioned correctly on your media, try these solutions:

- Make sure you loaded the media correctly and selected the correct margin and start positions for it on the product control panel.
- Turn on the **Media Skew Check** and **Media Size Check** settings on the product control panel to prevent your image from printing outside the printable area.

Parent topic: [Solving Print Quality Problems](#)

Related references

[Printer Setup Menu Settings](#)

[Printable Area and Media Size Checking](#)

Related tasks

[Loading Media](#)

Where to Get Help

Epson provides technical support and information on the installation, configuration, and operation of professional printing products through the Epson Preferred Limited Warranty Plan. Dial (888) 377-6611, 6 AM to 6 PM, Pacific Time, Monday through Friday. Days and hours of support are subject to change without notice.

Before you call, make sure you have your Unit ID number, which is included with the Epson Preferred Limited Warranty Plan information that came with your printer. You'll also need your printer serial number and proof of purchase.

Visit Epson's [U.S. support website](#) or [Canadian website](#) and select your product for solutions to common problems. You can download drivers, firmware, and documentation, get FAQs and troubleshooting advice, or e-mail Epson with your questions.

Note: For help using any other software on your system, see the documentation for that software for technical support information.

Purchase Supplies and Accessories

You can purchase genuine Epson ink packs, paper, and accessories from an Epson authorized reseller. To find the nearest reseller, call 800-GO-EPSON (800-463-7766).

Parent topic: [Solving Problems](#)

Technical Specifications

These sections list the technical specifications for your product.

Note: Epson offers a recycling program for end of life products. Please go to [this site](#) for information on how to return your products for proper disposal.

[Windows System Requirements](#)

[Printing Specifications](#)

[Electrical Specifications](#)

[Environmental Specifications](#)

[Dimension Specifications](#)

[Interface Specifications](#)

[Ink Pack Specifications](#)

[Media Specifications](#)

[Safety and Approvals Specifications](#)

Windows System Requirements

To use your product and its software, your computer should meet these requirements.

Microsoft Windows OS version (32- and 64-bit compatible)	Windows 7, Windows 8.x
CPU	Core 2 Duo 2.0 GHZ or better
Memory	1GB or more
Hard disk space available	32GB or more
Interface	Two High-Speed USB ports compatible with USB 2.0 Specification Rear port: for computer connection Front port: for external USB device connection
Display resolution	XGA (1024 × 768) or higher

Note: Visit Epson's support website at epson.com/support (U.S.) or epson.ca/support (Canada) for the latest in compatibility and drivers for your product.

Parent topic: [Technical Specifications](#)

Printing Specifications

Printing method	On-demand ink jet
Nozzle configuration	360 nozzles × 2 × 2 rows × 4 colors
Resolution	720 × 1440 dpi maximum
Control code	ESC/P raster (undisclosed command)
Media feed method	Friction feed
Built-in memory	Main memory: 512MB Network: 128MB

Parent topic: [Technical Specifications](#)

Electrical Specifications

Power supply rating	100 to 120 V
Rated frequency range	50/60 Hz
Rated current	10 A
Power consumption	Printing: approximately 760 W (ISO/IEC24712) Ready mode: approximately 458 W Sleep mode: approximately 11 W Power off mode: 1 W

Parent topic: [Technical Specifications](#)

Environmental Specifications

Temperature

Operating: 59 to 95 °F (15 to 35 °C); 59 to 77 °F (15 to 25 °C) recommended

Storage (before unpacking): –4 to 140 °F (–20 to 60 °C), no more than 120 hours at 140 °F (60 °C), within a month at 104 °F (40 °C)

Storage (after unpacking): –4 to 104 °F (–20 to 40 °C), within a month at 104 °F (40 °C)

Humidity

(non-condensing)

Operating: 20 to 80% RH (40 to 60% recommended)

Storage (before and after unpacking): 5 to 85% RH

Parent topic: [Technical Specifications](#)

Dimension Specifications

Height

Stored: 51.7 inches (1314 mm)

Printing: 65.1 inches (1653 mm)

Width

Stored: 103.1 inches (2620 mm)

Printing: 103.1 inches (2620 mm)

Depth

Stored: 39.9 inches (1013 mm)

Printing: 47.2 inches (1198 mm)

Weight

(without ink)

634.9 lb (288 kg)

Parent topic: [Technical Specifications](#)

Interface Specifications

USB Interface

Hi-Speed USB-Compatible with the Universal Serial Bus Specifications Revision 2.0

Network Interface

100Base-TX/1000Base-T (requires a shielded twisted pair cable, category 5 or higher)

Parent topic: [Technical Specifications](#)

Ink Pack Specifications

Sublimation transfer ink color	High Density Black, Cyan, Magenta, Yellow
Ink life	Do not use if the date on the package has expired
Print quality guarantee	25 days (from the day the ink tank was refilled from the ink pack)
Temperature	In transit (unopened): –4 to 140 °F (–20 to 60 °C) 1 month at 104 °F (40 °C) 8 hours at 140 °F (60 °C) In storage (opened): 41 to 95 °F (5 to 35 °C); 59 to 77 °F (15 to 25 °C) recommended
Capacity	1000 ml

Parent topic: [Technical Specifications](#)

Related references

[Consumables and Replacement Parts](#)

Media Specifications

Print quality is greatly affected by the type and quality of media used. Always test a sample of media before purchasing large quantities or printing large jobs.

Note: Do not use media that is wrinkled, scratched, torn, or dirty.

Roll core size	2 or 3 inches
Roll outer diameter	Up to 9.8 inches (250 mm)
Media width	12 to 64 inches (300 to 1626 mm)
Media thickness	Up to 0.04 inch (1 mm)
Roll weight	Up to 88.2 lb (40 kg)

Parent topic: [Technical Specifications](#)

Safety and Approvals Specifications

United States

Safety: UL60950-1

EMC: FCC part 15 Subpart B class A

Canada

Safety: CAN/CSA C22.2 No. 60950-1

EMC: CAN/CSA-CEI/IEC CISPR 22 Class A

Parent topic: [Technical Specifications](#)

Notices

Check these sections for important notices about your product.

Note: Epson offers a recycling program for end of life products. Please go to [this site](#) for information on how to return your products for proper disposal.

[Important Safety Instructions](#)

[FCC Compliance Statement](#)

[Software License Terms](#)

[Trademarks](#)

[Copyright Notice](#)

Important Safety Instructions

Before using your Epson product, read and follow these safety instructions.

[General Product Safety Instructions](#)

[Ink Pack Safety Instructions](#)

Parent topic: [Notices](#)

General Product Safety Instructions

- Be sure to follow all warnings and instructions marked on the product.
- Use only the type of power source indicated on the product's label.
- Use only the power cord that comes with the product. Use of another cord may cause fires or shock. Do not use the cord with any other equipment.
- Place the product near a wall outlet where the plug can be easily unplugged.
- This product has two power systems. Unplug the two power cords during maintenance to avoid the risk of electric shock.
- Connect your product to a properly grounded power outlet. Avoid plugging the product into an outlet on the same circuit as a photo copier or air control system that regularly switches on and off, or on an outlet controlled by a wall switch or timer.
- Do not let the power cord become damaged or frayed. Place it to avoid abrasions, cuts, fraying, crimping, and kinking. Do not place objects on top of it and do not allow it to be stepped on or run over. Be careful to keep the cord straight at each end.

- If you use an extension cord with the product, make sure the total ampere rating of the devices plugged into the extension cord does not exceed the cord's ampere rating. Also, make sure the total ampere rating of all devices plugged into the wall outlet does not exceed the wall outlet's ampere rating.
- If damage occurs to the plug, replace the cord set or consult a qualified electrician. If there are fuses in the plug, make sure you replace them with fuses of the correct size and rating.
- Always turn off the product using the power button, and wait until the power light stops flashing before unplugging the product or cutting off power to the electrical outlet.
- If you will not be using the product for a long period, unplug the power cord from the electrical outlet.
- Place the product on a flat, stable surface that extends beyond its base in all directions. It will not operate properly if it is tilted or at an angle.
- Avoid locations that are subject to rapid changes in heat or humidity, shocks or vibrations, or dust.
- Do not place or store the product outdoors.
- Do not place the product near excessive heat sources or in direct sunlight.
- Leave enough room around the product for sufficient ventilation. Do not block or cover openings in the cabinet or insert objects through the slots.
- Keep the product away from potential sources of electromagnetic interference, such as loudspeakers or the base units of cordless telephones.
- When connecting the product to a computer or other device with a cable, ensure the correct orientation of the connectors. Each connector has only one correct orientation. Inserting a connector in the wrong orientation may damage both devices connected by the cable.
- Do not spill liquid on the product or use the product with wet hands.
- Do not use aerosol products that contain flammable gases inside or around the product. Doing so may cause fire.
- Except as specifically explained in your documentation, do not attempt to service the product yourself.
- Unplug the product and refer servicing to qualified service personnel under the following conditions: if the power cord or plug is damaged; if liquid has entered the product; if the product has been dropped or the cabinet damaged; if the product does not operate normally or exhibits a distinct change in performance. Adjust only those controls that are covered by the operating instructions.
- When storing or transporting the product, do not tilt it, stand it on its side, or turn it upside down; otherwise ink may leak.

Note: The lithium batteries in this product contain Perchlorate Material - special handling may apply. [Click here](#) for details.

Parent topic: [Important Safety Instructions](#)

Ink Pack Safety Instructions

- Keep ink packs out of the reach of children and do not drink the ink.
- Wear protective eyewear, gloves, and a mask when performing maintenance.
- Should ink touch your skin or enter your eyes or mouth, immediately take the following actions:
 - If fluid touches your skin, wash it off immediately with large volumes of soapy water. Consult a physician if the skin appears irritated or discolored.
 - If fluid gets in your eyes, rinse immediately with water. Failure to observe this precaution could result in bloodshot eyes or mild inflammation. If problems persist, consult with a physician.
 - If swallowed, do not induce vomiting and consult with a physician as soon as possible.
 - If fluid gets in your mouth, consult a physician as soon as possible.

Parent topic: [Important Safety Instructions](#)

FCC Compliance Statement

For United States Users

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

WARNING

The connection of a non-shielded equipment interface cable to this equipment will invalidate the FCC Certification of this device and may cause interference levels which exceed the limits established by the FCC for this equipment. It is the responsibility of the user to obtain and use a shielded equipment interface cable with this device. If this equipment has more than one interface connector, do not leave

cables connected to unused interfaces. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

For Canadian Users

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

WARNING

This is a Class A product. In a domestic environment this product may cause radio interference, in which case the user may be required to take adequate measures.

Parent topic: [Notices](#)

Software License Terms

Bonjour

This printer product includes the open source software programs which apply the Apple Public Source License Version 1.2 or its latest version ("Bonjour Programs").

We provide the source code of the Bonjour Programs pursuant to the Apple Public Source License Version 1.2 or its latest version until five (5) years after the discontinuation of same model of this printer product. If you desire to receive the source code of the Bonjour Programs, contact Epson support.

You can redistribute Bonjour Programs and/or modify it under the terms of the Apple Public Source License Version 1.2 or its latest version.

These Bonjour Programs are WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

The Apple Public Source License Version 1.2 is as follows. You also can see the Apple Public Source License Version 1.2 at <http://www.opensource.apple.com/apsl/>.

APPLE PUBLIC SOURCE LICENSE

Version 2.0 - August 6, 2003

1. General; Definitions. This License applies to any program or other work which Apple Computer, Inc. ("Apple") makes publicly available and which contains a notice placed by Apple identifying such program or work as "Original Code" and stating that it is subject to the terms of this Apple Public Source License version 2.0 ("License"). As used in this License:

1.1 "Applicable Patent Rights" mean: (a) in the case where Apple is the grantor of rights, (i) claims of patents that are now or hereafter acquired, owned by or assigned to Apple and (ii) that cover subject matter contained in the Original Code, but only to the extent necessary to use, reproduce and/or

distribute the Original Code without infringement; and (b) in the case where You are the grantor of rights, (i) claims of patents that are now or hereafter acquired, owned by or assigned to You and (ii) that cover subject matter in Your Modifications, taken alone or in combination with Original Code.

1.2 "Contributor" means any person or entity that creates or contributes to the creation of Modifications.

1.3 "Covered Code" means the Original Code, Modifications, the combination of Original Code and any Modifications, and/or any respective portions thereof.

1.4 "Externally Deploy" means: (a) to sublicense, distribute or otherwise make Covered Code available, directly or indirectly, to anyone other than You; and/or (b) to use Covered Code, alone or as part of a Larger Work, in any way to provide a service, including but not limited to delivery of content, through electronic communication with a client other than You.

1.5 "Larger Work" means a work which combines Covered Code or portions thereof with code not governed by the terms of this License.

1.6 "Modifications" mean any addition to, deletion from, and/or change to, the substance and/or structure of the Original Code, any previous Modifications, the combination of Original Code and any previous Modifications, and/or any respective portions thereof. When code is released as a series of files, a Modification is: (a) any addition to or deletion from the contents of a file containing Covered Code; and/or (b) any new file or other representation of computer program statements that contains any part of Covered Code.

1.7 "Original Code" means (a) the Source Code of a program or other work as originally made available by Apple under this License, including the Source Code of any updates or upgrades to such programs or works made available by Apple under this License, and that has been expressly identified by Apple as such in the header file(s) of such work; and (b) the object code compiled from such Source Code and originally made available by Apple under this License.

1.8 "Source Code" means the human readable form of a program or other work that is suitable for making modifications to it, including all modules it contains, plus any associated interface definition files, scripts used to control compilation and installation of an executable (object code).

1.9 "You" or "Your" means an individual or a legal entity exercising rights under this License. For legal entities, "You" or "Your" includes any entity which controls, is controlled by, or is under common control with, You, where "control" means (a) the power, direct or indirect, to cause the direction or management of such entity, whether by contract or otherwise, or (b) ownership of fifty percent (50%) or more of the outstanding shares or beneficial ownership of such entity.

2. Permitted Uses; Conditions & Restrictions. Subject to the terms and conditions of this License, Apple hereby grants You, effective on the date You accept this License and download the Original Code, a world-wide, royalty-free, non-exclusive license, to the extent of Apple's Applicable Patent Rights and copyrights covering the Original Code, to do the following:

2.1 Unmodified Code. You may use, reproduce, display, perform, internally distribute within Your organization, and Externally Deploy verbatim, unmodified copies of the Original Code, for commercial or non-commercial purposes, provided that in each instance:

(a) You must retain and reproduce in all copies of Original Code the copyright and other proprietary notices and disclaimers of Apple as they appear in the Original Code, and keep intact all notices in the Original Code that refer to this License; and

(b) You must include a copy of this License with every copy of Source Code of Covered Code and documentation You distribute or Externally Deploy, and You may not offer or impose any terms on such Source Code that alter or restrict this License or the recipients' rights hereunder, except as permitted under Section 6.

2.2 Modified Code. You may modify Covered Code and use, reproduce, display, perform, internally distribute within Your organization, and Externally Deploy Your Modifications and Covered Code, for commercial or non-commercial purposes, provided that in each instance You also meet all of these conditions:

(a) You must satisfy all the conditions of Section 2.1 with respect to the Source Code of the Covered Code;

(b) You must duplicate, to the extent it does not already exist, the notice in Exhibit A in each file of the Source Code of all Your Modifications, and cause the modified files to carry prominent notices stating that You changed the files and the date of any change; and

(c) If You Externally Deploy Your Modifications, You must make Source Code of all Your Externally Deployed Modifications either available to those to whom You have Externally Deployed Your Modifications, or publicly available. Source Code of Your Externally Deployed Modifications must be released under the terms set forth in this License, including the license grants set forth in Section 3 below, for as long as you Externally Deploy the Covered Code or twelve (12) months from the date of initial External Deployment, whichever is longer. You should preferably distribute the Source Code of Your Externally Deployed Modifications electronically (e.g. download from a web site).

2.3 Distribution of Executable Versions. In addition, if You Externally Deploy Covered Code (Original Code and/or Modifications) in object code, executable form only, You must include a prominent notice, in the code itself as well as in related documentation, stating that Source Code of the Covered Code is available under the terms of this License with information on how and where to obtain such Source Code.

2.4 Third Party Rights. You expressly acknowledge and agree that although Apple and each Contributor grants the licenses to their respective portions of the Covered Code set forth herein, no assurances are provided by Apple or any Contributor that the Covered Code does not infringe the patent or other intellectual property rights of any other entity. Apple and each Contributor disclaim any liability to You for claims brought by any other entity based on infringement of intellectual property rights or otherwise. As a condition to exercising the rights and licenses granted hereunder, You hereby assume sole responsibility

to secure any other intellectual property rights needed, if any. For example, if a third party patent license is required to allow You to distribute the Covered Code, it is Your responsibility to acquire that license before distributing the Covered Code.

3. Your Grants. In consideration of, and as a condition to, the licenses granted to You under this License, You hereby grant to any person or entity receiving or distributing Covered Code under this License a non-exclusive, royalty-free, perpetual, irrevocable license, under Your Applicable Patent Rights and other intellectual property rights (other than patent) owned or controlled by You, to use, reproduce, display, perform, modify, sublicense, distribute and Externally Deploy Your Modifications of the same scope and extent as Apple's licenses under Sections 2.1 and 2.2 above.

4. Larger Works. You may create a Larger Work by combining Covered Code with other code not governed by the terms of this License and distribute the Larger Work as a single product. In each such instance, You must make sure the requirements of this License are fulfilled for the Covered Code or any portion thereof.

5. Limitations on Patent License. Except as expressly stated in Section 2, no other patent rights, express or implied, are granted by Apple herein. Modifications and/or Larger Works may require additional patent licenses from Apple which Apple may grant in its sole discretion.

6. Additional Terms. You may choose to offer, and to charge a fee for, warranty, support, indemnity or liability obligations and/or other rights consistent with the scope of the license granted herein ("Additional Terms") to one or more recipients of Covered Code. However, You may do so only on Your own behalf and as Your sole responsibility, and not on behalf of Apple or any Contributor. You must obtain the recipient's agreement that any such Additional Terms are offered by You alone, and You hereby agree to indemnify, defend and hold Apple and every Contributor harmless for any liability incurred by or claims asserted against Apple or such Contributor by reason of any such Additional Terms.

7. Versions of the License. Apple may publish revised and/or new versions of this License from time to time. Each version will be given a distinguishing version number. Once Original Code has been published under a particular version of this License, You may continue to use it under the terms of that version. You may also choose to use such Original Code under the terms of any subsequent version of this License published by Apple. No one other than Apple has the right to modify the terms applicable to Covered Code created under this License.

8. NO WARRANTY OR SUPPORT. The Covered Code may contain in whole or in part pre-release, untested, or not fully tested works. The Covered Code may contain errors that could cause failures or loss of data, and may be incomplete or contain inaccuracies. You expressly acknowledge and agree that use of the Covered Code, or any portion thereof, is at Your sole and entire risk. THE COVERED CODE IS PROVIDED "AS IS" AND WITHOUT WARRANTY, UPGRADES OR SUPPORT OF ANY KIND AND APPLE AND APPLE'S LICENSOR(S) (COLLECTIVELY REFERRED TO AS "APPLE" FOR THE PURPOSES OF SECTIONS 8 AND 9) AND ALL CONTRIBUTORS EXPRESSLY DISCLAIM ALL WARRANTIES AND/OR CONDITIONS, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES AND/OR CONDITIONS OF MERCHANTABILITY, OF SATISFACTORY

QUALITY, OF FITNESS FOR A PARTICULAR PURPOSE, OF ACCURACY, OF QUIET ENJOYMENT, AND NONINFRINGEMENT OF THIRD PARTY RIGHTS. APPLE AND EACH CONTRIBUTOR DOES NOT WARRANT AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE COVERED CODE, THAT THE FUNCTIONS CONTAINED IN THE COVERED CODE WILL MEET YOUR REQUIREMENTS, THAT THE OPERATION OF THE COVERED CODE WILL BE UNINTERRUPTED OR ERROR-FREE, OR THAT DEFECTS IN THE COVERED CODE WILL BE CORRECTED. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY APPLE, AN APPLE AUTHORIZED REPRESENTATIVE OR ANY CONTRIBUTOR SHALL CREATE A WARRANTY. You acknowledge that the Covered Code is not intended for use in the operation of nuclear facilities, aircraft navigation, communication systems, or air traffic control machines in which case the failure of the Covered Code could lead to death, personal injury, or severe physical or environmental damage.

9. LIMITATION OF LIABILITY. TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT SHALL APPLE OR ANY CONTRIBUTOR BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR RELATING TO THIS LICENSE OR YOUR USE OR INABILITY TO USE THE COVERED CODE, OR ANY PORTION THEREOF, WHETHER UNDER A THEORY OF CONTRACT, WARRANTY, TORT (INCLUDING NEGLIGENCE), PRODUCTS LIABILITY OR OTHERWISE, EVEN IF APPLE OR SUCH CONTRIBUTOR HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES AND NOTWITHSTANDING THE FAILURE OF ESSENTIAL PURPOSE OF ANY REMEDY. SOME JURISDICTIONS DO NOT ALLOW THE LIMITATION OF LIABILITY OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THIS LIMITATION MAY NOT APPLY TO YOU. In no event shall Apple's total liability to You for all damages (other than as may be required by applicable law) under this License exceed the amount of fifty dollars (\$50.00).

10. Trademarks. This License does not grant any rights to use the trademarks or trade names "Apple", "Apple Computer", "Mac", "Mac OS", "QuickTime", "QuickTime Streaming Server" or any other trademarks, service marks, logos or trade names belonging to Apple (collectively "Apple Marks") or to any trademark, service mark, logo or trade name belonging to any Contributor. You agree not to use any Apple Marks in or as part of the name of products derived from the Original Code or to endorse or promote products derived from the Original Code other than as expressly permitted by and in strict compliance at all times with Apple's third party trademark usage guidelines which are posted at <http://www.apple.com/legal/guidelinesfor3rdparties.html>.

11. Ownership. Subject to the licenses granted under this License, each Contributor retains all rights, title and interest in and to any Modifications made by such Contributor. Apple retains all rights, title and interest in and to the Original Code and any Modifications made by or on behalf of Apple ("Apple Modifications"), and such Apple Modifications will not be automatically subject to this License. Apple may, at its sole discretion, choose to license such Apple Modifications under this License, or on different terms from those contained in this License or may choose not to license them at all.

12. Termination.

12.1 Termination. This License and the rights granted hereunder will terminate:

- (a) automatically without notice from Apple if You fail to comply with any term(s) of this License and fail to cure such breach within 30 days of becoming aware of such breach;
- (b) immediately in the event of the circumstances described in Section 13.5(b); or
- (c) automatically without notice from Apple if You, at any time during the term of this License, commence an action for patent infringement against Apple; provided that Apple did not first commence an action for patent infringement against You in that instance.

12.2 Effect of Termination. Upon termination, You agree to immediately stop any further use, reproduction, modification, sublicensing and distribution of the Covered Code. All sublicenses to the Covered Code which have been properly granted prior to termination shall survive any termination of this License. Provisions which, by their nature, should remain in effect beyond the termination of this License shall survive, including but not limited to Sections 3, 5, 8, 9, 10, 11, 12.2 and 13. No party will be liable to any other for compensation, indemnity or damages of any sort solely as a result of terminating this License in accordance with its terms, and termination of this License will be without prejudice to any other right or remedy of any party.

13. Miscellaneous.

13.1 Government End Users. The Covered Code is a "commercial item" as defined in FAR 2.101. Government software and technical data rights in the Covered Code include only those rights customarily provided to the public as defined in this License. This customary commercial license in technical data and software is provided in accordance with FAR 12.211 (Technical Data) and 12.212 (Computer Software) and, for Department of Defense purchases, DFAR 252.227-7015 (Technical Data - Commercial Items) and 227.7202-3 (Rights in Commercial Computer Software or Computer Software Documentation). Accordingly, all U.S. Government End Users acquire Covered Code with only those rights set forth herein.

13.2 Relationship of Parties. This License will not be construed as creating an agency, partnership, joint venture or any other form of legal association between or among You, Apple or any Contributor, and You will not represent to the contrary, whether expressly, by implication, appearance or otherwise.

13.3 Independent Development. Nothing in this License will impair Apple's right to acquire, license, develop, have others develop for it, market and/or distribute technology or products that perform the same or similar functions as, or otherwise compete with, Modifications, Larger Works, technology or products that You may develop, produce, market or distribute.

13.4 Waiver; Construction. Failure by Apple or any Contributor to enforce any provision of this License will not be deemed a waiver of future enforcement of that or any other provision. Any law or regulation which provides that the language of a contract shall be construed against the drafter will not apply to this License.

13.5 Severability. (a) If for any reason a court of competent jurisdiction finds any provision of this License, or portion thereof, to be unenforceable, that provision of the License will be enforced to the maximum extent permissible so as to effect the economic benefits and intent of the parties, and the

remainder of this License will continue in full force and effect. (b) Notwithstanding the foregoing, if applicable law prohibits or restricts You from fully and/or specifically complying with Sections 2 and/or 3 or prevents the enforceability of either of those Sections, this License will immediately terminate and You must immediately discontinue any use of the Covered Code and destroy all copies of it that are in your possession or control.

13.6 Dispute Resolution. Any litigation or other dispute resolution between You and Apple relating to this License shall take place in the Northern District of California, and You and Apple hereby consent to the personal jurisdiction of, and venue in, the state and federal courts within that District with respect to this License. The application of the United Nations Convention on Contracts for the International Sale of Goods is expressly excluded.

13.7 Entire Agreement; Governing Law. This License constitutes the entire agreement between the parties with respect to the subject matter hereof. This License shall be governed by the laws of the United States and the State of California, except that body of California law concerning conflicts of law.

Where You are located in the province of Quebec, Canada, the following clause applies: The parties hereby confirm that they have requested that this License and all related documents be drafted in English.

Les parties ont exigé que le présent contrat et tous les documents connexes soient rédigés en anglais.

EXHIBIT A.

"Portions Copyright © 1999-2003 Apple Computer, Inc. All Rights Reserved.

This file contains Original Code and/or Modifications of Original Code as defined in and that are subject to the Apple Public Source License Version 2.0 (the 'License'). You may not use this file except in compliance with the License. Please obtain a copy of the License at <http://www.opensource.apple.com/apsl/> and read it before using this file.

The Original Code and all software distributed under the License are distributed on an 'AS IS' basis, WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, AND APPLE HEREBY DISCLAIMS ALL SUCH WARRANTIES, INCLUDING WITHOUT LIMITATION, ANY WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, QUIET ENJOYMENT OR NON-INFRINGEMENT. Please see the License for the specific language governing rights and limitations under the License."

Info-ZIP copyright and license

This is version 2007-Mar-4 of the Info-ZIP license. The definitive version of this document should be available at <ftp://ftp.info-zip.org/pub/infozip/license.html> indefinitely and a copy at <http://www.info-zip.org/pub/infozip/license.html>.

Copyright © 1990-2007 Info-ZIP. All rights reserved.

For the purposes of this copyright and license, "Info-ZIP" is defined as the following set of individuals:

Mark Adler, John Bush, Karl Davis, Harald Denker, Jean-Michel Dubois, Jean-loup Gailly, Hunter Goatley, Ed Gordon, Ian Gorman, Chris Herborth, Dirk Haase, Greg Hartwig, Robert Heath, Jonathan Hudson, Paul Kienitz, David Kirschbaum, Johnny Lee, Onno van der Linden, Igor Mandrichenko, Steve P. Miller, Sergio Monesi, Keith Owens, George Petrov, Greg Roelofs, Kai Uwe Rommel, Steve Salisbury, Dave Smith, Steven M. Schweda, Christian Spieler, Cosmin Truta, Antoine Verheijen, Paul von Behren, Rich Wales, Mike White.

Permission is granted to anyone to use this software for any purpose, including commercial applications, and to alter it and redistribute it freely, subject to the above disclaimer and the following restrictions:

1. Redistributions of source code (in whole or in part) must retain the above copyright notice, definition, disclaimer, and this list of conditions.
2. Redistributions in binary form (compiled executables and libraries) must reproduce the above copyright notice, definition, disclaimer, and this list of conditions in documentation and/or other materials provided with the distribution. The sole exception to this condition is redistribution of a standard UnZipSFX binary (including SFXWiz) as part of a self-extracting archive; that is permitted without inclusion of this license, as long as the normal SFX banner has not been removed from the binary or disabled.
3. Altered versions--including, but not limited to, ports to new operating systems, existing ports with new graphical interfaces, versions with modified or added functionality, and dynamic, shared, or static library versions not from Info-ZIP--must be plainly marked as such and must not be misrepresented as being the original source or, if binaries, compiled from the original source. Such altered versions also must not be misrepresented as being Info-ZIP releases--including, but not limited to, labeling of the altered versions with the names "Info-ZIP" (or any variation thereof, including, but not limited to, different capitalizations), "Pocket UnZip," "WiZ" or "MacZip" without the explicit permission of Info-ZIP. Such altered versions are further prohibited from misrepresentative use of the Zip-Bugs or Info-ZIP e-mail addresses or the Info-ZIP URL(s), such as to imply Info-ZIP will provide support for the altered versions.
4. Info-ZIP retains the right to use the names "Info-ZIP," "Zip," "UnZip," "UnZipSFX," "WiZ," "Pocket UnZip," "Pocket Zip," and "MacZip" for its own source and binary releases.

Parent topic: [Notices](#)

Trademarks

EPSON® and SureColor® are registered trademarks, and EPSON Exceed Your Vision is a registered logomark of Seiko Epson Corporation.

Apple is a trademarks of Apple Inc., registered in the U.S. and other countries.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.



Parent topic: [Notices](#)

Copyright Notice

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. The information contained herein is designed only for use with this Epson product. Epson is not responsible for any use of this information as applied to other products.

Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.

Seiko Epson Corporation shall not be liable for any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.

Seiko Epson Corporation shall not be held liable for any damage resulting from electromagnetic interference that occurs from the use of any interface cables other than those designated as Epson approved Products by Seiko Epson Corporation.

This information is subject to change without notice.

[A Note Concerning Responsible Use of Copyrighted Materials](#)
[Copyright Attribution](#)

Parent topic: [Notices](#)

A Note Concerning Responsible Use of Copyrighted Materials

Epson encourages each user to be responsible and respectful of the copyright laws when using any Epson product. While some countries' laws permit limited copying or reuse of copyrighted material in

certain circumstances, those circumstances may not be as broad as some people assume. Contact your legal advisor for any questions regarding copyright law.

Parent topic: [Copyright Notice](#)

Copyright Attribution

© 2015 Epson America, Inc.

7/15

CPD-43460

Parent topic: [Copyright Notice](#)